

**UNITED Fire Systems**  
**STANDPIPE-PAC™**  
**STANDPIPE SUPERVISORY SYSTEM**  
MODEL SSS-100

**INSTRUCTIONS FOR USE**

1. WHEN **SIGNAL HORN** IS SOUNDING:

- FIRE STANDPIPE HAS BEEN IMPAIRED AND MAY BE UNUSABLE
- **IMMEDIATELY** NOTIFY NEW YORK CITY FIRE DEPARTMENT

**CALL 911 – ASK OPERATOR FOR FIRE DISPATCHER - ANNOUNCE THAT FIRE STANDPIPE AT LOCATION IS IMPAIRED**

- **STOP** ALL WORK ON SITE
- **INVESTIGATE** ENTIRE FIRE STANDPIPE SYSTEM TO DETERMINE CAUSE OF IMPAIRMENT
- SILENCE SIGNAL HORN BY OPENING CONTROL UNIT AND OPERATING “SILENCE” SWITCH

2. FOR FIRE DEPARTMENT USE OF FIRE STANDPIPE:

- OPEN MANUAL AIR RELEASE BLEED VALVE (ON EXTERIOR OF BUILDING, NEAR FIRE STANDPIPE SIAMESE CONNECTION)
- AIR SHOULD BLEED FROM FIRE STANDPIPE IN THREE (3) MINUTES OR LESS. SIGNAL HORN WILL SOUND
- CLOSE MANUAL AIR RELEASE BLEED VALVE BEFORE PUMPING INTO FIRE STANDPIPE

3. WHEN **TROUBLE** SIGNAL IS SOUNDING:

- SILENCE TROUBLE SIGNAL BY OPENING CONTROL UNIT AND OPERATING “ACKNOWLEDGE” SWITCH
- CALL FOR SERVICE

4. FOR SERVICE CALL: