

OPERATING INSTRUCTIONS



NORMAL Condition – User-defined custom message, date and time, and ALL SYSTEMS NORMAL on display; green POWER indicator ON; all other indicators OFF.

ALARM Condition – Zone or user-specified description, and “ALARM” displayed, with input type and input number on display; red ALARM LED flashing; audible / visual indicators ON.

To Silence Audible / Visual Signals: Silence signals only after condition that caused alarm is corrected. Open door; press SIGNAL SILENCE button.
(NOTE: If signals do not silence after pressing the SIGNAL SILENCE button, then water is flowing through the preaction sprinkler piping.)

To Reset ALARM: Open door; press RESET button.

TROUBLE Condition – Yellow SYSTEM TROUBLE LED flashing; internal panel buzzer ON. Display indicates specific circuit and trouble condition. Contact UNITED FIRE PROTECTION CORPORATION.

To Silence TROUBLE Signal: Open door; use UP / DOWN arrow keys to view, and ACK button to acknowledge all trouble conditions. The panel returns to NORMAL after correction of most trouble conditions.

To Clear TROUBLE: Contact UNITED FIRE PROTECTION CORPORATION for troubleshooting and repair.

SUPERVISORY Condition – Amber SUPERVISORY LED flashing; internal panel buzzer ON.

To Silence SUPERVISORY Signal: Open door; use UP / DOWN arrow keys to view, and ACK button to acknowledge all supervisory conditions.

To Reset SUPERVISORY Signal: Open door; press RESET button.

INSPECTION, TESTING, AND MAINTENANCE – This preaction sprinkler system requires periodic inspection, testing, and maintenance. Read the instruction manual contained in the lower enclosure door pocket, or contact UNITED Fire Systems for more information.

FOR SERVICE, CONTACT:
UNITED FIRE PROTECTION CORPORATION
1 Mark Road
Kenilworth NJ 07033 USA
Tel: 908-688-0300
www.unitedfireprotection.com

