



MODEL SSS-101 DESIGN, INSTALLATION, OPERATION, AND MAINTENANCE MANUAL

Serial Number _____

Date of Installation _____ Date of Commissioning _____

UNITED Fire Systems

Division of UNITED Fire Protection Corporation

1 Mark Road

Kenilworth, NJ USA 07033

908-688-0300

www.unitedfiresystems.net

Manual Part Number 10-540101-001

Revision 2.00

January 2019

(THIS SURFACE DELIBERATELY LEFT BLANK)

INDEX

| Section | Description | Page |
|-----------|---|------|
| | INDEX | i |
| | List Of Figures | ii |
| | List Of Tables | iii |
| | Safety Information | iii |
| | Foreword | iv |
| | Limited Warranty | v |
| | | |
| 1. | GENERAL INFORMATION | |
| 1.1 | System Purpose | 1 |
| 1.2 | Boston FD TCM3-51725 | 1 |
| 1.3 | Functional Description | 1 |
| | | |
| 2. | DESIGN | |
| 2.1 | Determining Internal Volume of Standpipe | 4 |
| 2.2 | Determining Desired Fill Time | 4 |
| 2.3 | Determining Proper STANDPIPE-PAC™ To Use | 5 |
| 2.4 | Example 1 | 6 |
| 2.5 | Example 2 | 7 |
| 2.6 | Options | 8 |
| 2.6.1 | Additional Audible Signals | 8 |
| 2.6.2 | Off-Site Signaling Via Dialer | 8 |
| | | |
| 3. | INSTALLATION | |
| 3.1 | Unpacking | 9 |
| 3.2 | Location | 9 |
| 3.2.1 | Temperature | 9 |
| 3.2.2 | Engineering Drawings (if available) | 9 |
| 3.2.3 | Proximity | 9 |
| 3.2.4 | Weight | 9 |
| 3.2.5 | Noise | 10 |
| 3.2.6 | Clearance | 10 |
| 3.3 | Installation | 10 |
| 3.3.1 | Mounting | 10 |
| 3.3.2 | Piping | 11 |
| 3.3.3 | Manual Air Release Bleed Valve | 11 |
| 3.3.4 | Auxiliary Condensate Drain Device | 12 |
| 3.3.5 | Electrical Installation | 13 |
| 3.3.5.1 | Codes | 13 |
| 3.3.5.2 | Personnel | 13 |
| 3.3.5.3 | Power Wiring | 13 |
| 3.3.5.4 | Battery Wiring | 14 |
| 3.3.5.5 | Signal Wiring | 15 |
| 3.3.6 | Optional Dialer Wiring | 21 |
| 3.4 | Commissioning | 21 |

| | | |
|------------|---|----|
| 3 | INSTALLATION (Continued) | |
| 3.4.1 | Required Supervisory Pressure | 21 |
| 3.4.2 | Startup | 22 |
| 3.4.3 | Testing | 23 |
| 3.4.4 | Placing In Service | 24 |
| 3.4.5 | Troubleshooting | 24 |
| | | |
| 4. | OPERATION | |
| 4.1 | Indicators | 29 |
| 4.2 | Controls | 29 |
| 4.3 | Indications | 30 |
| 4.3.1 | Normal Operation | 30 |
| 4.3.2 | Low Pressure In Standpipe | 30 |
| 4.3.3 | High Pressure in Standpipe | 31 |
| 4.4 | Procedures | 32 |
| 4.4.1 | Normal Operation | 32 |
| 4.4.2 | To Silence Piezo Sounder | 32 |
| 4.4.3 | To Silence Signal Horn(s) | 32 |
| 4.4.4 | For Fire Department Use Of Fire Standpipe | 32 |
| 4.4.5 | To Refill Standpipe With Air Pressure After Fire Department Use | 33 |
| 4.4.6 | To Test Standpipe with Water Pressure | 34 |
| | | |
| 5. | MAINTENANCE | 36 |
| 5.1 | Weekly | 37 |
| 5.2 | Monthly | 37 |
| 5.3 | Quarterly | 38 |
| | | |
| | APPENDICES | |
| Appendix A | Instructions – EPS10 Pressure Switch | |
| Appendix B | Instructions – EPS40 Pressure Switch | |
| Appendix C | Instructions – Desiccant Dryer Service | |
| Appendix D | Manual – 411UDAC Fire Alarm Communicator | |
| Appendix E | Instructions – General Air Compressor | |

LIST OF FIGURES

| Figure No. | Description | Page |
|------------|---|------|
| 1 | STANDPIPE-PAC™ Unit | 2 |
| 2 | Manual Air Release Bleed Valve | 3 |
| 3 | Remote Weatherproof Audible / Amber Visual Device | 3 |
| 4 | Auxiliary Condensate Drain Device | 3 |
| 5 | Estimating Standpipe Fill Time | 5 |
| 6 | Design Example 1 | 6 |
| 7 | Design Example 2 | 7 |
| 8 | Dimensions – STANDPIPE-PAC™ Unit | 10 |
| 9 | STANDPIPE-PAC™ Installation | 11 |
| 10 | Auxiliary Condensate Drain Device | 12 |

| | LIST OF FIGURES (continued) | |
|----|---|----|
| 11 | Battery Wiring | 14 |
| 12 | Wiring Diagram-Notification Appliance Circuit | 16 |
| 13 | Signal Horn Installation Steps | 17 |
| 14 | Required Supervisory Pressure | 21 |
| 15 | Desiccant Air Dryer | 39 |
| 16 | Compressor Filter | 40 |

LIST OF TABLES

| Table No. | Description | Page |
|------------------|---|-------------|
| 1 | Available STANDPIPE-PAC™ Units | 4 |
| 2 | Determining Internal Volume of Standpipe | 4 |
| 3 | Current Requirements – STANDPIPE-PAC™ Units | 13 |
| 4 | STANDPIPE-PAC™ Notification Appliance Circuit (NAC) Limitations and Other Parameters | 16 |
| 5 | Do's and Don'ts | 20 |

SAFETY INFORMATION

This manual contains safety information that is important to know and understand. This information is provided for the safety of installers, operators, and users of the UNITED Fire Systems **STANDPIPE-PAC™** equipment. Carefully read, understand, and follow instructions identified by these symbols.



The use of the word “DANGER” identifies an immediate hazard with a likelihood of death or serious personal injury if instructions, including recommended precautions, are not followed.



The use of the word “WARNING” identifies the presence of hazards or unsafe practices that could result in death, personal injury, or serious property damage if instructions, including recommended precautions, are not followed.



The use of the word “CAUTION” identifies possible hazards or unsafe practices that could result in personal injury or property damage if instructions, including recommended precautions, are not followed.



The use of the word “IMPORTANT” identifies special instructions, not related to hazards, that should be followed.

FOREWORD

This manual is written for those who install, operate and maintain UNITED Fire Systems **STANDPIPE-PAC™** standpipe supervisory systems. The manual contains installation, operation, and maintenance information for the system. This manual must be read thoroughly and completely understood before installation and operation of UNITED Fire Systems **STANDPIPE-PAC™** equipment. All appropriate safety standards as determined by local or national laws and regulations should be followed at all times. When handling, installing, or operating this equipment, personnel must employ safe engineering practices and observe all related local regulations, health, and safety procedures, and legal requirements for safety. Ensure that the equipment is depressurized and electrically isolated before carrying out any of the scheduled maintenance instructions specified in this manual.



WARNING

DO NOT install, operate, or maintain unit if damage has occurred during shipping, handling, or use. Contact UNITED Fire Systems immediately. Failure to do so could result in death, personal injury, or serious property damage.



CAUTION

Read all of the safety information in this manual before installing, operating, or maintaining this equipment. Use of the equipment in a manner not specified within this manual may impair the protection provided by this equipment and could result in serious injury or damage. Only competent personnel should perform installation, operation, and maintenance procedures.



IMPORTANT

UNITED Fire Systems assumes no responsibility for the installation, operation, or maintenance of any systems other than those addressed in this manual. The data contained in this manual is for information purposes only. UNITED Fire Systems believes this data to be accurate at the time of publication, but the data is published and presented without any guarantee or warranty whatsoever. UNITED Fire Systems disclaims any liability for any use that may be made of the data and information contained in this manual by any and all parties.



IMPORTANT

The UNITED Fire Systems **STANDPIPE-PAC™** standpipe supervisory system is a vital part of the fire protection of any facility where these units are installed. Life safety and property protection depends on continuing proper operation of the assembly. The owner of the **STANDPIPE-PAC™** is responsible for the condition of the assembly and its continued proper operation. UNITED Fire Systems strongly recommends that all owners of **STANDPIPE-PAC™** systems engage the services of qualified, trained fire protection professionals to design the system containing the assembly, and to install and maintain the assembly.

UNITED Fire Systems **STANDPIPE-PAC™** standpipe supervisory systems are to be installed, operated, and maintained by qualified, trained personnel in accordance with:

- This Installation, Operation, and Maintenance Manual P/N 10-540101-001 Revision 2.00.
- National Fire Protection Association No. 14, "Standard for the Installation of Standpipe and Hose Systems."
- National Fire Protection Association No. 25, "Standard for the Inspection, Testing, and Maintenance of Water-Based Fire Protection Systems."
- National Fire Protection Association No. 70, "National Electrical Code®".

Any questions on the information in this manual should be addressed to:

UNITED Fire Systems, Division of United Fire Protection Corporation
1 Mark Road, Kenilworth, NJ USA 07033
908-688-0300 www.unitedfiresystems.net

LIMITED WARRANTY STANDPIPE-PAC™

What Does This Warranty Cover?

This warranty covers all manufacturing defects in material and workmanship in your new **STANDPIPE-PAC™**.

How Long Does The Coverage Last?

This warranty lasts for ninety (90) days from the date of shipment to the original purchaser.

What Will UNITED Fire Systems Do?

UNITED Fire Systems will repair, replace, or refund the purchase price of, at its option, any defective **STANDPIPE-PAC™** at no charge.

What Does This Warranty Not Cover?

STANDPIPE-PAC™s that have NOT been commissioned by UNITED Fire Systems or a trained distributor are not covered under this warranty. If you modify, change, or alter your **STANDPIPE-PAC™** without instructions from UNITED Fire Systems, the **STANDPIPE-PAC™** is not covered. If you break tamper seals applied by UNITED Fire Systems, the sealed parts are not covered. Any problem that is caused by abuse, misuse, or an act of God (such as a flood) is not covered. Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How Do You Obtain Service?

In order to be eligible for service under this warranty, your **STANDPIPE-PAC™** must have been commissioned by UNITED Fire Systems or a trained distributor. If something goes wrong with your **STANDPIPE-PAC™**, contact:

UNITED Fire Systems
Division of UNITED Fire Protection Corporation
1 Mark Road
Kenilworth, NJ 07033 USA
Phone: 908-688-0300
Fax: 908-481-1131

= OR =

Your
Trained
Distributor

UNITED Fire Systems or your trained distributor will contact you within 24 hours to arrange for evaluation of your **STANDPIPE-PAC™**.

Is This Warranty Transferable?

If the **STANDPIPE-PAC™** is moved from one to another installation during the time period of warranty coverage, the **STANDPIPE-PAC™** must be re-commissioned by UNITED Fire Systems or your trained distributor to be eligible for continuing coverage. You must pay a quoted charge for this re-commissioning.

Is This The Entire Warranty?

This limited warranty is the entire warranty given by UNITED Fire Systems to the purchaser of a new **STANDPIPE-PAC™**. There are no other warranties expressed or implied, beyond those required by law.

How Do State and Federal Laws Apply?

This warranty gives you specific legal rights per Federal law. You may also have other rights which vary from state to state.

1. GENERAL INFORMATION

1.1. System Purpose. The UNITED Fire Systems **STANDPIPE-PAC™** Model SSS-101 Standpipe Supervisory System is a fully assembled standpipe supervisory system, including compressor, switches, alarm, and control unit providing one complete zone of standpipe supervision in compliance with Boston FD TCM3-51725. All components are mounted on a sturdy wooden backboard, suitable for hanging at a construction or demolition site.

1.2. Boston FD TCM3-51725

Boston FD TCM3-51725 was implemented in response to serious difficulties encountered when fire standpipes at construction and demolition sites were damaged, rendering the standpipes unsuitable for fire department use. The directive requires that all fire standpipes in vacant buildings, buildings undergoing demolition, and required permanent or temporary standpipes in buildings under construction be equipped with a system to pressurize the standpipe at all times, which then would sense the pressure loss if a portion of the standpipe was damaged or completely removed. Detailed requirements for the system are specified in the directive. **STANDPIPE-PAC™** has been designed to aid in compliance with the requirements in Boston FD TCM3-51725. **IMPORTANT:** Boston FD TCM3-51725 requires that an application to install an air pressurized alarm system be filed by a registered design professional, and a permit obtained by a licensed sprinkler contractor. A licensed electrician shall obtain all required electrical permits. Install **STANDPIPE-PAC™** after application is made and accepted, and all permits received. To review Boston FD TCM3-51725 in its entirety, go to: www.unitedfiresystems.net.

1.3. Functional Description. See Figures 1, 2, 3, and 4. **STANDPIPE-PAC™** consists of the following:

- (1) Air compressor with automatic control switch. The air compressor compresses atmospheric air for pressurizing the standpipe. The automatic control switch starts the compressor when the pressure is below 13 PSIG, and stops the compressor when the pressure exceeds 18 PSIG.
- (2) Desiccant air dryer. The desiccant air dryer dries the compressed air before entry into the standpipe, as required by Boston FD TCM3-51725.
- (3) Low-limit pressure sensing switch. This switch senses when the pressure in the standpipe drops below 7 PSIG, as would happen if a standpipe valve was inadvertently opened, or a portion of the piping was inadvertently removed. This switch sends its signal to the control unit (8).
- (4) High-limit pressure sensing switch. This switch senses when the pressure in the standpipe exceeds 23 PSIG, as may happen if the automatic control switch on the air compressor (1) fails. This switch sends its signal to the control unit (8).
- (5) Pressure gauge. The pressure gauge indicates the approximate pressure in the system in PSIG.
- (6) Check valve. The check valve prevents entry of water into the **STANDPIPE-PAC™** when the Fire Department pumps water into the standpipe. This device is required by Boston FD TCM3-51725.
- (7) Lockable shutoff valve. This valve permits maintenance on the **STANDPIPE-PAC™** without de-pressurizing the entire standpipe. This device is required by Boston FD TCM3-51725, and per this directive, shall be locked in the OPEN position.
- (8) Control unit with power supply, backup battery, silence switch, and automatic dialer. The control unit accepts the signals from the pressure sensing switches (4) and (5), and operates the signal horn (9). The silence switch allows the signal horn (9) to be silenced. The power supply is dedicated to the system as required by Boston FD TCM3-51725, and provides for backup battery power for the control unit. This device also provides an automatic dialer for connection of telephone lines for off-site notification.
- (9) A signal horn. Additional signal horns may be connected so that signaling may be heard throughout the site.
- (10) A junction box for connection of 120 VAC, 60 Hz, single phase power for both the air compressor (1) and the control unit (8). Connection of 120VAC 60 Hz single phase in this box provides power for both the air compressor (1) and the control unit (10).
- (11) An outlet for connection of piping to the dry standpipe. 1/2" NPT pipe (provided by installer) is run from the outlet to a connection point on the standpipe.
- (12) A disconnect switch to remove power from the air compressor (1). This switch facilitates testing and maintenance of the system.
- (13) A test / service device. See instructions in this manual for use of this device.
- (14) A serial number nameplate.

UNITED FIRE SYSTEMS
 STANDPIPE-PAC™ MODEL SSS-101
 INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
 REVISION 2.00
 P/N 10-540101-001

- (15) A manual air release bleed valve for Fire Department use. This device is to be installed near the siamese connection feeding the standpipe. A cap and chain is provided to protect the outlet. An instruction nameplate is also provided. This nameplate is to be securely fastened near the valve.
- (16) A remote weatherproof audible / amber visual device with weatherproof backbox and identification nameplate. This device is required by Boston FD TCM3-51725. The installer must locate this device immediately outside the location of the **STANDPIPE-PAC™**, and wire the device in accordance with the instructions in this manual.
- (17) An auxiliary condensate drain device. This device permits manual draining of water in the piping near the **STANDPIPE-PAC™** unit, to help prevent water entry into the unit and pipe blockage without removing all air from the standpipe. (Figure 4)

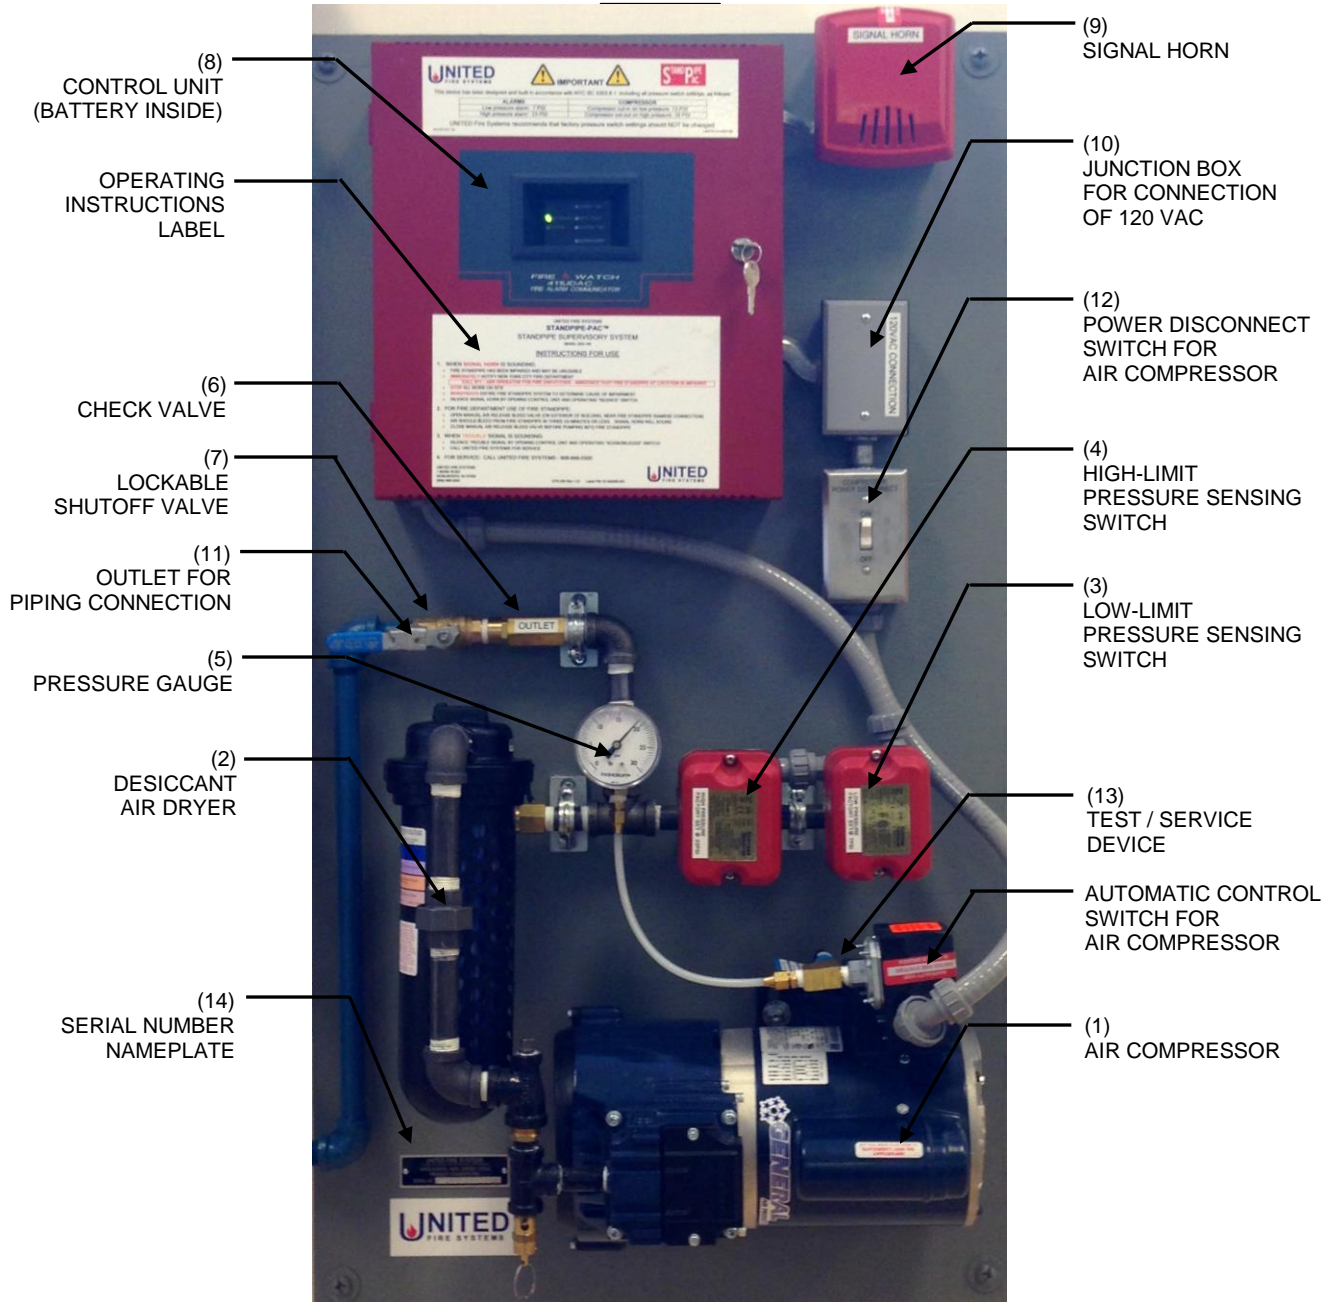


Figure 1 – **STANDPIPE-PAC™** Unit

UNITED FIRE SYSTEMS
 STANDPIPE-PAC™ MODEL SSS-101
 INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
 REVISION 2.00
 P/N 10-540101-001

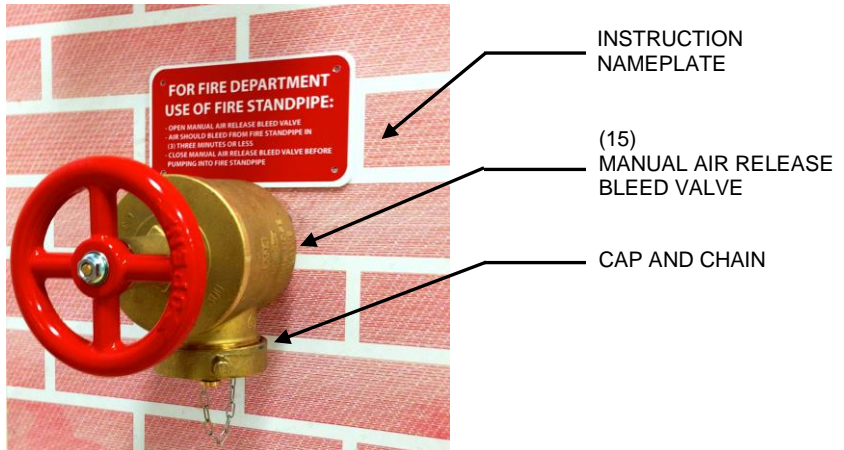


Figure 2 – Manual Air Release Bleed Valve



Figure 3 – Remote Weatherproof Audible / Amber Visual Device with Weatherproof Backbox

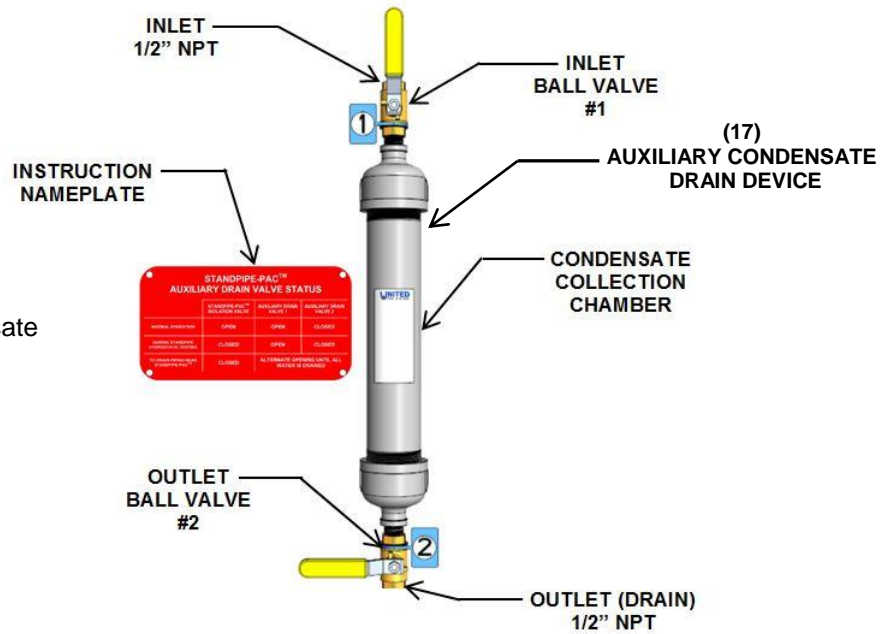


Figure 4 – Auxiliary Condensate Drain Device

2. DESIGN. The specific **STANDPIPE-PAC™** to use is chosen based on the internal volume of the standpipe to be protected, and the desired fill time. See Table 1. Four (4) different units are available, based on compressor size.

| STANDPIPE-PAC™ Part Number | Compressor Size, HP |
|----------------------------|---------------------|
| SSS-101-16 | 1/6 |
| SSS-101-13 | 1/3 |
| SSS-101-12 | 1/2 |
| SSS-101-34 | 3/4 |

Table 1 – Available **STANDPIPE-PAC™** Units

2.1. Determining Internal Volume of Standpipe. See Table 2. The internal volume of the standpipe, in gallons, is determined by multiplying the length of each pipe, by size, by the internal volume per foot, in gallons.

| Nominal Pipe Size | Pipe Length in Feet | | Gallons per Foot | Gallons |
|-------------------|---------------------|---|------------------|---------|
| 1-1/2" | | X | 0.106 | |
| 2" | | X | 0.174 | |
| 2-1/2" | | X | 0.248 | |
| 3" | | X | 0.383 | |
| 4" | | X | 0.660 | |
| 6" | | X | 1.500 | |
| 8" | | X | 2.600 | |
| Other | | X | | |
| | | | TOTAL = | |

Table 2 – Determining Internal Volume of Standpipe

2.2. Determining Desired Fill Time. Per Boston FD TCM3-51725, any impairment lasting 4 hours or more requires shutdown of the construction / demolition site and notification to the Boston Fire Department. The usual criterion is to fill / refill the standpipe in less than 4 hours, with margin for work performed for construction / demolition. NOTE: The NFPA 13 sprinkler system rule of 30 minutes "fast-fill" DOES NOT apply to standpipes.

2.3. Determining Proper STANDPIPE-PAC™ To Use. See Figure 5.

- 2.3.1.** Find the desired fill time at the bottom of the graph.
- 2.3.2.** Find the standpipe internal volume at the left of the graph.
- 2.3.3.** Determine the intersection of the lines from these two values.
- 2.3.4.** Choose the next-highest compressor horsepower.
- 2.3.5.** Determine the P/N of the appropriate **STANDPIPE-PAC™** from Table 1.

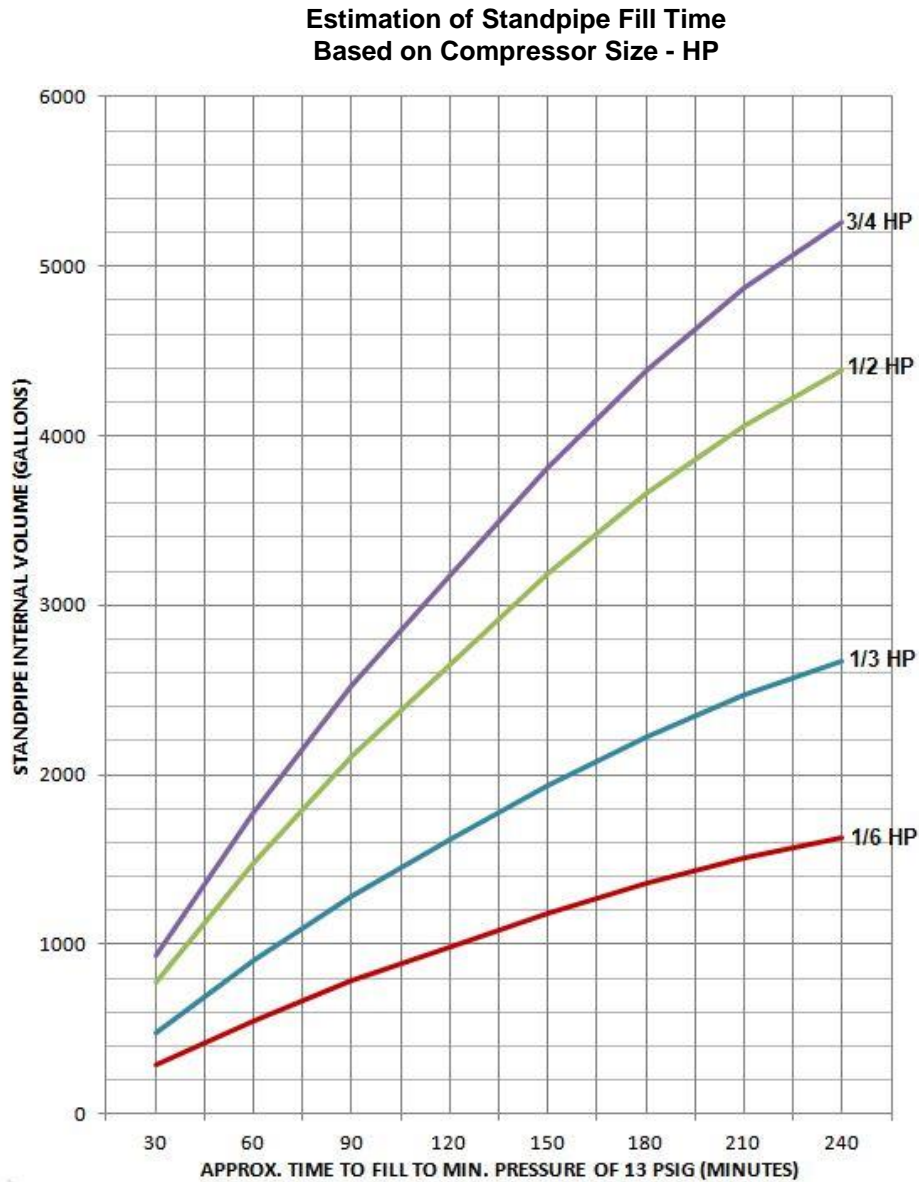


Figure 5 – Estimating Standpipe Fill Time

2.4. Example 1.

| Nominal Pipe Size | Pipe Length in Feet | | Gallons per Foot | Gallons |
|-------------------|---------------------|---|------------------|--------------|
| 6" | 750 | X | 1.500 | 1125 |
| | | | TOTAL = | 1125 gallons |

Required work can be performed in 1/2 hour (30 minutes), so a fill time of 1-1/2 hours (90 minutes) is satisfactory

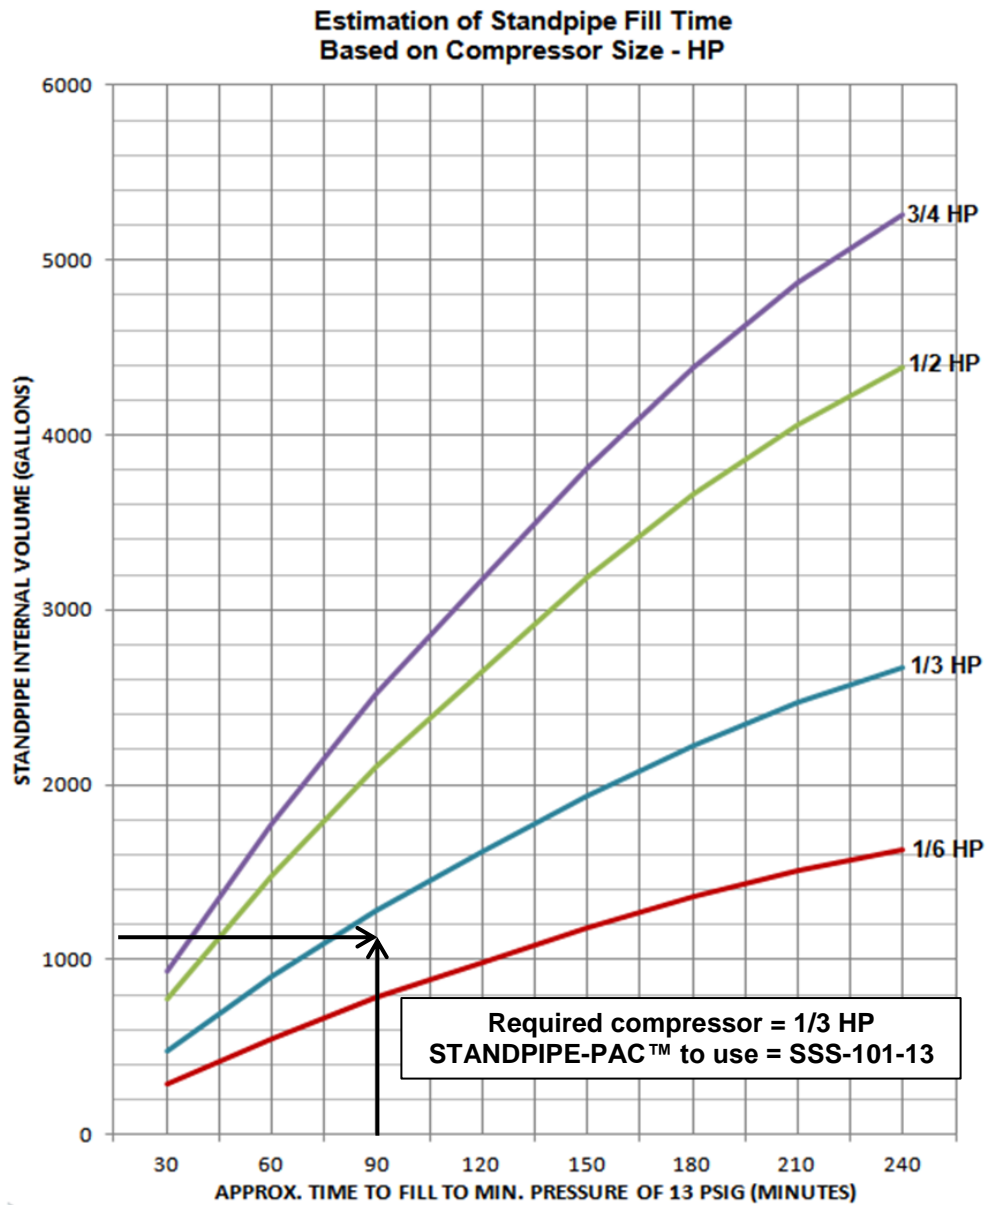


Figure 6 – Design Example 1

2.5. Example 2.

| Nominal Pipe Size | Pipe Length in Feet | | Gallons per Foot | Gallons |
|-------------------|---------------------|---|------------------|--------------|
| 2" | 80 | X | 0.174 | 14 |
| 6" | 100 | X | 1.500 | 150 |
| 8" | 550 | X | 2.600 | 1430 |
| | | | TOTAL = | 1594 gallons |

Fill time of 1 hour (60 minutes) required.

Estimation of Standpipe Fill Time Based on Compressor Size - HP

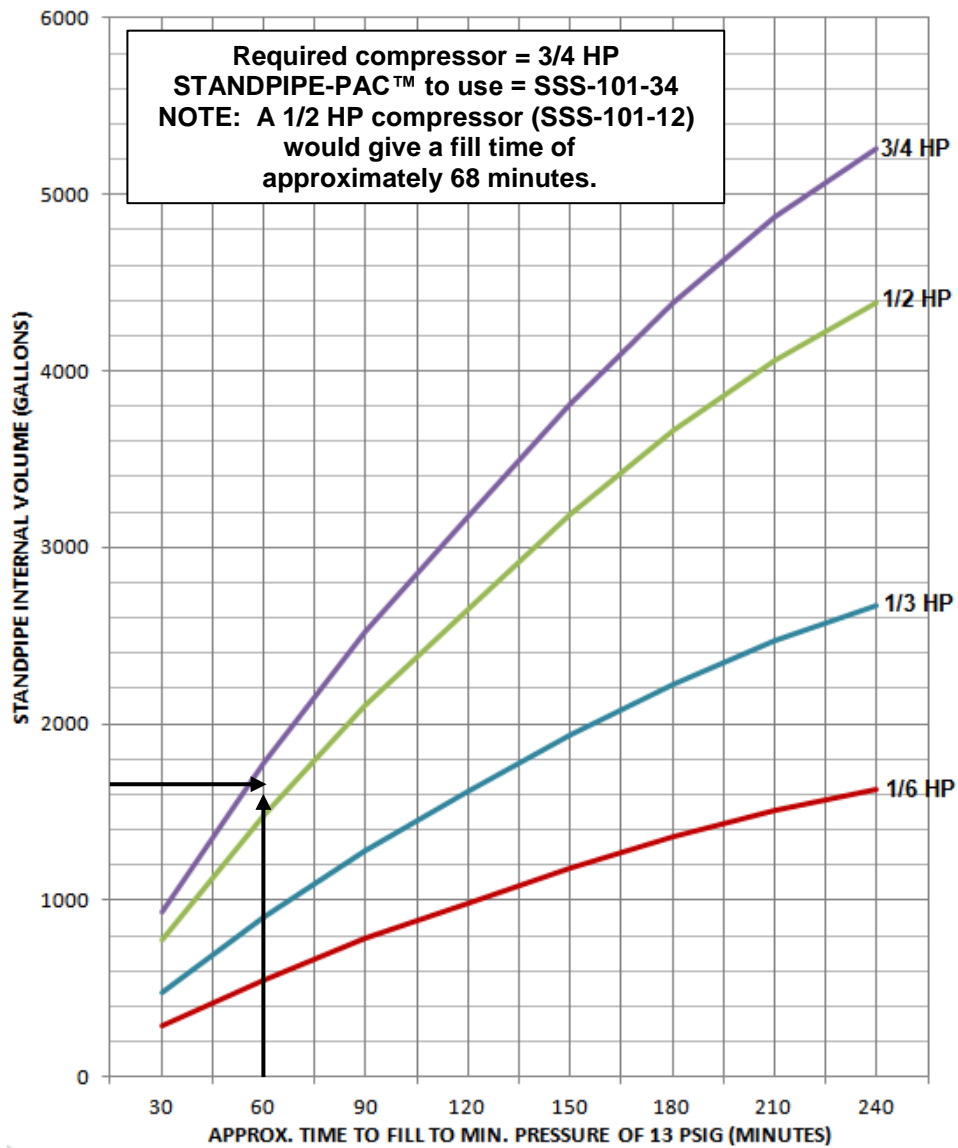


Figure 7 – Design Example 2

2.6. Options.

2.6.1. Additional Audible Signals. Additional audible signals can be added to the Notification Appliance Circuit (NAC) of the **STANDPIPE-PAC™** unit to permit hearing the alarm throughout the facility. Consult Appendix A of this manual for further information. See Paragraph 3.3.5.5 for installation instructions.



IMPORTANT

Signals from the **STANDPIPE-PAC™** unit are NOT fire alarm signals. UNITED Fire Systems recommends that all devices connected to the Notification Appliance Circuit (NAC) of the **STANDPIPE-PAC™** unit be clearly differentiated from any fire alarm signals present in the building.

2.6.2. Off-Site Signaling Via Dialer. The **STANDPIPE-PAC™** control unit is equipped with a built-in dialer for off-site signal notification. See Appendix D for proper hookup of telephone lines for this purpose.

3. INSTALLATION

3.1. Unpacking. Check shipment of the UNITED Fire Systems **STANDPIPE-PAC™** system for damage. If there is any damage or missing parts, the transportation company's agent should make a notation to the effect on the Bill of Lading. Claims should be settled directly with the transportation company. Verify that all parts were received in the shipment as ordered. Contact the factory immediately if there are any missing parts or discrepancies. The following items should be with the shipment:

- **STANDPIPE-PAC™** unit – P/N SSS-101-XX (XX = compressor size)
- Manual air release bleed valve – P/N 06-100004-000
- Cap and chain for manual air release bleed valve – P/N 06-100004-001
- Nameplate for manual air release bleed valve – P/N 10-440001-001
- Standby battery (12 VDC 7.5 A-H) for control unit – P/N 03-100005-001
- Weatherproof audible / amber visual device – P/N 03-100006-101 with amber lens attached.
- Identification nameplate for audible / amber visual device – P/N 03-100008-101
- Design, installation, operation, and maintenance manual – P/N 10-540000-001.
- Auxiliary condensate drain device kit – P/N 10-220000-100



CAUTION

Understand and follow all safety recommendations when moving heavy pieces of equipment. Equipment may be easily tipped over when moving. Failure to use caution can result in equipment damage and personal injury.

3.2. Location. Due consideration must be given to all of the following considerations when locating the **STANDPIPE-PAC™** unit.

3.2.1. Temperature.



IMPORTANT

The **STANDPIPE-PAC™** assembly is designed for use in areas where the temperature DOES NOT drop below +32°F (0° C). DO NOT install **STANDPIPE-PAC™** units in areas where the temperature can go below +32°F (0° C). Failure to comply can result in unit malfunction and damage which is NOT covered by the warranty.

Ensure that the **STANDPIPE-PAC™** unit is installed in a location that will not drop below +32°F (0° C) at any time. This may be accomplished by:

- Choosing a location that will be supplied with building heat during cold weather, or;
- Providing a space heater in the vicinity of the unit when cold weather is expected.

3.2.2. Engineering Drawings (if available). If a survey was conducted, and engineering drawings prepared, locate all equipment per these drawings.

3.2.3. Proximity. The **STANDPIPE-PAC™** unit should be installed in reasonably close proximity to the standpipe being protected. The most logical location is in the same room as the riser. If necessary, the device may be installed remotely. Documentation and signage should be clear to identify which equipment in remote locations is connected together.

3.2.4. Weight. Ensure that the mounting surface is capable of supporting the weight of the **STANDPIPE-PAC™** unit, with a clear safety margin. Consult a structural engineer when necessary to verify suitability of location.

3.2.5. Noise. The **STANDPIPE-PAC™** unit does emit noise when running. Consideration should be given to locating equipment where normal operating noise does not interfere with building operations.

3.2.6. Clearance. Sufficient clearance should be available after installation for maintenance operations to take place. Leave at least (3) feet of clearance for personnel to access equipment for maintenance.

3.3. Installation.

3.3.1. Mounting. See Figure 8. Mount the **STANDPIPE-PAC™** in the chosen mounting location.

- It is strongly recommended that the unit be mounted on a wall.
- The unit weighs approximately 86 lbs. Choose a wall with construction capable of supporting this weight, with a reasonable safety margin.
- Use good standard practice and appropriate fasteners.
- The back board may be drilled as needed for mounting. Do not drill holes too close to corners.
- Leave a minimum of 3 feet of clearance in front of unit for personnel to perform maintenance.

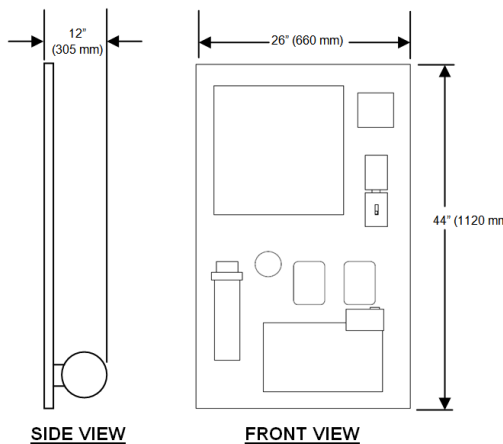


Figure 8 – Dimensions – **STANDPIPE-PAC™** Unit

3.3.2. Piping. See Figure 9. The piping in **BLUE** is to be installed by the **STANDPIPE-PAC™** system installer. Use Sch. 40 black pipe and Class 150 fittings. The tee to connect the **STANDPIPE-PAC™** shall be located after the check valve, and should be located before the drain valve. Connect 1/2" pipe to point labeled **OUTLET** on **STANDPIPE-PAC™** unit. Ensure that the standpipe is **NOT PRESSURIZED** prior to cutting in the tee at the installation location.

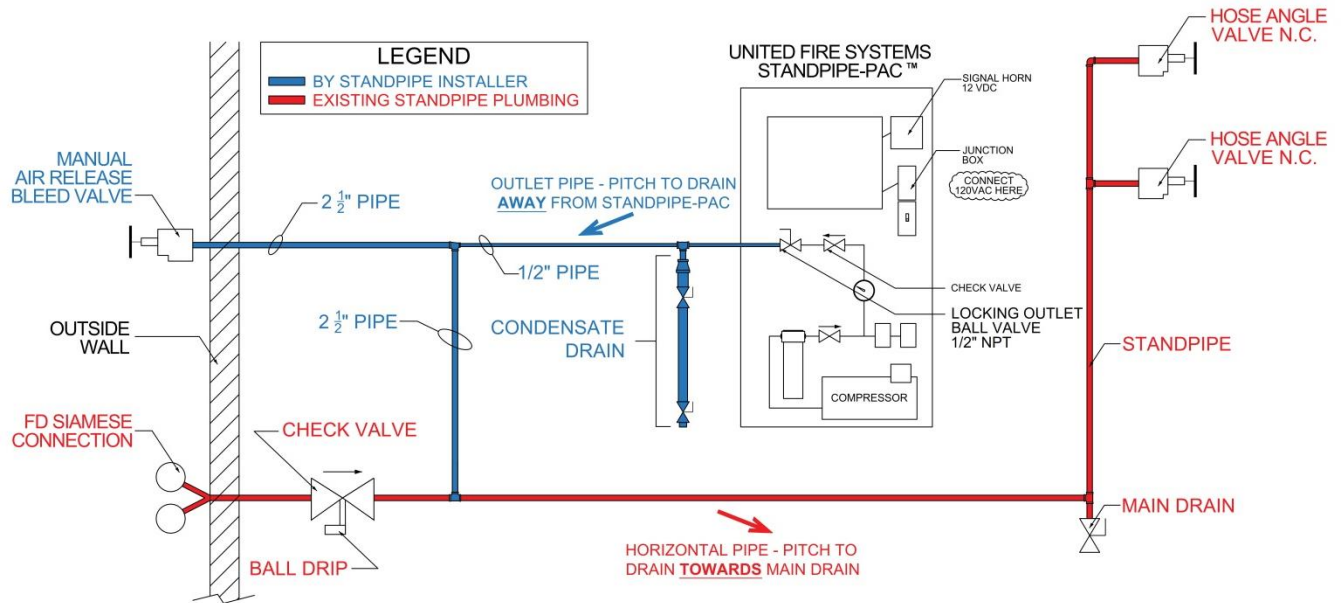


Figure 9 – **STANDPIPE-PAC™** Installation

All dry standpipes should always be maintained as dry as possible. This is to minimize internal corrosion year round, as well as to minimize ice accumulation and blockage during cold weather.

To facilitate drainage, the low point of the standpipe must have a main drain valve, and all pipe should be pitched towards that main drain valve. The main drain valve should be opened on a regular basis, permitting any water accumulation or pooled water from testing to drain.

Dry standpipes installed with supervisory systems shall be installed per Figure 9 above. The diagram indicates several important facts:

1. Where possible, the **STANDPIPE-PAC™** should NOT be the low point of the dry standpipe system.
2. The piping from the **STANDPIPE-PAC™** should be pitched away from the **STANDPIPE-PAC™** so that accumulated water drains away from the **STANDPIPE-PAC™** outlet.
3. Install the Auxiliary Condensate Drain Device where shown on Figure 10, per 3.3.4.



CAUTION

Failure to confirm that the standpipe is **NOT** pressurized could result in personal injury and / or property damage.

3.3.3. Manual Air Release Bleed Valve. See Figure 2. Locate the manual air release bleed valve on the exterior of the building in proximity to the fire department siamese connection feeding the standpipe protected by the **STANDPIPE-PAC™**. Attach the cap and chain to the valve. Secure the provided nameplate to the building or the valve so that the fire department can clearly identify the purpose of the valve and follow the instructions on the nameplate.

3.3.4. Auxiliary Condensate Drain Device



IMPORTANT



The Auxiliary Condensate Drain Device does NOT take the place of a standpipe system main drain. Ensure that a main drain valve is properly installed at the lowest point of the standpipe, in an accessible area, where all the water from the standpipe may be properly drained.

1. Determine the installation location of the Auxiliary Condensate Drain Device:
 - a. Locate the device in close proximity to the outlet of the **STANDPIPE-PAC™**.
 - b. The location of the **STANDPIPE-PAC™** and the Auxiliary Condensate Drain Device MUST be in an area protected from freezing temperatures (over +32°F (0° C)).
 - c. The device MUST be installed vertically – see Figure 9 and Figure 10.
 - d. No separate bracket is necessary – the inlet piping connection should be satisfactory to hold the device in place.
2. Remove and discard plastic plug from device inlet (Valve 1).
3. See Figure 10. Attach a ½ inch close pipe nipple and the bull of a ½ inch pipe tee to device inlet. (Valve 1)
4. Install a convenient length of ½ inch threaded pipe between the outlet of the **STANDPIPE-PAC™** and the run of the tee attached to the device inlet.
5. See Figure 10. Connect ½ inch pipe to the remaining run of the tee attached to the device and the inlet to the dry standpipe. Pitch the pipe to drain away from the device.
6. See Figure 4. Attach Instruction Nameplate to wall in close proximity to device.

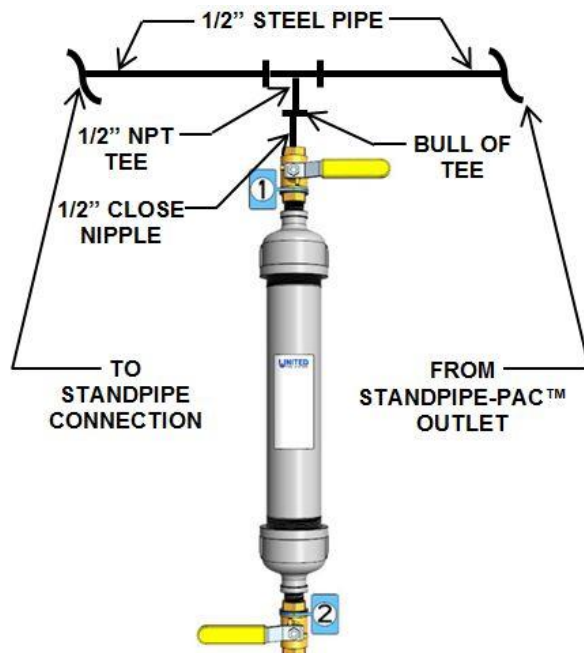


Figure 10 – Auxiliary Condensate Drain Device

3.3.5. Electrical Installation.



Voltages and currents associated with **STANDPIPE-PAC™** units are **LETHAL**. Follow all instructions provided. Work on **STANDPIPE-PAC™** unit power **MUST** be performed **ONLY** by qualified individuals. All required precautions to prevent contact with live electrical conductors and equipment **MUST** be taken. Failure to comply with these instructions is an immediate hazard with a likelihood of death or serious personal injury!

3.3.5.1. Codes. All **STANDPIPE-PAC™** wiring and wiring methods shall be in strict compliance with NEC and local codes.

3.3.5.2. Personnel. All wiring shall be performed by licensed electricians.

| Part No. | Compressor Motor And Control Unit Voltage (V) / Phase Frequency (Hz) | Compressor Motor Horsepower (HP) | Compressor Motor Current (A) | Control Unit Current (A) | STANDPIPE-PAC™ Total Current (A) |
|------------|--|---|---------------------------------------|-----------------------------------|--|
| SSS-101-16 | 115 / 1 / 60 | 1/6 | 6.6 | 0.7 | 7.3 |
| SSS-101-13 | 115 / 1 / 60 | 1/3 | 6.6 | 0.7 | 7.3 |
| SSS-101-12 | 115 / 1 / 60 | 1/2 | 8.0 | 0.7 | 8.7 |
| SSS-101-34 | 115 / 1 / 60 | 3/4 | 10.6 | 0.7 | 11.3 |

Table 3 – Current Requirements – **STANDPIPE-PAC™** Units

3.3.5.3. Power Wiring. See Table 3. Choose minimum conductor sizes and overcurrent protective device based on total current shown in table. Connect power in junction box provided for the purpose – see Figure 1. When connecting power, ensure circuit breaker is OFF. Do not turn on circuit breaker until installation is complete and system is ready for commissioning.

UNITED FIRE SYSTEMS
 STANDPIPE-PAC™ MODEL SSS-101
 DESIGN, INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
 REVISION 2.00
 P/N 10-540101-001

3.3.5.4. Battery Wiring. See Figure 11. **DO NOT** connect battery until commissioning.

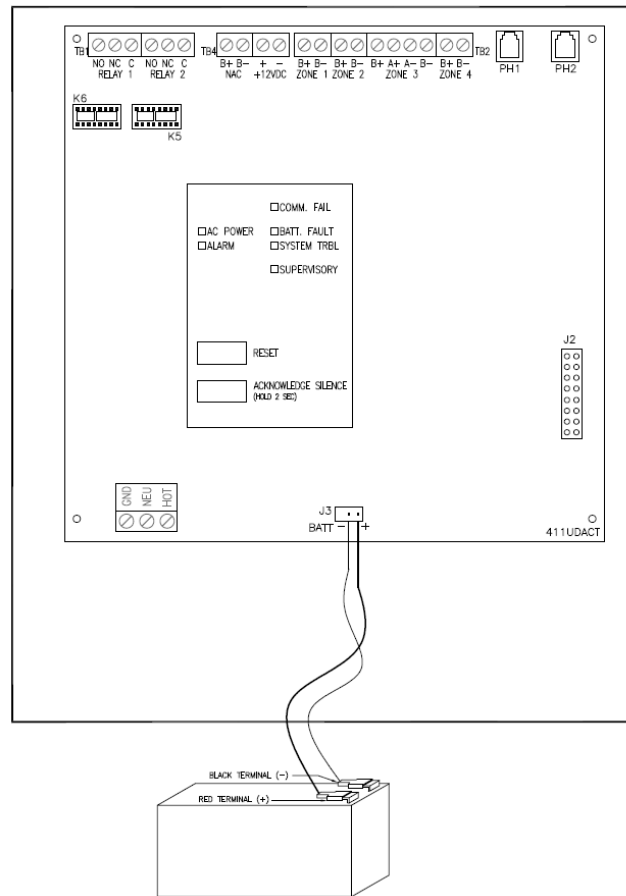


Figure 11 – Battery Wiring

3.3.5.5. Signal Wiring.



IMPORTANT

REFER TO THESE INSTRUCTIONS BEFORE WIRING SIGNAL DEVICES.

NOTICE

UNITED Fire Systems strongly recommends that optional signal wiring be installed by a qualified electrician who is familiar with low-voltage DC signal wiring, preferably experienced with fire alarm notification appliance circuits (NACs).

3.3.5.5.1 Signal Wiring. See Figure 12.

3.3.5.5.2 Factory-Installed Signal Horn. An audible signal horn is factory-installed and wired to the notification appliance circuit of the **STANDPIPE-PAC™** unit. See **GREEN** section of Figure 12.

3.3.5.5.3 Required Remote Weatherproof Audible / Amber Visual Device. Per Boston FD TCM3-51725, a remote weatherproof audible / amber visual device is to be installed immediately outside the location of the **STANDPIPE-PAC™** unit. Wire and connect this device as shown. If this is the last device in line, re-locate the end-of line resistor from the factory-installed signal horn to this device. See **RED** section of Figure 12. Mount identification nameplate near device.

3.3.5.5.4. Optional Signaling Devices. If additional audible devices are desired, connect these devices to the notification appliance circuit serving the signal horn on the **STANDPIPE-PAC™** unit. See Appendix D for additional information, including power capacity of notification appliance circuit. See **BLUE** section of Figure 12. Additional horns are available from UNITED Fire Systems – P/N 03-100006-201.



IMPORTANT

While Boston FD TCM3-51725 requires that the signal device immediately outside the location of the **STANDPIPE-PAC™** unit be audible and visual, additional signal devices should be audible ONLY. Visual indicators, such as strobes, can easily be mistaken for fire alarm signal devices. Signals from the **STANDPIPE-PAC™** unit are NOT fire alarm signals

UNITED FIRE SYSTEMS
 STANDPIPE-PAC™ MODEL SSS-101
 DESIGN, INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
 REVISION 2.00
 P/N 10-540101-001

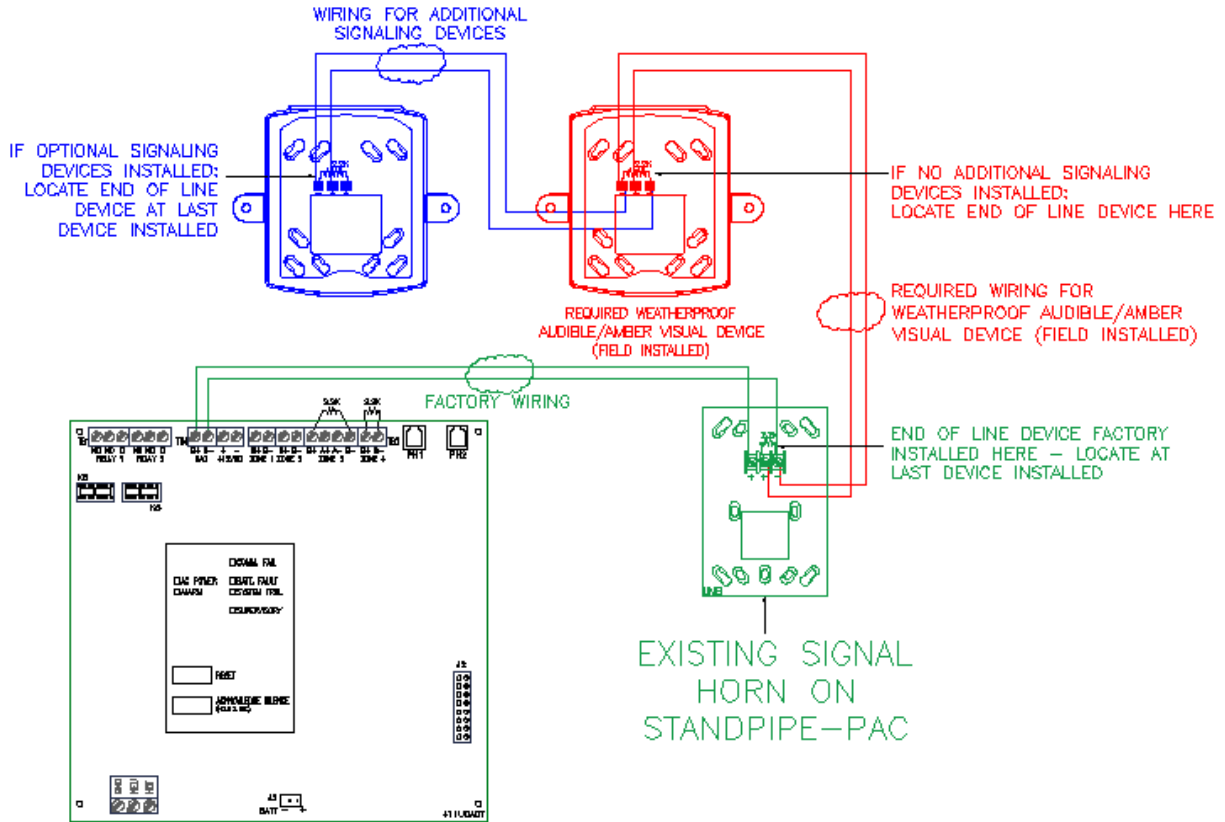


Figure 12 – Wiring Diagram – Notification Appliance Circuit

| | |
|--|---|
| Nominal Operating Voltage | 13.8 VDC |
| Required Device Voltage Rating | 12 VDC (NOT 24 VDC or 110 VAC) |
| Maximum Number of Signal Horns | (1) factory-installed signal horn (1) required audible / visual device PLUS (9) optional signal horns |
| Maximum Current Draw FOR ALL external Signal Horns (INCLUDING required external audible / visual device) (NOT including factory-installed signal horn) | 1.0 A |
| Maximum Length Of Notification Appliance Circuit (from factory-installed signal horn to last signal horn on the NAC) | 375 feet |
| Minimum Recommended Wire Gauge | 14 AWG Solid |
| Recommended Wire Insulation Colors For Polarity Identification | RED for positive (+) |
| | GRAY or BLACK for negative (-) |
| End-Of- Line Resistor (UFS P/N 03-100005-102) | 2.2K ohms |

Table 4 - **STANDPIPE-PAC™** Notification Appliance Circuit (NAC)
 Limitations and Other Parameters

STEP-BY-STEP GUIDE TO INSTALLING ADDITIONAL SIGNAL HORNS TO STANDPIPE-PAC™

1. Ensure that the **STANDPIPE-PAC™** control unit has **NOT** been powered up, with AC power and batteries disconnected.
2. See **Figure 13** and **Figure 13.1**. Remove Signal Horn cover from factory installed Signal Horn assembly on **STANDPIPE-PAC™**.



Figure 13

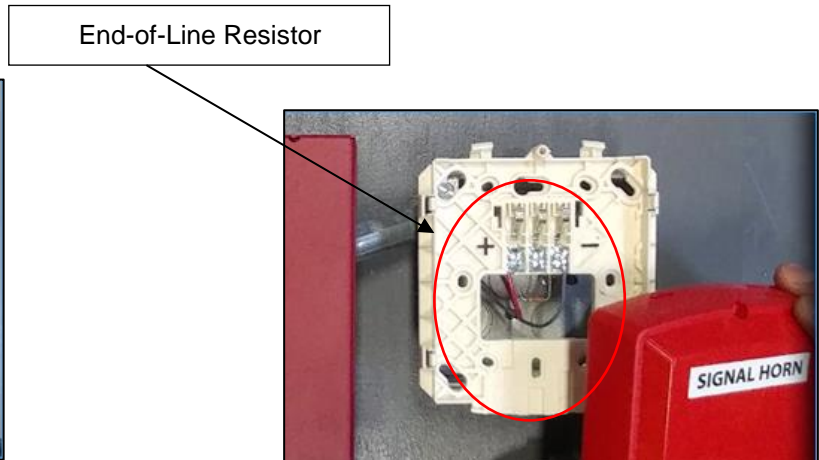


Figure 13.1

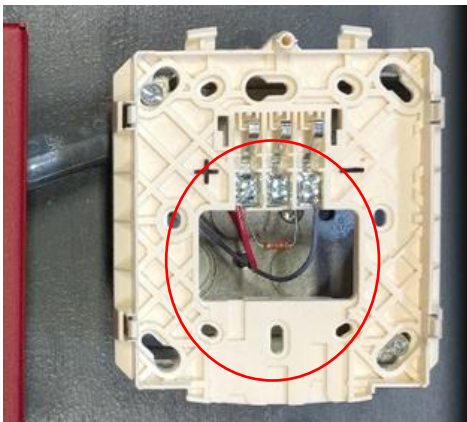


Figure 13.2

3. See **Figure 13.2**. Visually inspect Signal Horn base-plate connections. Locate positive and negative terminals on base-plate. **NOTE: RED** wire connects to positive terminal; **GRAY** wire connects to negative terminal.
4. See **Figure 13.2** Locate **end-of-line resistor**; factory installed between positive and negative terminals on Signal Horn base-plate.

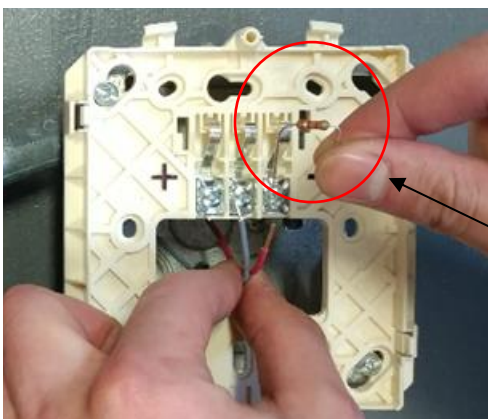


Figure 13.3

5. See **Figure 13.3** Disconnect **RED** and **GRAY** wires and remove end-of line resistor from base plate. **IMPORTANT: DO NOT DISCARD END OF LINE RESISTOR**

End-of-Line Resistor

STEP-BY-STEP GUIDE, CONTINUED

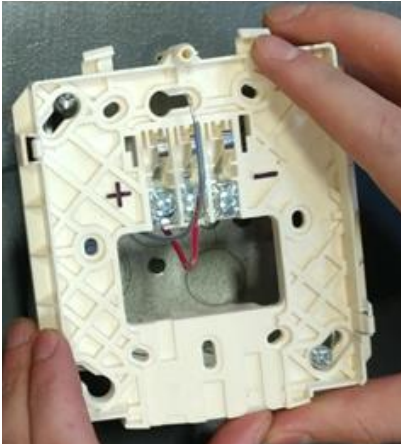


Figure 13.4

6. See **Figure 13.4** Remove Signal Horn base-plate from back box.

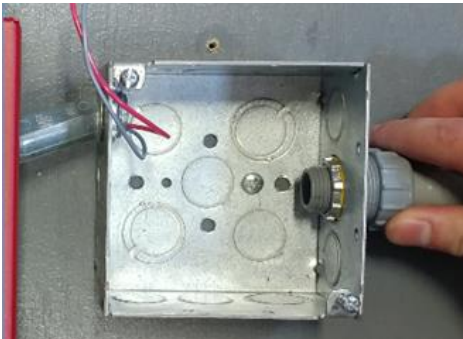


Figure 13.5

7. See **Figure 13.5** Attach raceway to signal horn box at appropriate knockout. Install raceway from factory installed Signal Horn back box to additional Signal Horn. **NOTE:** See Table 4 for distance limitations.

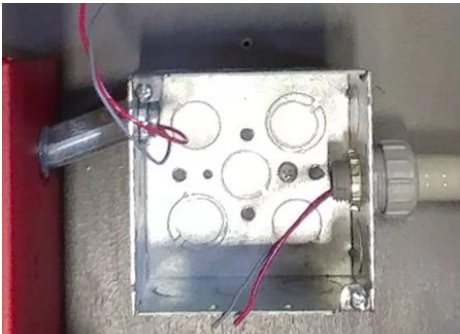


Figure 13.6

8. See **Figure 13.6** Run **14 AWG Solid** wires from additional Signal Horn, through raceway and into factory installed Signal Horn back box. **NOTE:** UNITED Fire Systems recommends using **RED**, and **GRAY** or **BLACK** wires for consistency and polarity identification.

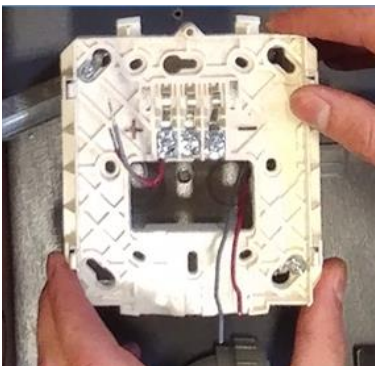


Figure 13.7

9. See **Figure 13.7** Re-install Signal Horn base plate to back box on **STANDPIPE-PAC™**.

STEP-BY-STEP GUIDE, CONTINUED

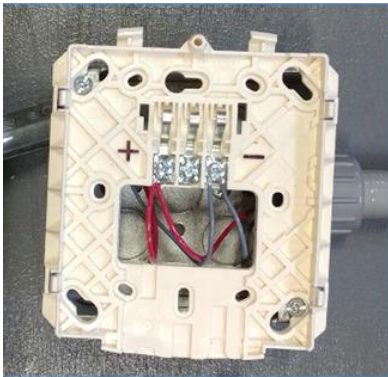


Figure 13.8

10. See **Figures 13.7, 13.8** and **Figure 12 Wiring Diagram**. Strip ends of wire installed in Step 8. Attach wires removed in Step 5 and wires installed in Step 8 to Signal Horn base plate terminals.

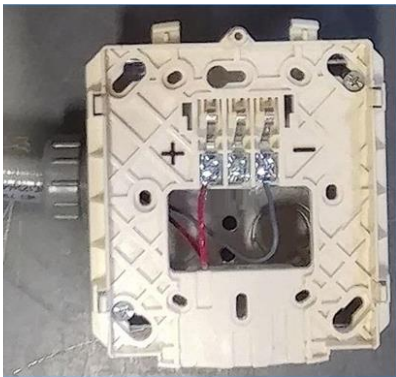


Figure 13.9

11. See **Figure 13.9**. Connect wires at additional Signal Horns. **IMPORTANT! Do not branch Signal Horn circuit. Run circuit from the first Signal Horn to the second Signal Horn, then the second Signal Horn to the third, and so on.**

12. Repeat steps 5 through 10 for each additional Signal Horn. **NOTE:** See Table 4 for distance limitations and maximum number of additional devices.

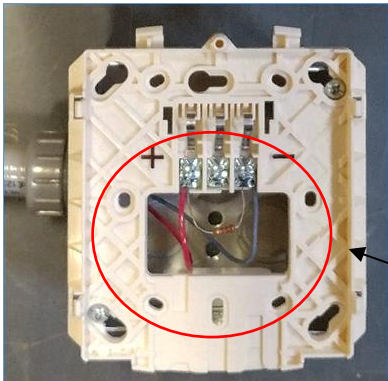


Figure 13.10

- 13 See **Figure 13.10**. Install end of line resistor, retained from Step 5, at last Signal Horn, between positive and negative terminals.

End-of-Line Resistor on last device on Signal Horn circuit

STEP-BY-STEP GUIDE, CONTINUED

14. See **Figure 13.11** and **Figure 13.12**. Replace Signal Horn cover(s). **IMPORTANT:** Cover(s) MUST be fastened correctly for proper wire contact. Trouble signal will occur if Signal Horn cover(s) is not fastened correctly.



Figure 13.11



Figure 13.12

Table 5 - Do's and Don'ts

| | |
|---|--|
| ✓ Do make sure the Signal Horn covers are clicked firmly into place onto the Signal Horn base plates once wiring is complete. | ✗ Don't wire 115 VAC on this circuit. |
| ✓ Do use a minimum of 14 AWG size wire. | ✗ Don't mix up the polarity. Know the polarity at both ends of the wiring. Wire per polarity diagram. |
| ✓ Do wire additional devices per Figure 12. The end-of-line resistor must be moved to the last device in the circuit per Figure B. | ✗ Don't exceed the current capacity of the circuit when adding additional horns to the STANDPIPE-PAC™ . Each additional horn adjusted to FULL VOLUME draws 0.047 amps. As noted on page 1, the current for <u>all</u> external devices, including the factory-installed signal horn, is 1.0 amp. |
| ✓ Do use RED and GRAY wire for (+) and (-) conductors so it is easy to maintain polarity. | ✗ Don't branch the signaling circuit. Wire horns in parallel, from one horn to the next. See Figure 12: Wiring Diagram . |
| ✓ Do install the end-of-line resistor on the terminals indicated. | |
| ✓ Do ensure additional device(s) are 12VDC. | |



IMPORTANT

Signals from the **STANDPIPE-PAC™** are NOT fire alarm signals. UNITED Fire Systems recommends that all devices connected to the Notification Appliance Circuit (NAC) of the **STANDPIPE-PAC™** unit be clearly differentiated from any fire alarm signals present in the building.

3.3.6. Optional Dialer Wiring. See Appendix D



IMPORTANT

The **STANDPIPE-PAC™** unit, including control unit, has been pre-wired and programmed at the factory for proper operation. DO NOT alter any factory wiring or control unit programming. Failure to follow this instruction can result in improper **STANDPIPE-PAC™** operation and will void the factory warranty.

3.4 Commissioning.

3.4.1 Required Supervisory Pressure

STANDPIPE-PAC™ has been designed and engineered to meet all requirements of Boston Fire Department TCM3-51725. Paragraph 4.1, states:

Pressure. Pressure shall be maintained in the standpipe and cross connections at all times and shall not exceed 25 psig (172 kPag) by utilizing nitrogen or an air compressor with an air dryer. *The supervisory pressure shall be as determined by a registered design professional (italics added).*

To comply with this requirement, UNITED Fire Systems adjusts the pressure switches on **STANDPIPE-PAC™** to:

- Turn the compressor ON when the pressure falls below 13 PSIG, and OFF when the pressure reaches 18 PSIG.
- Provide a LOW pressure signal at 7 PSIG, and a HIGH pressure signal at 23 PSIG.

Maintaining the pressure between 13 and 18 PSIG should be adequate for supervising the standpipe, and providing prompt signaling if a valve is opened or a portion of the standpipe is removed. Setting the HIGH pressure signal at 23 PSIG (2 PSIG less than the code allows) provides a safety margin accounting for the accuracy of the signal switch and the pressure gauge.

Maintaining the safety margins between pressure switch settings provides adequate standpipe supervision without added risk of nuisance signals. Of course, if a *registered design professional* requires different settings, the switches may be adjusted to comply.



Figure 14



IMPORTANT

The low- and high-limit pressure sensing switches, and the automatic control switch for the air compressor, have been factory-adjusted for proper operation per this manual. DO NOT attempt to adjust these switches without authorization from UNITED Fire Systems. These switches have factory-applied tamper seals. DO NOT break these seals. Failure to follow these instructions can lead to improper **STANDPIPE-PAC™** operation and will void the factory warranty.

3.4.2. Startup.



IMPORTANT

Pressure values indicated by the **STANDPIPE-PAC™** pressure gauge are APPROXIMATE. Variation from nominal values can be expected.

STEPS TO FOLLOW FOR STANDPIPE-PAC™ SYSTEM STARTUP

| Step No. | Description | Check When Complete |
|----------|--|---------------------|
| 1 | Verify that all standpipe valves are CLOSED. | |
| 2 | Verify that manual air release bleed valve (see Figure 2) is CLOSED. | |
| 3 | Verify that the standpipe main drain valve has been opened to drain residual water from the standpipe, and then the main drain valve has been CLOSED. | |
| 4 | Verify that the Auxiliary Condensate Drain Device has been used to drain any residual water from the piping in the vicinity of the STANDPIPE-PAC™ , and then Valve 1 is OPEN and Valve 2 is CLOSED. | |
| 5 | Verify that 115 VAC power is available and connected. DO NOT turn on at present. | |
| 6 | Verify that lockable shutoff valve (see Figure 1 item 7) is OPEN. | |
| 7 | Verify that compressor disconnect switch (see Figure 1 item 12) is OFF. | |
| 8 | Open control unit (see Figure 1 item 8). Connect battery. See Figure 8. | |
| 9 | Turn 115 VAC circuit breaker ON. | |
| 10 | Press RESET button on control unit. AC POWER indicator should be ON. | |
| 11 | ALARM indicator should be ON. Signal horn should be sounding. | |
| 12 | Press SILENCE switch to acknowledge alarm. Press SILENCE switch again for 2 seconds to silence signal horn. | |
| 13 | Move compressor disconnect switch to ON. Compressor should start. Compressor is filling standpipe with air pressure. | |
| 14 | Verify that pressure gauge needle (see Figure 1 item 5) is moving upward. | |
| 15 | When pressure gauge needle reaches approximately 18 PSIG, compressor should automatically shut off. | |
| 16 | Control unit should be clear, with only AC POWER indicator ON. | |
| 17 | Proceed to 3.4.3 – TESTING. | |

3.4.3. Testing

| STEPS TO FOLLOW FOR STANDPIPE-PAC™ SYSTEM TESTING | | |
|---|---|---------------------|
| Step No. | Description | Check When Complete |
| ### VERIFICATIONS BEFORE TESTING ### | | |
| 1 | If control unit dialer is connected to telephone lines, ensure that party receiving signals is aware that testing activities are occurring. | |
| 2 | Verify that pressure gauge (see Figure 1 item 5) indicates approximately 18 PSIG. | |
| 3 | Verify that control unit AC POWER indicator is ON and no other indicators are lit. | |
| ### LOW-LIMIT PRESSURE-SENSING SWITCH and AUTOMATIC AIR COMPRESSOR CONTROL SWITCH TEST ### | | |
| 4 | Verify that compressor disconnect switch (see Figure 1 item 12) is OFF. | |
| 5 | Move lockable shutoff valve (see Figure 1 item 7) to CLOSED position. | |
| 6 | Press and hold button on Test / Service Device (see Figure 1 item 13). Verify that pressure gauge needle is moving DOWN. | |
| 7 | When pressure gauge needle reaches approximately 7 PSIG, control unit ALARM indicator should be ON. Signal horn (see Figure 1 item 9) should sound. | |
| 8 | Release button on Test / Service Device. | |
| 9 | Press SILENCE switch to acknowledge alarm. Press SILENCE switch again for 2 seconds to silence signal horn. | |
| 10 | Move compressor disconnect switch to ON. Compressor should start. Pressure gauge needle should move UP. | |
| 11 | When pressure gauge needle moves above approximately 7 PSIG, control unit should clear and ALARM indicator should be OFF. | |
| 12 | When pressure gauge needle reaches approximately 18 PSIG, compressor should automatically shut off. | |
| ### HIGH-LIMIT PRESSURE-SENSING SWITCH TEST ### | | |
| 13 | Verify that compressor disconnect switch is ON. | |
| 14 | Verify that lockable shutoff valve is in CLOSED position. | |
| 15 | Verify that control unit AC POWER indicator is ON and no other indicators are lit. | |
| 16 | Press and hold button on Test / Service Device. Verify that pressure gauge needle is moving UP. | |
| 17 | When pressure gauge needle reaches approximately 23 PSIG, control unit ALARM indicator should be ON. Signal horn should sound. | |
| 18 | Release button on Test / Service Device. | |
| 19 | Press SILENCE switch to acknowledge alarm. Press SILENCE switch again for 2 seconds to silence signal horn. | |
| 20 | Move compressor disconnect switch to OFF. | |
| 21 | Press and release button on Test / Service Device until pressure gauge reads between 13 and 18 PSIG. Control unit ALARM indicator should be OFF. Signal horn should be OFF. | |
| 22 | Move compressor disconnect switch to ON. | |
| 23 | Move lockable shutoff valve to OPEN position. | |
| 24 | Pressure gauge may drop. Compressor may start. Pressure gauge should stabilize between 13 and 18 PSIG, and compressor should then be OFF. | |
| ### STANDPIPE DEPRESSURIZATION TEST ### | | |
| 25 | Remove cap from manual air release bleed valve. Open manual air release bleed valve all the way OPEN. | |
| 26 | Pressure gauge reading should drop to 0 (zero) PSIG in approximately 3 minutes. | |
| 27 | Close manual air release bleed valve. | |
| 28 | Pressure gauge reading should be approximately 13 PSIG (or more) in the design amount of time (see Section 2 – DESIGN). | |
| 29 | Proceed to 3.4.4 – PLACING IN SERVICE. | |

3.4.4. Placing In Service.

| STEPS TO FOLLOW FOR PLACING STANDPIPE-PAC™ SYSTEM IN SERVICE | | |
|--|---|---------------------|
| Step No. | Description | Check When Complete |
| 1 | Verify that compressor disconnect switch (see Figure 1 item 12) is ON. | |
| 2 | Verify that battery is properly connected to control unit (see Figure 10). | |
| 3 | Verify that control unit AC POWER indicator is ON and no other indicators are lit. | |
| 4 | Verify that pressure gauge (see Figure 1 item 5) indicates approximately 18 PSIG. | |
| 5 | Place lock on lockable shutoff valve. | |
| 6 | Close and lock control unit door. It is recommended that one key be left in control unit lock. | |
| 7 | Deliver second control unit key, lockable shutoff valve key(s), and this manual to responsible individual at job site. | |
| 8 | If control unit dialer is connected to telephone lines, ensure that party receiving signals is aware that system is now in service. | |
| 9 | System is now in service. | |

3.4.5. Troubleshooting.

| Problem | Possible Cause | Solution | Manual Reference |
|---|---|--|------------------|
| No power to control panel or compressor. | Circuit breaker not on. | Turn circuit breaker on. | |
| | 115 VAC not properly connected in junction box. | Properly connect power in junction box. | 3.3.5.3 |
| STANDPIPE-PAC™ does not build sufficient pressure in standpipe (less than 7 PSIG). | One or more outlet valves open. | Close all standpipe outlet valves. | |
| | Manual air release bleed valve open. | Close manual air release bleed valve. | |
| | Standpipe fitting connections are too leaky. | Inspect all fitting connections for tightness. Correct as necessary. | |
| | STANDPIPE-PAC™ is improperly sized. | Verify internal volume of standpipe. Ensure that proper STANDPIPE-PAC™ has been chosen. | Section 2 |
| | Automatic air compressor control switch failure. | DO NOT ATTEMPT ADJUSTMENT OR REPAIR OF SWITCH. Contact UNITED Fire Systems or trained distributor for service. | |
| STANDPIPE-PAC™ builds too much pressure in standpipe (above 25 PSIG). | Automatic air compressor control switch failure. | DO NOT ATTEMPT ADJUSTMENT OR REPAIR OF SWITCH. Contact UNITED Fire Systems or trained distributor for service. | |
| STANDPIPE-PAC™ alarms too low (below 7 PSIG). | Low-limit pressure sensing switch requires adjustment. | DO NOT ATTEMPT ADJUSTMENT OR REPAIR OF SWITCH. Contact UNITED Fire Systems or trained distributor for service. | |
| STANDPIPE-PAC™ alarms too high (above 25 PSIG). | High-limit pressure sensing switch requires adjustment. | DO NOT ATTEMPT ADJUSTMENT OR REPAIR OF SWITCH. Contact UNITED Fire Systems or trained distributor for service. | |

UNITED FIRE SYSTEMS
 STANDPIPE-PAC™ MODEL SSS-101
 DESIGN, INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
 REVISION 2.00
 P/N 10-540101-001

Troubleshooting (continued).

| | | | |
|---|--|--|-----------|
| STANDPIPE-PAC™ does not alarm when manual air release bleed valve is opened. | Manual air release bleed valve cap is on. | Remove manual air release bleed valve cap. | |
| | Lockable shutoff valve is closed. | Open lockable shutoff valve. | |
| | Ice buildup in air dryer and unit piping. | Ensure that STANDPIPE-PAC™ is installed in area where temperature cannot go below 32 degrees F. | |
| Color of beads in air dryer has changed | Air dryer beads have absorbed water to their capacity. | Compare color of beads to decal on side of dryer. If beads are orange, contact UNITED Fire Systems or trained distributor for service. | |
| Excessive moisture in standpipe. | | | |
| Control unit has no power when circuit breaker is turned OFF. | Battery not properly connected. | Properly connect battery. | Figure 11 |
| | Battery is discharged. | Permit control unit to charge batteries for 24 hours. | |
| | Battery is not capable of holding charge. | Battery requires replacement – Contact UNITED Fire Systems or trained distributor for service. | |



COMMISSIONING WORKSHEET AND CHECKLIST
STANDPIPE-PAC™ SUPERVISORY SYSTEM
UFS-238B REVISION 1.00 – PAGE 1 OF 3



| | |
|------|--|
| DATE | |
|------|--|

| LOCATION INFORMATION | |
|----------------------|--|
| User | |
| Address 1 | |
| Address 2 | |
| City, State, Zip | |
| System | |

| | |
|-----------------------------------|--|
| STANDPIPE-PAC™ UNIT SERIAL NUMBER | |
|-----------------------------------|--|

| PRELIMINARY | YES | NO |
|---|-----|----|
| Have all required on-site parties been notified that audible signals will be sounding? | | |
| If the control unit dialer is connected to telephone lines, has the party receiving signals been notified that testing will take place? | | |
| Are all valves on the standpipe CLOSED? | | |
| Are all manual air release bleed valves CLOSED? | | |
| Has an Auxiliary Condensate Drain Device been properly installed? | | |
| Has 115 VAC power been connected, and is OFF? | | |

| STARTUP | YES | NO |
|---|-----|----|
| Is the compressor disconnect switch OFF, and is the unit outlet lockable shutoff valve OPEN? | | |
| Has the battery been connected to the control unit? | | |
| Has 115 VAC power been turned ON? | | |
| Has the control unit RESET button been operated, and is the control unit AC POWER indicator ON? | | |
| Is the control unit ALARM indicator ON, and are the signal horn and horn/strobe operating? | | |
| Has the SILENCE switch been pressed once to acknowledge the alarm, and then pressed again for 2 seconds, turning the signals OFF? | | |
| Has the compressor disconnect switch been moved to ON, and is the needle on the pressure gauge moving upward? | | |
| When the pressure gauge needle reaches approximately 18 PSIG, does the compressor automatically shut off? | | |
| Is the control unit clear, with only the AC POWER indicator ON? | | |



**COMMISSIONING WORKSHEET AND CHECKLIST
STANDPIPE-PAC™ SUPERVISORY SYSTEM
UFS-238B REVISION 1.00 – PAGE 2 OF 3**



| LOW PRESSURE SWITCH TEST | YES | NO |
|---|-----|----|
| Is the compressor disconnect switch OFF, and has the unit outlet lockable shutoff valve been moved to CLOSED? | | |
| Has the button on the test / service device been operated, and is the pressure gauge needle moving DOWN? | | |
| When the pressure gauge needle reaches approximately 7 PSIG, does the control unit ALARM indicator come ON, and do the signals operate? | | |
| Has the button on the test / service device been released? | | |
| Has the SILENCE switch been pressed once to acknowledge the alarm, and then pressed again for 2 seconds, turning the signals OFF? | | |

| COMPRESSOR CONTROL SWITCH TEST | YES | NO |
|---|-----|----|
| Has the compressor disconnect switch been moved to ON? | | |
| Has the compressor started, and is the pressure gauge needle moving UP? | | |
| When the pressure gauge needle reaches approximately 18 PSIG, does the compressor automatically shut off? | | |

| HIGH PRESSURE SWITCH TEST | YES | NO |
|--|-----|----|
| Is the compressor disconnect switch ON, and is the unit lockable shutoff valve CLOSED? | | |
| Is the control unit clear, with only the AC POWER indicator ON? | | |
| Has the button on the test / service device been operated, and is the pressure gauge needle moving UP? | | |
| When the pressure gauge needle reaches approximately 23 PSIG, does the control unit ALARM indicator come ON, and do the signals operate? | | |
| Has the button on the test / service device been released? | | |
| Has the SILENCE switch been pressed once to acknowledge the alarm, and then pressed again for 2 seconds, turning the signals OFF? | | |
| Has the compressor disconnect switch been moved to OFF? | | |
| Has the button on the test / service device been operated, and held until pressure gauge needle is between 13 and 18 PSIG? | | |
| Has the compressor disconnect switch been moved to ON, and the unit lockable shutoff valve been moved to OPEN? | | |
| NOTE: Compressor may start. When pressure gauge needle stabilizes between 13 and 18 PSIG, compressor should be OFF. | | |

| STANDPIPE DEPRESSURIZATION TEST | YES | NO |
|--|---------|----|
| Has a cap been removed from a manual air release bleed valve, and the valve moved to all the way OPEN? | | |
| Does the pressure gauge reading drop to near zero in 3 minutes or less? | | |
| Has the manual air release bleed valve been CLOSED, and the cap replaced? | | |
| Has the time for the standpipe to refill to minimum 13 PSIG been recorded? | MINUTES | |



**COMMISSIONING WORKSHEET AND CHECKLIST
STANDPIPE-PAC™ SUPERVISORY SYSTEM
UFS-238B REVISION 1.00 – PAGE 3 OF 3**



| PLACING IN SERVICE | YES | NO |
|--|------------|-----------|
| Is the compressor disconnect switch ON, and is the unit lockable shutoff valve OPEN? | | |
| Have the valves on the Auxiliary Condensate Drain Device been left properly positioned per the nameplate instructions? | | |
| Is the battery properly connected to the control unit? | | |
| Is the control unit AC POWER indicator ON, and are all other indicators OFF? | | |
| Is the pressure gauge needle indicating between 13 and 18 PSIG? | | |
| Has the customer's lock been placed on the unit lockable shutoff valve? | | |
| Is the control unit door locked? | | |
| Have the control unit keys, lockable shutoff valve key(s), and UFS Manual P/N 10-540101-001 been given to the responsible individual at the job site? | | |
| If the control unit dialer is connected to telephone lines, has the party receiving signals been notified that testing is complete and system is in service? | | |
| Have all required on-site parties been notified that testing is complete, system is now in service, and all subsequent signals are NOT test signals? | | |

| FINAL ACCEPTANCE SIGNATURES | | | |
|------------------------------------|-------------------|------------------|-------------|
| | PRINT NAME | SIGNATURE | DATE |
| CUSTOMER | | | |
| INSTALLING CONTRACTOR | | | |

NOTES

4. OPERATION

4.1 Indicators.

4.1.1. Pressure Gauge. The pressure gauge indicates the approximate pressure produced by the air compressor within the **STANDPIPE-PAC™** piping and the standpipe.



IMPORTANT

Pressure values indicated by the **STANDPIPE-PAC™** pressure gauge are APPROXIMATE. Variation from nominal values can be expected.

4.1.2. Signal Horn. The signal horn is the required audible indicator to annunciate an alarm condition. The signal horn will sound when the pressure in the standpipe drops below approximately 7 PSIG, indicating an impairment of the standpipe requiring correction.

4.1.3. Indicators Within Control Unit.

4.1.3.1. Visual Indicator – “AC POWER”. This is a green LED, visible with unit door closed or open, indicating that AC power has been applied to the unit.

4.1.3.2. Visual Indicator – “ACTIVE”. This is a red LED, visible with unit door closed or open, indicating that either the low-limit or high-limit pressure sensing switch has activated.

4.1.3.3. Visual Indicator – “COMM. FAIL”. This is a yellow LED, visible with unit door closed or open, indicating failure of communications over the telephone lines (if connected).

4.1.3.4. Visual Indicator – “BATT. FAULT”. This is a yellow LED, visible with unit door closed or open, indicating trouble with the backup battery.

4.1.3.5. Visual Indicator – “SYSTEM TRBL”. This is a yellow LED, visible with unit door closed or open, indicating a fault on a supervised circuit.

4.1.3.6. Visual Indicator – “SUPERVISORY”. This is a yellow LED that is not used with **STANDPIPE-PAC™**.

4.1.3.7. Visual Indicator – “GND FAULT”. This is a yellow LED, visible only with unit door open, indicating a ground fault on an external circuit.

4.1.3.8. Audible Indicator – Piezo Sounder. This is an audible indicator that sounds whenever an ACTIVE or SYSTEM TRBL signal exists.

4.2. Controls.

4.2.1. Lockable Shutoff Valve. This valve is used during testing and maintenance to isolate the **STANDPIPE-PAC™** from the standpipe. The normal position of this valve is OPEN. A lock should be placed on this valve to ensure it stays in the OPEN position, and is not closed inadvertently.

4.2.2. Compressor Disconnect Switch. This switch is used to remove power from the compressor during testing and maintenance. The normal position of this switch is ON.

4.2.3. Test / Service Device. This device is used ONLY during testing and maintenance. DO NOT operate this device unless testing and maintenance procedures are being followed.

4.2.4. Controls Within Control Unit.

4.2.4.1. Pushbutton – “RESET”. This pushbutton resets all control unit circuits.

4.2.4.2. Pushbutton – “ACKNOWLEDGE SILENCE (HOLD 2 SEC.)”.

4.2.4.2.1. Press this pushbutton ONCE to acknowledge signals. Piezo sounder is silenced, and all flashing visual indicators change to steady on.

4.2.4.2.2. Press a second time and HOLD for two (2) seconds to silence the Signal Horn.

4.3. Indications.

4.3.1. Normal Operation. Under normal operation, the following will be indicated:

| NORMAL OPERATION | | |
|----------------------|------------------------------|-----------------------------------|
| INDICATOR or CONTROL | ITEM | STATUS |
| Visual Indicator | Pressure Gauge | Indicating between 13 and 18 PSIG |
| Visual Indicator | AC POWER | ON |
| Visual Indicator | ACTIVE | Off |
| Visual Indicator | COMM. FAIL | Off |
| Visual Indicator | BATT. FAULT | Off |
| Visual Indicator | SYSTEM TRBL | Off |
| Visual Indicator | SUPERVISORY | Off |
| Visual Indicator | GND FAULT | Off |
| Audible Indicator | Piezo Sounder | Off |
| Audible Indicator | Signal Horn | Off |
| Control | Lockable Shutoff Valve | Open |
| Control | Compressor Disconnect Switch | ON |
| Control | Test / Service Device | Not Operated |

4.3.2. Signal Operation – Low Pressure In Standpipe.



WARNING

Low pressure in the standpipe is an indication that the standpipe is **IMPAIRED**. Follow instructions under “Procedures – What To Do When Standpipe Is Impaired.” Failure to do so may result in death, personal injury, or serious property damage when firefighters cannot fight a fire.

When pressure drops within the standpipe, the following will be indicated:

| LOW PRESSURE IN STANDPIPE | | |
|---------------------------|------------------------------|-----------------------------|
| INDICATOR or CONTROL | ITEM | STATUS |
| Visual Indicator | Pressure Gauge | Indicating less than 7 PSIG |
| Visual Indicator | AC POWER | ON |
| Visual Indicator | ACTIVE | ON |
| Visual Indicator | COMM. FAIL | Off |
| Visual Indicator | BATT. FAULT | Off |
| Visual Indicator | SYSTEM TRBL | Off |
| Visual Indicator | SUPERVISORY | Off |
| Visual Indicator | GND FAULT | Off |
| Audible Indicator | Piezo Sounder | ON |
| Audible Indicator | Signal Horn | ON |
| Control | Lockable Shutoff Valve | Open |
| Control | Compressor Disconnect Switch | ON |
| Control | Test / Service Device | Not Operated |

4.3.3. Signal Operation – High Pressure In Standpipe.



CAUTION

High pressure in the standpipe can lead to a delay in firefighter use of the standpipe. Follow instructions under “Procedures – What To Do If High Pressure Exists In Standpipe.” Failure to do so increases the risk of injury and property damage when firefighters are delayed when fighting a fire.

If pressure increases in standpipe above 25 PSIG, the following will be indicated:

| HIGH PRESSURE IN STANDPIPE | | |
|----------------------------|------------------------------|----------------------------|
| INDICATOR or CONTROL | ITEM | STATUS |
| Visual Indicator | Pressure Gauge | Indicating 25 PSIG or more |
| Visual Indicator | AC POWER | ON |
| Visual Indicator | ACTIVE | ON |
| Visual Indicator | COMM. FAIL | Off |
| Visual Indicator | BATT. FAULT | Off |
| Visual Indicator | SYSTEM TRBL | Off |
| Visual Indicator | SUPERVISORY | Off |
| Visual Indicator | GND FAULT | Off |
| Audible Indicator | Piezo Sounder | ON |
| Audible Indicator | Signal Horn | ON |
| Control | Lockable Shutoff Valve | Open |
| Control | Compressor Disconnect Switch | ON |
| Control | Test / Service Device | Not Operated |

4.4. Procedures

4.4.1. Normal Operation. Under normal operation, no intervention is needed.

| NORMAL OPERATION | | |
|----------------------|------------------------------|-----------------------------------|
| INDICATOR or CONTROL | ITEM | STATUS |
| Visual Indicator | Pressure Gauge | Indicating between 13 and 18 PSIG |
| Visual Indicator | AC POWER | ON |
| Visual Indicator | ACTIVE | Off |
| Visual Indicator | COMM. FAIL | Off |
| Visual Indicator | BATT. FAULT | Off |
| Visual Indicator | SYSTEM TRBL | Off |
| Visual Indicator | SUPERVISORY | Off |
| Visual Indicator | GND FAULT | Off |
| Audible Indicator | Piezo Sounder | Off |
| Audible Indicator | Signal Horn | Off |
| Control | Lockable Shutoff Valve | Open |
| Control | Compressor Disconnect Switch | ON |
| Control | Test / Service Device | Not Operated |

4.4.2. To Silence Piezo Sounder. Press “ACKNOWLEDGE SILENCE (HOLD 2 SEC.)” pushbutton once.

4.4.3. To Silence Signal Horns. Press “ACKNOWLEDGE SILENCE (HOLD 2 SEC.)” pushbutton once, followed by pressing and holding the pushbutton for 2 seconds.

4.4.4. For Fire Department Use of Fire Standpipe.



WARNING

The fire standpipe **MUST** only be placed into use by the fire department. **DO NOT** use the standpipe for any other purpose. Failure to follow this warning may result in impairment of the standpipe in the event of fire, and may result in death, personal injury, or serious property damage when firefighters cannot fight a fire.

- Open Manual Air Release Bleed Valve located in proximity to fire department siamese.
- Allow air to bleed from fire standpipe for 3 minutes.
- Close Manual Air Release Bleed Valve before pumping water into fire standpipe.

4.4.5. To Refill Standpipe With Air Pressure After Fire Department Use



CAUTION

After standpipe-has been filled with water for any reason, ensure that standpipe is completely empty of water before refilling standpipe with air pressure. Use all available drain points to remove all water from the standpipe. If, at any time, it is suspected that water has entered the **STANDPIPE-PAC™** unit, contact UNITED Fire Systems or your trained distributor before refilling standpipe with air pressure.



CAUTION

If fire department used standpipe during cold weather:

- Drain standpipe before freezing occurs
- If freezing does occur, ensure all ice within standpipe is melted, and all liquid water is drained

- Operate Compressor Disconnect Switch to OFF.
- Close **STANDPIPE-PAC™** outlet valve.
- Use standpipe main drain valve to completely drain standpipe with water.
- Use Auxiliary Condensate Drain Device to completely drain piping in the vicinity of the **STANDPIPE-PAC™** of water.
- It may take time for all water to migrate to drains from upper floors. DO NOT proceed until all water is drained.
- Ensure all standpipe valves and drains are CLOSED.
- Operate Compressor Disconnect Switch to ON.
- **STANDPIPE-PAC™** unit will fill standpipe with air.

| TO REFILL STANDPIPE WITH AIR PRESSURE | | |
|---------------------------------------|------------------------------|-----------------------------|
| INDICATOR or CONTROL | ITEM | STATUS |
| Visual Indicator | Pressure Gauge | Indicating less than 7 PSIG |
| Visual Indicator | AC POWER | ON |
| Visual Indicator | ACTIVE | ON |
| Visual Indicator | COMM. FAIL | Off |
| Visual Indicator | BATT. FAULT | Off |
| Visual Indicator | SYSTEM TRBL | Off |
| Visual Indicator | SUPERVISORY | Off |
| Visual Indicator | GND FAULT | Off |
| Audible Indicator | Piezo Sounder | ON |
| Audible Indicator | Signal Horn | ON |
| Control | Lockable Shutoff Valve | Open |
| Control | Compressor Disconnect Switch | ON |
| Control | Test / Service Device | Not Operated |

4.4.6. To Test Standpipe with Water Pressure



CAUTION

After standpipe-has been filled with water for any reason, ensure that standpipe is completely empty of water before refilling standpipe with air pressure. Use all available drain points to remove all water from the standpipe. If, at any time, it is suspected that water has entered the **STANDPIPE-PAC™** unit, contact UNITED Fire Systems or your trained distributor before refilling standpipe with air pressure.

NFPA 14 – 2016, *Standard for the Installation of Standpipe and Hose Systems* addresses hydrostatic testing in Section 11.4. Paragraph 11.4.5 states that an air test can be done if cold weather prevents testing with water. Paragraph 11.4.7.2 states that if modifications to a standpipe (such as 'jumping' to higher floors) cannot be isolated, then a pressure test is not required. Paragraph 11.4.8 further states that care shall be taken to ensure that no portion of the piping is subject to freezing during cold weather. Based on these paragraphs, UNITED Fire Systems **strongly recommends:**

- If the monthly test can be avoided, do so.
- If the monthly test cannot be avoided, perform testing during cold weather with air only'
- If testing with water is deemed to be necessary, regardless of the weather, the Site Safety Manager should ensure that the Method of Procedure (MOP) for such testing include, as its very first step, that the **STANDPIPE-PAC™** outlet valve be CLOSED and locked in this position for the duration of the test.
- The MOP should include using all drainage measures after testing, and making sure the standpipe is completely drained, before the **STANDPIPE-PAC™** outlet valve is re-opened.



IMPORTANT

Although the **STANDPIPE-PAC™** is equipped with an inlet check valve, it is important to take precautions to prevent inadvertent water entry into the **STANDPIPE-PAC™** piping and components. To prevent such water entry, **always remember** to do the following:

- ALWAYS unlock and close **STANDPIPE-PAC™** outlet valve BEFORE testing standpipe by flooding with water.
- ALWAYS completely drain standpipe at main drain after testing standpipe by flooding with water, and operate Auxiliary Condensate Drain Device until no water drains from device.
- ALWAYS open and re-lock **STANDPIPE-PAC™** outlet valve after completely draining water.
- NEVER flood standpipe with water when **STANDPIPE-PAC™** outlet valve is closed UNLESS standpipe is being used by fire department.
- NEVER expose **STANDPIPE-PAC™** or Auxiliary Condensate Drain Device to freezing temperatures. Ice can block **STANDPIPE-PAC™** outlet and / or standpipe, possibly inhibiting standpipe use by Fire Department in case of emergency.

- Ensure there are no low points or traps without drains.
- CLOSE Lockable Shutoff Valve BEFORE testing standpipe with water pressure.
- Perform pressure test.
- Use main drain, and all drainage valves at low points, to drain all water from standpipe.

UNITED FIRE SYSTEMS
STANDPIPE-PAC™ MODEL SSS-101
DESIGN, INSTALLATION, OPERATION, AND MAINTENANCE MANUAL
REVISION 2.00
P/N 10-540101-001

- Use Auxiliary Condensate Drain Device to drain all water from piping in the vicinity of the **STANDPIPE-PAC™**.
- It may take time for water to migrate from upper floors. Allow sufficient time with drains open for all water to drain.
- OPEN Lockable Shutoff Valve ONLY after all water has been drained from standpipe.
- Follow instructions in 4.4.5 to refill standpipe with air.

5. MAINTENANCE. Maintenance is vitally important for the continued protection provided by the **STANDPIPE-PAC™** unit. Perform all maintenance according to the instructions in this manual.



DANGER



RISK OF ELECTROCUTION

Voltages and currents associated with **STANDPIPE-PAC™** units are **LETHAL**. Follow all instructions provided.

Work on **STANDPIPE-PAC™** unit power **MUST** be performed **ONLY** by qualified individuals. All required precautions to prevent contact with live electrical conductors and equipment **MUST** be taken. Failure to comply with these instructions is an immediate hazard with a likelihood of death or serious personal injury!



CAUTION

Before performing maintenance on the **STANDPIPE-PAC™** unit, confirm that the unit is **NOT** pressurized. Failure to confirm that the unit is **NOT** pressurized could result in personal injury and / or property damage.



IMPORTANT

The low- and high-limit pressure sensing switches, and the automatic control switch for the air compressor, have been factory-adjusted for proper operation per this manual. **DO NOT** attempt to adjust these switches without authorization from UNITED Fire Systems. These switches have factory-applied tamper seals. **DO NOT** break these seals. Failure to follow these instructions can lead to improper **STANDPIPE-PAC™** operation and will void the factory warranty.



IMPORTANT

Pressure values indicated by the **STANDPIPE-PAC™** pressure gauge are **APPROXIMATE**. Variation from nominal values can be expected.



IMPORTANT

The **STANDPIPE-PAC™** unit, including control unit, has been pre-wired and programmed at the factory for proper operation. **DO NOT** alter any factory wiring or control unit programming. Failure to follow this instruction can result in improper **STANDPIPE-PAC™** operation and will void the factory warranty.

5.1. Weekly. Weekly maintenance consists of visual checks of the status of the **STANDPIPE-PAC™** unit and the standpipe itself.

| Item | Normal Status | Abnormal Status | What To Do If Status Is Abnormal |
|---------------------------------------|--|---|---|
| Check control panel visual indicators | AC Power Green LED – ON All other LED indicators - OFF | Any indicators other than AC Power ON | Contact your service provider for service. |
| Check Compressor Disconnect Switch | ON | OFF | Return Compressor Disconnect Switch to ON position. |
| Check Pressure Gauge | Indicating between 13 to 18 PSIG | Indicating below 13 PSIG or above 18 PSIG | Contact your service provider for service. |
| Check Desiccant in Air Dryer | Blue color | Orange color | If desiccant is orange throughout, contact your service provider for service |
| Check Lockable Shutoff valve | Locked in OPEN position | Unlocked or CLOSED | Open valve and apply lock. |
| Check Manual Air Release Bleed Valve | Valve – CLOSED Cap – Attached to outlet of valve; chain intact and connected to valve | Valve – OPEN Cap – Disconnected or Missing | If valve is OPEN, CLOSE valve tightly. If cap is disconnected, re-connect. If cap is missing, contact service provider for replacement. |
| Check standpipe valves | All valves - CLOSED | Any valve OPEN | Ensure all valves are CLOSED. |

5.2. Monthly. Monthly maintenance consists of standpipe water drainage and quick checks of alarm response.

| Item | Procedure | Normal Status | What To Do If Status Is Abnormal |
|----------------------------|--|---|---|
| Drain water from standpipe | See * below | No water in standpipe | Draining returns standpipe to normal status |
| Check High Alarm | 1. Compressor disconnect switch ON. 1. Lockable shutoff valve CLOSED. 2. Operate test / service device. | Signal horn should sound when pressure gauge indicates 23 ± 1 PSIG | Contact service provider |
| Check Low Alarm | 1. Compressor disconnect switch OFF. 2. Lockable shutoff valve CLOSED. 3. Operate test / service device. | Signal horn should sound when pressure gauge indicates 7 ± 1 PSIG. | Contact service provider |
| Return To Normal Status | 1. Compressor disconnect switch ON. 2. Lockable shutoff valve OPEN. 3. Compressor should run until standpipe is properly filled. | 1. Compressor off. 2. No abnormal indications on control panel. 3. Pressure gauge indicates between 13 and 18 PSIG. | Contact service provider |

* To drain water from piping in vicinity of **STANDPIPE-PAC™** while standpipe is pressurized with air by **STANDPIPE-PAC™**:

1. Unlock and close **STANDPIPE-PAC™** outlet valve.
2. Remove and retain steel plug from device outlet (Valve 2)
3. Open Valve 1 of Auxiliary Condensate Drain Device, allowing water to drain into device.
4. Close Valve 1 BEFORE opening Valve 2.
5. Open Valve 2 of Auxiliary Condensate Drain Device, allowing water to drain from device.
6. Close Valve 2 and re-open Valve 1. Repeat until no additional water drains from device outlet.
7. Replace steel plug in device outlet (Valve 2)

5.3. Quarterly.



IMPORTANT

Quarterly maintenance as indicated below is vitally important for continued proper functioning of your **STANDPIPE-PAC™**. Please do NOT neglect these procedures!

5.3.1 Replacement of Desiccant In Dryer. It is important that the air dryer continue to remove moisture from the compressed air. For this reason, it is recommended that the dryer desiccant be replaced quarterly.

NOTE – Refer to Figure 15.

1. Have Qty. (1) UFS P/N 21-100000-100 Replacement Desiccant available.
2. Notify local personnel that signals will be heard / seen during maintenance.
3. If dialer is connected to telephone line, notify receiving office that signals will be transmitted during maintenance.
4. Close lockable shutoff valve on outlet of **STANDPIPE-PAC™**.
5. Move compressor disconnect switch to OFF.
6. De-pressurize **STANDPIPE-PAC™** piping by operating Test / Service Device. Hold until pressure gauge indicates ZERO.
7. Silence audible signal by opening door of control unit and operating Acknowledge-Silence button. Hold for 2 seconds until audible signal silences.



CAUTION

DO NOT turn connecting ring on desiccant air dryer unless pressure gauge indicates ZERO. Failure to do so can result in personal injury and property damage.

8. Locate desiccant air dryer on **STANDPIPE-PAC™**. Locate tab marked PUSH on connecting ring holding aluminum bowl in place (tab orientation may not be immediately visible).
9. Depress tab marked PUSH and turn connecting ring to release aluminum bowl and glass liner.
10. Detach aluminum bowl from assembly.
11. Remove and discard the desiccant beads in the bowl.
12. Fill glass liner with new desiccant beads to approximately the same level. Use Qty. (1) UFS P/N 21-100000-100.
13. Carefully align and insert desiccant bowl back into assembly until it is flush against air dryer cap.
14. Depress tab marked PUSH, and turn connecting ring until connection is re-established.
15. Release tab and ensure that aluminum bowl is secure.
16. Move compressor disconnect switch to ON. Compressor should start and pressure gauge should begin to indicate.
17. When pressure gauge reads approximately 18 PSIG, compressor should stop.
18. Check for leaks at air dryer connecting ring.
19. Open lockable shutoff valve on outlet of **STANDPIPE-PAC™**.
20. Notify local personnel (and receiving office, if phone line is connected) that maintenance is complete.

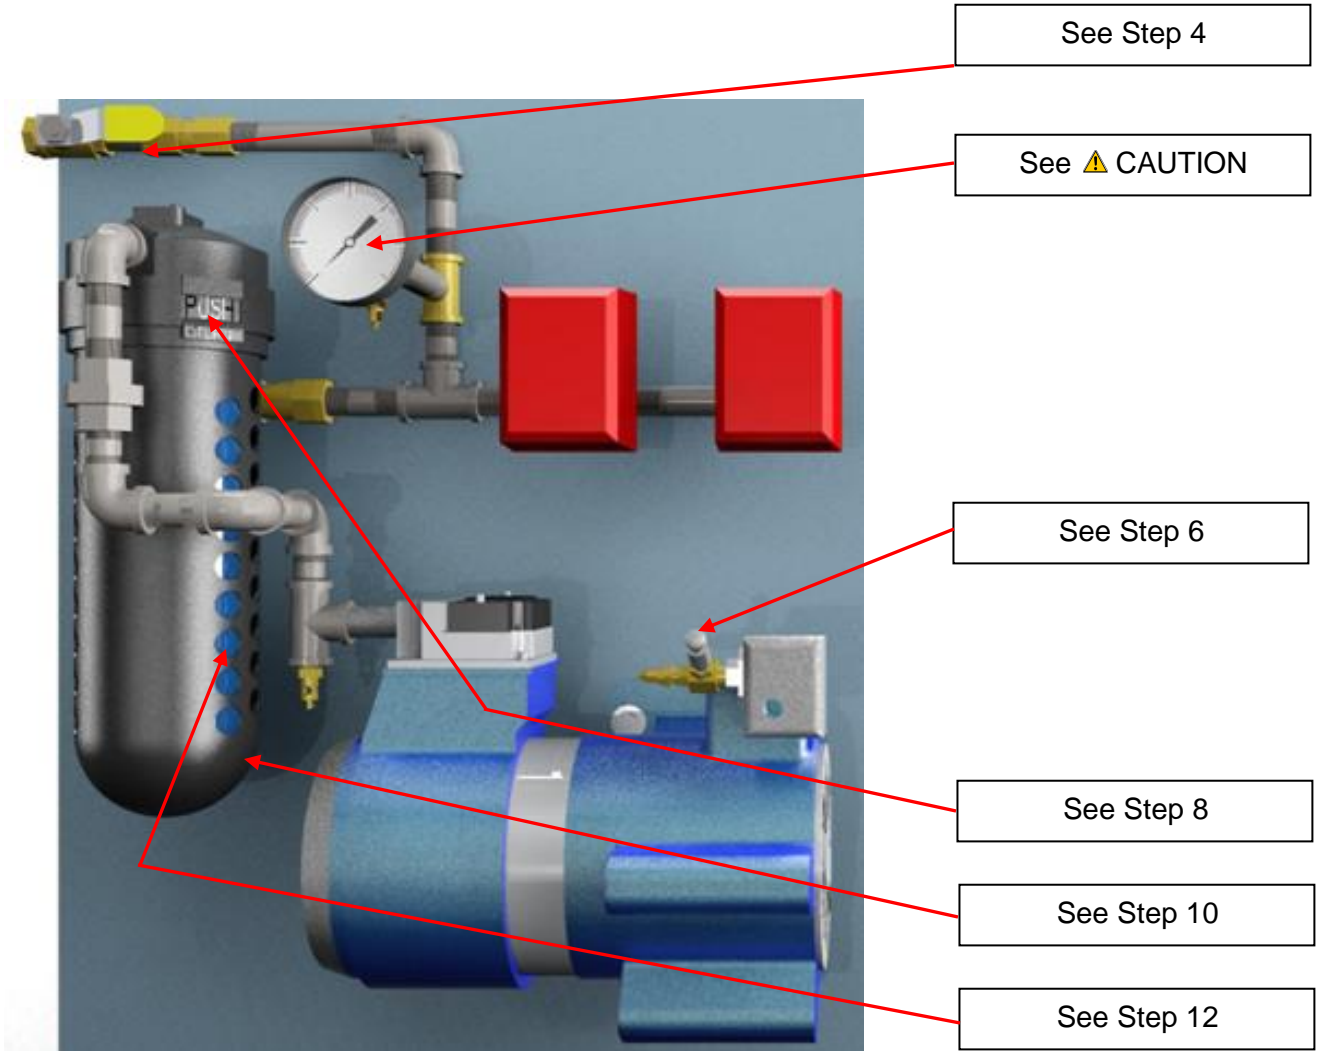


Figure 15 – Desiccant Air Dryer

5.3.2. Replacement of Compressor Filter. The compressor filter keeps dust and other contaminants out of the compressor pump. Quarterly replacement can lengthen the lifespan of the compressor.

1. Have replacement filter kit UFS P/N 00-100005-553 available.
2. Move compressor disconnect switch to OFF.
3. Use 5/32" hex key to remove (2) hex screws holding black filter housing in place.
4. Remove filter housing.
5. Remove and discard existing foam filter element.
6. Replace with new foam filter element from replacement filter kit.
7. Replace black filter housing.
8. Secure filter housing with (2) hex screws using 5/32" hex key to tighten. Do not over-tighten.
9. Move compressor disconnect switch to ON.

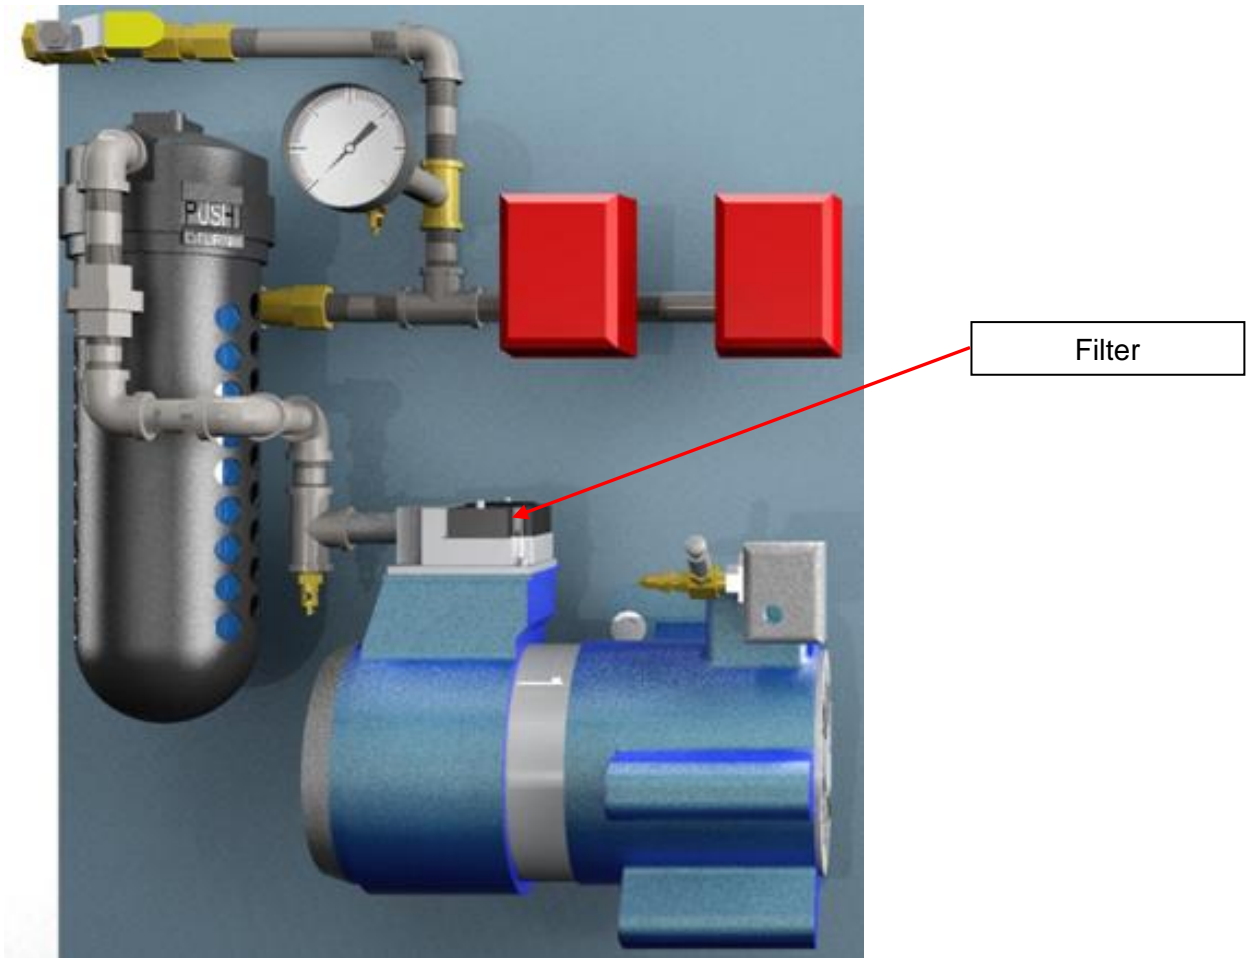


Figure 16 – Compressor Filter

5.3.3 When quarterly maintenance is complete, sign and date the Quarterly Maintenance Tag. Enter date when next quarterly maintenance is due.



**INSPECTION / MAINTENANCE CHECKLIST
STANDPIPE-PAC™ SUPERVISORY SYSTEM
UFS-236 REVISION 2.00 – PAGE 1 OF 2**



| | | | | | | |
|-------------|--|----------------------|--------------------|------|-----------------------|--|
| DATE | | Is this (check one): | Monthly Inspection | =or= | Quarterly Maintenance | |
|-------------|--|----------------------|--------------------|------|-----------------------|--|

| LOCATION INFORMATION | |
|-----------------------------|--|
| User | |
| Address 1 | |
| Address 2 | |
| City, State, Zip | |
| System | |

| | |
|---|--|
| STANDPIPE-PAC UNIT SERIAL NUMBER | |
|---|--|

| STEP | INTERVAL | PROCEDURE | OK | NOT OK |
|------|-----------|--|----|--------|
| 1 | Monthly | Is the unit installed in an area protected from outdoor elements? | | |
| 2 | Monthly | Is the unit installed in a heated area, and is the temperature over +32°F? | | |
| 3 | Monthly | Has the area where the unit is installed been checked for relative cleanliness? | | |
| | | Choose the phrase BEST describing the area where the unit is installed. | | |
| | | <div style="display: flex; justify-content: space-around;"> Relatively clean Somewhat dusty / dirty Very dusty / dirty Extremely dusty / dirty </div> | | |
| 4 | Monthly | Has the color of the desiccant in the air dryer been checked? | | |
| | | Indicate below which color is the makes up the MAJORITY of the desiccant: | | |
| | | <div style="display: flex; justify-content: space-around;"> DARK BLUE LIGHT BLUE PINK </div> | | |
| 5 | Quarterly | Has the air dryer desiccant been replaced with new desiccant? | | |
| 6 | Quarterly | Has the compressor inlet filter been replaced with a new filter? | | |
| 7 | Monthly | Has the Auxiliary Condensate Drain Device been properly used to remove water from the piping in the vicinity of the STANDPIPE-PAC™ ? | | |
| 8 | Quarterly | Has the HIGH PRESSURE signal been checked? | | |
| | | <div style="display: flex; justify-content: space-between;"> 1. Lockable shutoff valve CLOSED. 2. Compressor disconnect switch ON. </div> | | |
| | | <div style="display: flex; justify-content: space-between;"> 3. Operate test / service device. Signal horn should sound at 23±1 PSIG </div> | | |
| 9 | Quarterly | Has the LOW PRESSURE signal been checked? | | |
| | | <div style="display: flex; justify-content: space-between;"> 1. Lockable shutoff valve CLOSED. 2. Compressor disconnect switch OFF. </div> | | |
| | | <div style="display: flex; justify-content: space-between;"> 3. Operate test service device. Signal horn should sound at 7 ± 1 PSIG. </div> | | |
| 10 | Monthly | Has the unit been left with the GREEN visual indicator for AC POWER ON and all other visual indicators OFF ? | | |
| 11 | Monthly | Has the compressor disconnect switch been left ON ? | | |
| 12 | Monthly | Is the pressure gage indicating between 13 and 18 PSIG? | | |
| 13 | Monthly | Has the lockable outlet shutoff valve been left OPEN and locked? | | |
| 14 | Monthly | Is the manual release bleed valve at each fire department connection CLOSED with cap and chain connected and tight? | | |
| 15 | Monthly | Are all standpipe valves CLOSED ? | | |



INSPECTION / MAINTENANCE CHECKLIST
STANDPIPE-PAC™ SUPERVISORY SYSTEM
UFS-236 REVISION 2.00 – PAGE 2 OF 2



LIST ALL CORRECTIONS / REPAIRS MADE

LIST ALL CORRECTIONS / REPAIRS NEEDED

NOTES

| | PRINT NAME | SIGNATURE | DATE |
|-----------|------------|-----------|------|
| INSPECTOR | | | |
| CUSTOMER | | | |




EPS10 Series Alarm Pressure Switches

SPECIFICATIONS

| | |
|------------------------------|--------------------------------|
| Contact Ratings: | 10 A, 1/2 HP @ 125/250 VAC ~ |
| | 8 A, 125/250 VAC (LPCB only) |
| | 2.5A @ 6/12/24 VDC --- |
| Overall Dimensions: | See Figure 1 |
| Operating Temperature Range: | -40° to +160°F |
| Maximum Service Pressure: | 300 PSI |
| Maximum Adjustment Range: | 4 – 20 PSI |
| Enclosure Rating: | UL 4x — Indoor or Outdoor Use |
| | NEMA 4 — Indoor or Outdoor Use |
| | IP54 |
| Approximate Differential: | 3 PSI throughout range |

FIGURE 1. PRESSURE SWITCH BASIC DIMENSIONS:

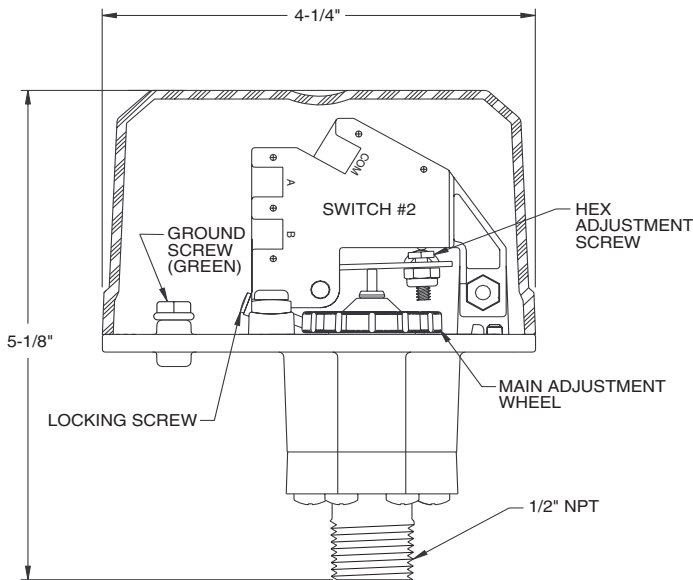

W0170-00

IMPORTANT

Please Read Carefully and Save

This instruction manual contains important information about the installation and operation of alarm pressure switches. Purchasers who install switches for use by others must leave this manual or a copy of it with the user.

Read all instructions carefully before installation, following only those instructions that apply to the model you are installing.

Before installing any alarm device, be thoroughly familiar with:

NFPA 72: *Installation, Maintenance, and Use of Protective Signaling Systems*

NFPA 13: *Installation of Sprinkler Systems*

NFPA 13A: *Inspection, Testing, and Maintenance of Sprinkler Systems*

Other applicable NFPA standards, local codes, and the requirements of the authority having jurisdiction.

Failure to follow these directions may result in failure of the device to report an alarm condition. System Sensor is not responsible for devices that have been improperly installed, tested, or maintained.



Do not use in potentially explosive atmospheres. Do not leave unused wires exposed.

OPERATION

As pressure changes, a diaphragm actuates 1 or 2 snap action switches. The pressure switch actuation is determined by adjustment settings.

INSTALLATION

1. Remove Cover
Cover is held on by two tamper resistant screws. (Removal key is enclosed with pressure switch.)
2. Mounting the Switch
The device is designed to be mounted in the upright or horizontal position; side mounting is also acceptable. Locate it where vibration, shock, and mechanical loading are minimal. Refer to piping diagram (Figure 2 on page 2).
 - a. Mount the device directly to the line via the 1/2" NPT pressure connection. The use of teflon pipe sealant tape is recommended. Be sure the fitting is tight enough to prevent leaks.
 - b. Apply tightening torque to the black plastic hex portion of device.

WARNING


High voltage. Electrocutation hazard. Do not handle live AC wiring or work on a device to which AC power is applied. Doing so may result in severe injury or death. When utilizing switches at voltages greater than 74 VDC --- or 49 VAC ~, means to provide all-pole disconnection must be incorporated in the field wiring, such as a circuit breaker.

3. Wire the device in accordance with the National Electrical Code. Two 7/8" diameter conduit connection holes have been provided in the mounting plate to accept standard 1/2" conduit fittings (one is removable knock-out type). If a NEMA 4/UL 4x (waterproof unit) is required, waterproof flexible metallic conduit and appropriate conduit fittings must be used. Recommended connectors are Thomas and Betts PN 5332 (180° coupling), PN 5352 (90° coupling), and PN 5262 seal ring.
4. Connect wiring to terminals (see Figure 3 and Table 1).

**TABLE 1. ELECTRICAL CONNECTIONS
(REFERENCED AT FACTORY SETTINGS):**

| | |
|--------------------------------------|---|
| MODEL EPS10-1 | |
| SWITCH AT 0 P.S.I. | |
| B | — |
| COM | — |
| A | — |
| SWITCH AT 4-8 P.S.I. (HIGH TRIP PT.) | |
| B | — |
| COM | — |
| A | — |
| SWITCH 1 | |

FIGURE 3. SWITCH TERMINALS:

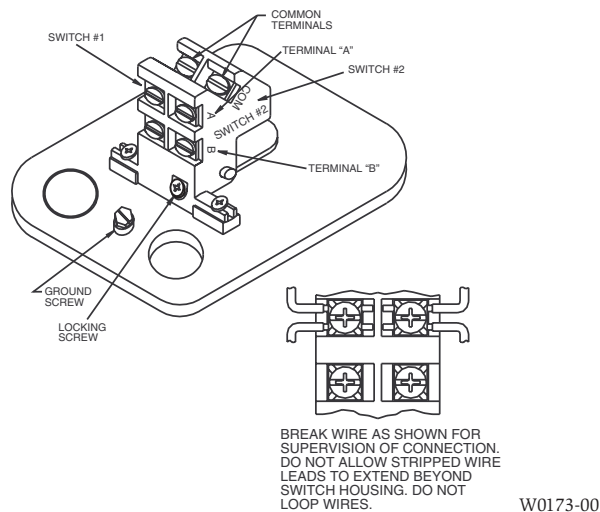

ADJUSTMENTS TO FACTORY SETTINGS

EPS10-1 devices are pre-adjusted at the factory to alarm at 4–8 PSI on rising pressure (see Table 2). Pressure switch settings may be adjusted in the field to obtain a different pressure alarm response from 4 PSI to 20 PSI. The switch has an override feature on the adjustment mechanism to prevent exceeding the 20 PSI max. setting of the switch. This override feature carries with it a tolerance band that may limit the upper adjustment to 16–20 PSI. Care must be used when setting the switch to ensure that the lower limit of 4 PSI is not exceeded. This will allow the switch to reset within the 3 PSI differential stated.

- 1. Install pressure switch as stated in “INSTALLATION” portion of instruction manual. Attach pressure test source to system.
- 2. Back off locking screw (see Figure 1) to allow main adjustment wheel to rotate freely.
- 3. Test trip point by slowly introducing pressure from the pressure test source. When trip point is found, reduce pressure to zero. Rotate main adjustment wheel (counterclockwise to increase pressure) and retest until switch trip point is at the desired pressure setting (4–20 PSI range).

- Each number represents an approximate trip point change of 0.2 PSI. One full rotation changes the trip point setting by approximately 2.5 PSI. A reset differential of approximately 3 PSI is typical throughout the entire adjustment range of switch.
- 4. Retest the set point several times to ensure accuracy of setting.
 - 5. Re-seat locking screw.

TABLE 2.

| MODEL | FACTORY SETTINGS (PSI) | | | |
|---------|------------------------|------------------|-----------------------|------------------|
| | Fall (Low Switch) | Approx. Reset | Rise (High Switch) | Approx. Reset |
| EPS10-1 | — | — | 4 – 8 | 3 PSI diff. |

NOTE: The sensor assembly is not field replaceable. Do not attempt to disassemble these parts. If you have any questions, consult System Sensor. System Sensor recommends careful consideration of the following factors when specifying and installing Alarm Pressure Switches. Always refer to the Installation and Maintenance Instruction for specific recommendations on individual devices before installing the unit.

- Electrical ratings stated in literature and on nameplates should not be exceeded.
- Overload on switch can cause failure on the first cycle. Always wire devices according to national and local electrical codes.
- Install units away from shock and vibration. Proper electrical fittings should be used to prevent moisture from entering the enclosure via the conduit.
- Test all devices for proper operation after initial installation. Perform preventive maintenance and periodic testing as required by the applicable NFPA standards but not less than bimonthly.
- Install a back-up control for all critical applications where control failure could endanger life or property. A backup control to serve as a high or low limit control is especially recommended for applications where a runaway condition could result.
- Do not mount unit where ambient temperatures will exceed published limits.
- Avoid impact or mechanical loading.

Please refer to insert for the Limitations of Fire Alarm Systems

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed pressure switch to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this pressure switch. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company’s obligation of this Warranty shall be limited to the repair or replacement of any part of the pressure switch which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor’s toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor, Return

Department, RA # _____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company’s negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

EPS40



APPENDIX B



**SYSTEM
SENSOR®**

3825 Ohio Avenue, St. Charles, Illinois 60174
1-800-SENSOR2, FAX: 630-377-6495
www.systemsensor.com

156-0986-008R

Supervisory Pressure Switches

SPECIFICATIONS

| | |
|------------------------------|---|
| Contact Ratings: | 10 A, 1/2 HP @ 125/250 VAC ~ |
| | 8A @ 125/250 VAC ~ (LPCB ONLY) |
| | 2.5A @ 6/12/24 VDC --- |
| Overall Dimensions: | See Figure 1 |
| Operating Temperature Range: | -40°F to +160°F |
| Maximum Service Pressure: | EPS40-1, 300 PSI |
| Adjustment Range: | EPS40-1, 10-100 PSI |
| Enclosure Rating: | UL 4x — Indoor or Outdoor Use NEMA 4 — Indoor or Outdoor Use IP54 |
| Approximate Differential: | EPS40-1, 3 PSI at 10 PSI 6 PSI at 100 PSI |

IMPORTANT

Please Read Carefully and Save

This instruction manual contains important information about the installation and operation of supervisory pressure switches. Purchasers who install switches for use by others must leave this manual or a copy of it with the user.

Read all instructions carefully before installation, following only those instructions that apply to the model you are installing.

Before installing any alarm device, be thoroughly familiar with:

- NFPA 72: National Fire Alarm Code
- NFPA 13: Installation of Sprinkler Systems
- NFPA 25: Inspection, Testing, and Maintenance of Water-based Fire Protection Systems
- NFPA 13D: Standard for 1 and 2 Family Dwellings and Manufactured Homes
- NFPA 13R: Standard for Multi-family Dwellings

Other applicable NFPA standards, local codes, and the requirements of the authority having jurisdiction.

Failure to follow these directions may result in failure of the device to report an alarm condition. System Sensor is not responsible for devices that have been improperly installed, tested, or maintained.



Do not use in potentially explosive atmospheres. Do not leave unused wires exposed.

OPERATION

As pressure changes, a diaphragm actuates 1 or 2 snap action switches. The pressure switch actuation is determined by adjustment settings.

INSTALLATION


1. Remove Cover
Cover is held on by two screws.
2. Mounting the Switch
The device is designed to be mounted in the upright position; side mounting is also acceptable. Locate it where vibration, shock, and mechanical loading are minimal. Refer to piping diagram above (Fig. 2 and 3).
 - a. Mount the device directly to the line via the 1/2" NPT pressure connection. The use of teflon pipe sealant tape is recommended. Be sure the fitting is tight enough to prevent leaks.
 - b. Apply tightening torque to the black plastic hex portion of the device.

WARNING

High voltage. Electrocution hazard. Do not handle live AC wiring or work on a device to which AC power is applied. Doing so may result in severe injury or death. When utilizing switches at voltages greater than 74 VDC --- or 49 VAC ~, means to provide all-pole disconnection must be incorporated in the field wiring, such as a circuit breaker.

3. Wire the device in accordance with the National Electrical Code. Two 7/8" diameter conduit connection holes have been provided in the mounting plate to accept standard 1/2" conduit fittings (one is removable knock-out type). If a NEMA 4/UL 4x (waterproof unit) is required, waterproof flexible metallic conduit and appropriate conduit fittings must be used. Recommended connectors are Thomas and Betts PN 5332 (180° coupling), PN 5352 (90° coupling), and PN 5262 seal ring.
 4. Connect wiring to terminals (see Figure 4 and Table 1).
- Adjustments to Factory Settings

FIGURE 1. PRESSURE SWITCH BASIC DIMENSIONS:

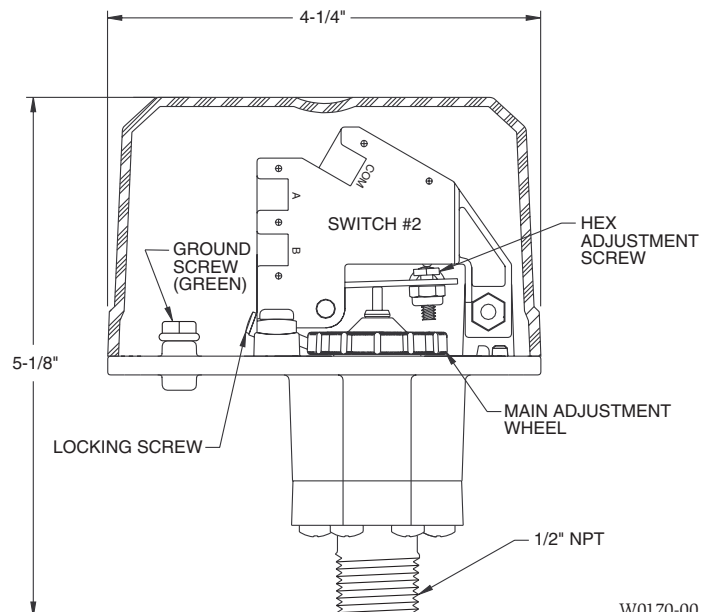

W0170-00


TABLE 2.

| MODEL | FACTORY SETTINGS (PSI) | | |
|---------|--------------------------|---------|-------------------------|
| | Fall SW2 (Low Switch) | Nominal | Rise SW1 (Hi Switch) |
| EPS40-1 | 30± 1.5 | 40 | — |

SINGLE-SWITCH MODEL — EPS40-1 AND EPS120-1

1. Install pressure switch as stated in “INSTALLATION” portion of instruction manual. Attach pressure test source to system.
2. Back off locking screw (see Fig. 4) to allow main adjustment wheel to rotate freely.
3. Test the switch for the set point by introducing 40 PSI pressure from the pressure test source for the EPS40-1
Decrease pressure slowly until the switch trips. Rotate main adjustment wheel, Figure 5, (counterclockwise to increase pressure) and retest by first introducing a higher pressure than desired and slowly reducing pressure until the switch trips. Repeat process until switch trip point is at desired pressure setting. Each number represents an approximate trip point change of 1.8 PSI for the EPS40-1
For each 1/2 rotation of the adjustment wheel, the trip point setting changes by approximately 11 PSI for the EPS40-1
4. Retest the set point several times to ensure accuracy of setting.
5. Re-seat locking screw.

FIGURE 4. SWITCH LOCATION:

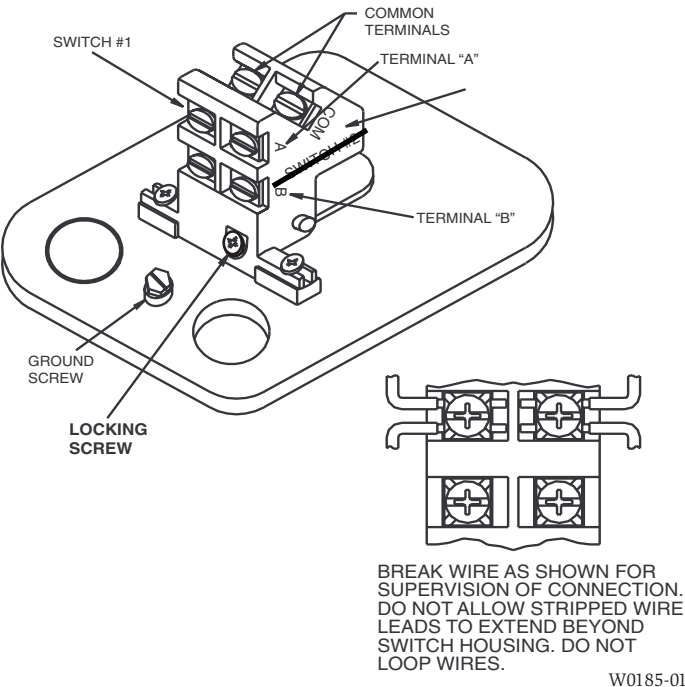

W0185-01

TABLE 1. ELECTRICAL CONNECTIONS (REFERENCED AT FACTORY SETTINGS):


| MODELS EPS40-1, EPS120-1 | MODELS EPS40-2, EPS120-2 |
|---|---|
| SWITCH AT NORMAL SYSTEM PRESSURE B COM A | SWITCHES AT LOW TRIP POINT B COM A |
| SWITCH AT TRIP POINT B COM A | SW1 SW2 |
| SWITCH 1 | SW1 SW2 |
| | SWITCHES AT NORMAL SYSTEM PRESSURE B COM A |
| | SW1 SW2 |
| | SWITCHES AT HIGH TRIP POINT B COM A |
| | SW1 SW2 |

W0186-00

NOTE: The sensor assembly is not field replaceable. Do not attempt to disassemble these parts. If you have any questions, consult System Sensor. System Sensor recommends careful consideration of the following factors when specifying and installing Alarm and Supervisory Pressure Switches. Always refer to the Installation and Maintenance Instruction for specific recommendations on individual devices before installing the unit.

- Electrical ratings stated in literature and on nameplates should not be exceeded.
- Overload on switch can cause failure on the first cycle. Always wire devices according to national and local electrical codes.
- Install units away from shock and vibration. Proper electrical fittings should be used to prevent moisture from entering the enclosure via the conduit.
- Test all devices for proper operation after initial installation. Perform preventive maintenance and periodic testing as required by the applicable NFPA standards but not less than bimonthly.
- Install a back-up control for all critical applications where control failure could endanger life or property. A backup control to serve as a high or low limit control is especially recommended for applications where a runaway condition could result.
- Do not mount unit where ambient temperatures will exceed published limits.
- Avoid impact or mechanical loading.

FIGURE 5. ADJUSTMENTS (DUAL-SWITCH MODEL SHOWN):

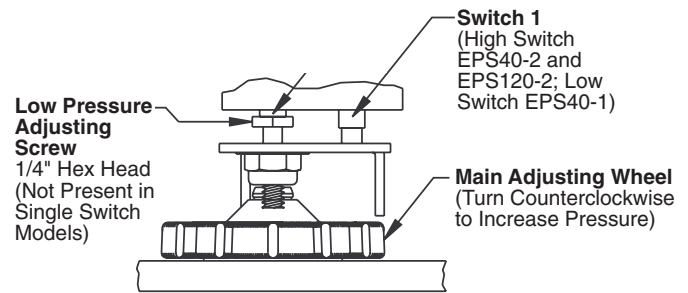

NOTE: Each 1/2 turn of Low Pressure adjusting screw adjusts pressure approximately 5 psi. Turn counter clockwise to increase pressure. Turn clockwise to decrease pressure. Each 1/2 turn of High Pressure adjusting wheel adjusts pressure 11 psi on the EPS40.

W0144-02

Please refer to insert for the Limitations of Fire Alarm Systems

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed pressure switch to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this pressure switch. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the repair or replacement of any part of the pressure switch which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor, Return

Department, RA # _____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

(THIS SURFACE DELIBERATELY LEFT BLANK)

WARNING

To avoid unpredictable system behavior that can cause personal injury and property damage:

- Disconnect electrical supply (when necessary) before installation, servicing, or conversion.
- Disconnect air supply and depressurize all air lines connected to this product before installation, servicing, or conversion.
- Operate within the manufacturer's specified pressure, temperature, and other conditions listed in these instructions.
- Medium must be moisture-free if ambient temperature is below freezing.
- Service according to procedures listed in these instructions.
- Installation, service, and conversion of these products must be performed by knowledgeable personnel who understand how pneumatic products are to be applied.
- After installation, servicing, or conversion, air and electrical supplies (when necessary) should be connected and the product tested for proper function and leakage. If audible leakage is present, or the product does not operate properly, do not put into use.
- Warnings and specifications on the product should not be covered by paint, etc. If masking is not possible, contact your local representative for replacement labels.

Safety Guide

For more complete information on recommended application guidelines, see the Safety Guide section of Pneumatic Division catalogs or you can download the **Pneumatic Division Safety Guide** at: www.wilkersoncorp.com

Description

Wilkerson Manual Dryers are intended to remove water vapor from the compressed air system. Atmospheric dew points as low as -100°F (-73°C) are achievable when operated within rated unit specifications.

General Safety Information

- **Release all air pressure from intended airline before installation.**
- Install unit in air line before opening desiccant container. After unit installation, add desiccant following steps in desiccant replacement instructions on page 2.
- Always make sure bowl, bowl guard, and clamp ring are in place and the clamp ring is securely locked before pressurization.
- DO NOT exceed the pressure and temperature ratings as shown in the specifications.
- Follow all local, state and federal EPA, OSHA, and similar codes regarding disposal of old desiccant.



X03 Plastic Bowl

Specifications

Maximum Pressure

150 psig (10.3 bar)

Maximum Temperature

125°F (52°C)

Atmospheric Dewpoint*

000 Model: Silica Gel

000 Model:

-45°F (-43°C)

Maximum Continuous Airflow*

10 scfm (4.7 dm³/s)

Total Airflow*

4400 scf (2076 dm³)

Total Min. of Operation @
Max Continuous Airflow

440 min.

Unit Weight With Desiccant

7.4 lbs. (3.4 kg)

of Desiccant Bags/Charge

2 Bags ***

Pipe Connections

1/4", 1/2" NPT (BSPP)

Installation

1. Refer to **WARNING** (on page 6).
2. Install as close as possible to the point where the air is being used.
3. Install unit with the airflow going in the direction of the arrow.

4. Install unit on air line before opening desiccant container. After installation, add desiccant. Shake and tap bowl while filling to settle desiccant. Fill Model X25 and X03/X04 to 1/8" below inner shoulder of bowl. Fill Model X06 bowl to within 1/2" of top.

5. Replace bowl and bowl guard, or metal bowl, and clamp ring onto the unit. Be sure clamp ring is securely locked in place before pressurizing unit.

6. Most manual desiccant dryer users will achieve optimal results when installing the dryer as close to the equipment or process being protected as possible in the compressed air system. Most users, especially those with high quality air requirements, should protect their system and the manual dryer with one or more of the following types of components:

Please see page 4 for exact model recommendations.

• **Liquid Separator:** Should be used prior to the manual desiccant dryer in any system where large slugs of liquid water are anticipated. The manual desiccant dryer silica gel or mole sieve can be destroyed by large amounts of liquid moisture. Most systems which have an aftercooler and separator, and/or a refrigerated air dryer, will not require a liquid separator. An alternative is to use a particulate filter/separator, described below.

• **Particulate Filter/Separator:** Should be used prior to the manual desiccant dryer in any system where significant amounts of dirt, pipe scale, etc, and/or liquid water, is present, in order to prevent clogging the manual dryer or harming the desiccant. A particulate filter/separator should be used prior to a coalescing filter to extend the life of the coalescing element.

*** Each bag weighs .88 lbs. (.40kg)

Models X06, X03, X04, and X25

d. See replacement parts list for specifics on kit numbers for replacement desiccant.

3. Desiccant regeneration:

a. — For silica gel ("000") units: Pour out used Pink desiccant onto flat pan. Place Pink desiccant in 350°F (176°C) oven for approximately three hours or until the desiccant color has changed back to Blue.

b. Remove desiccant from oven and allow to cool down to ambient temperature.

c. Pour desiccant back into unit bowl, periodically shaking and tapping to settle the desiccant.

4. Replace bowl and bowl guard, or metal bowl, and clamp ring onto the unit. Be sure clamp ring is securely locked in place before repressurizing the unit.

Operation

1. The silica gel desiccant, when visible through the clear polycarbonate plastic bowl, contains a color indicator. It changes from Blue (meaning dry) to Pink (meaning wet) to indicate the need to replace or regenerate the desiccant.

Maintenance

1. The only servicing required for silica gel units is when the desiccant color or moisture indicator has changed from Blue (meaning dry) to Pink (meaning wet). Should this color change occur:
 - a. Turn off and depressurize the line containing the dryer unit.
 - b. Loosen the clamp ring and remove the bowl from the top housing. (Figure 1) Proceed to step 2 or 3, as required.
2. Desiccant replacement:
 - a. Pour out used desiccant.
 - b. Open new container and refill bowl. (Figure 2)
 - c. Shake or tap bowl to settle desiccant. Add or remove sufficient quantity to fill Model X03 unit bowl to 1/8" below inner step,

Figure 1

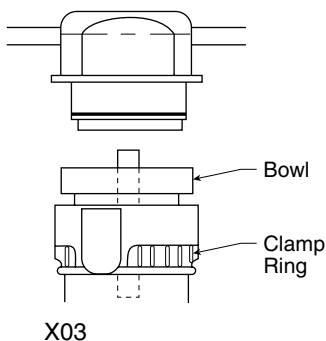


Figure 2


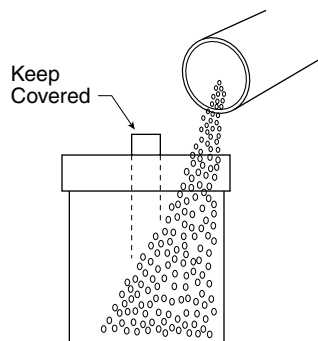


Figure 3

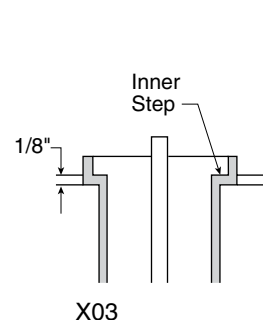

CAUTION

Polycarbonate bowls, being transparent and tough, are ideal for use with Filters and Lubricators. They are suitable for use in normal industrial environments, but should not be located in areas where they could be subjected to direct sunlight, an impact blow, nor temperatures outside of the rated range. As with most plastics, some chemicals can cause damage. Polycarbonate bowls should not be exposed to chlorinated hydrocarbons, ketones, esters and certain alcohols. They should not be used in air systems where compressors are lubricated with fire-resistant fluids such as phosphate ester and di-ester types.

Metal bowls are recommended where ambient and/or media conditions are not compatible with polycarbonate bowls. Metal bowls resist the action of most such solvents, but should not be used where strong acids or bases are present or in salt laden atmospheres. Consult the factory for specific recommendations where these conditions exist.

TO CLEAN POLYCARBONATE BOWLS USE MILD SOAP AND WATER ONLY! DO NOT use cleansing agents such as acetone, benzene, carbon tetrachloride, gasoline, toluene, etc., which are damaging to this plastic.

Bowl guards are recommended for added protection of polycarbonate bowls where chemical attack may occur.

WARNING

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from The Company, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application, including consequences of any failure and review the information concerning the product or systems in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by The Company and its subsidiaries at any time without notice.



EXTRA COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FOR INCLUSION IN EQUIPMENT / MAINTENANCE MANUALS THAT UTILIZE THESE PRODUCTS. CONTACT YOUR LOCAL REPRESENTATIVE.

Replacement Parts List — TRANSPARENT BOWL Units with Bowl Guards

| Description | Part No. | X03 Qty. |
|---|--|--|
| 1 Cover | NNR | — |
| 2 Screen Assembly | NNR | 1 |
| 3 Bowl O-Ring | GRP-95-256 | 1 |
| 4 Tube Assembly w/screen | DRP-96-435 | 1 |
| 5 Transparent Bowl | GRP-95-871 | 1 |
| 6 Silica Gel (000) 4A Molecular Sieve (U00) 13x Molecular Sieve (X00) Environment Friendly (E00) | DRP-85-059 DRP-85-060 DRP-85-061 DRP-85-447 | 8 Bags / 7 lbs. 8 Bags / 7 lbs. 8 Bags / 7 lbs. 8 Bags / 7 lbs. |
| 7 Bowl Guard | DRP-95-810 | 1 |
| 8 Clamp Ring | GRP-96-404 | 1 |

FLOW → (all units)

MODEL X03/X04 WITH
TRANSPARENT BOWL

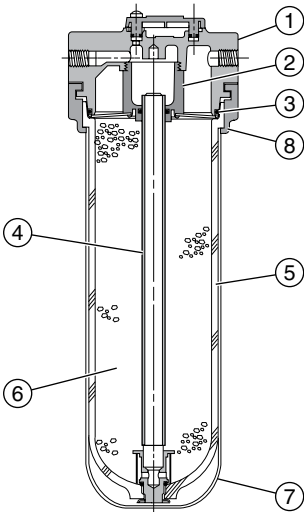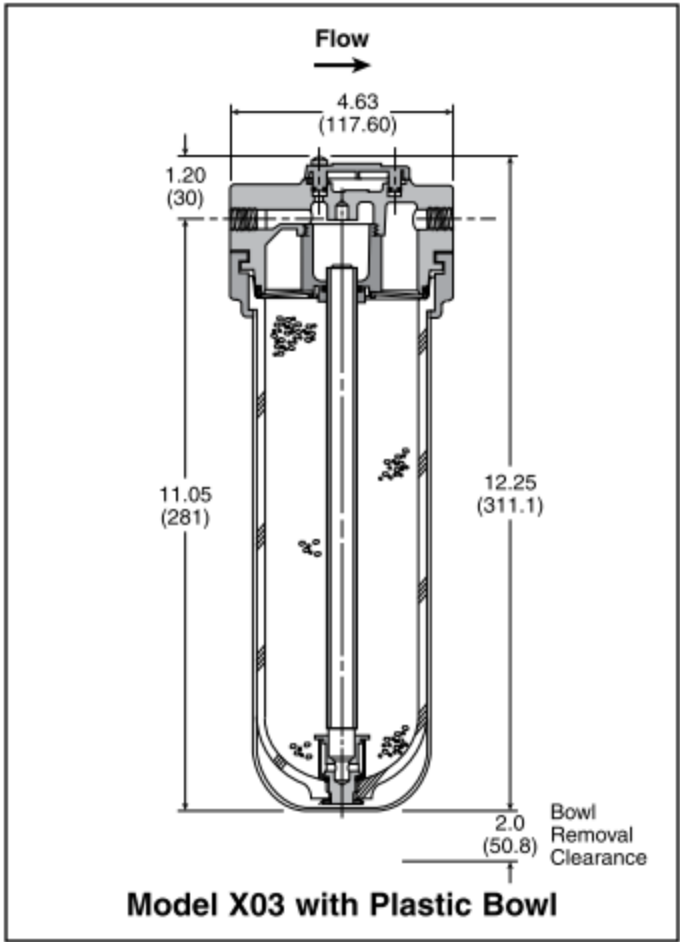

WILKERSON WARRANTY

Wilkerson products are warranted to be free from defects in material and workmanship, under proper use, installation, application and maintenance in accordance with Wilkerson's written recommendations and specification for a period of one year from the date of shipment from the factory (refrigerated dryers are warranted for 2 years). Wilkerson's obligation under this warranty is limited to, and the sole remedy for any such defect shall be, the repair or replacement (at Wilkerson's option) of unaltered products returned to Wilkerson and proven to have such defect, provided such defect is promptly reported to Wilkerson within said one-year period.

This is the only authorized Wilkerson Warranty and is in lieu of all other express or implied warranties or representations, including any implied warranties of merchantability or fitness, or of any other obligations on the part of Wilkerson.

Warranty claims must be submitted and shall be processed in accordance with Wilkerson's established warranty claim procedure. In no event will Wilkerson be liable for business interruptions, loss of profits, personal injury, costs of delay or for any other special, indirect, incidental or consequential losses, cost or damages.

WARNING: USE LIMITATIONS

Wilkerson's warranties are void, and Wilkerson assumes no responsibility for any resulting cost, loss, injury or any other damages whatsoever, with respect to any plastic bowl unit for which a bowl guard is standard equipment if the unit is placed in service without the bowl guard and, except as otherwise specified in writing by Wilkerson, with respect to any Wilkerson products which are used in other than compressed air service. Specific warnings with respect to these and other use limitations appear elsewhere in this catalog.

Wilkerson maintains a policy of ongoing product development and improvement. We therefore reserve the right to change dimensions specification and design without notice.

DO NOT PLACE PLASTIC BOWL UNIT IN SERVICE WITHOUT BOWL GUARD INSTALLED

Plastic bowl units are sold only with bowl guards with the exception to miniature units (C04, F00, L00, and M00). To minimize the danger of flying fragments in the event of plastic bowl failure, the bowl guards should not be removed. If the unit is in service without the bowl guard installed, manufacturer's warranties are void, and the manufacturer assumes no responsibility for any resulting loss.

If the unit has been in service and does not have a bowl guard, order one and install before placing back in service.

CAUTION

Certain compressor oils, chemicals, household cleaners, solvents, paints and fumes will attack plastic bowls and can cause bowl failure. Do not use near these materials. When bowl becomes dirty replace bowl or wipe only with a clean, dry cloth. Reinstall bowl guard or buy and install a bowl guard. Immediately replace any crazed, cracked, damaged or deteriorated plastic bowl with a bowl or a new plastic bowl and bowl guard.

CAUTION

Except as otherwise specified by the manufacturer, this product is specifically designed for compressed air service, and use with any other fluid (liquid or gas) is a misapplication. For example, use with or injection of certain hazardous liquids or gases in the system (such as alcohol or liquid petroleum gas) could be harmful to the unit or result in a combustible condition or hazardous external leakage. Before using with fluids other than air, or for non-industrial applications, or for life support systems, consult Wilkerson Corporation for written approval.

SOME OF THE MATERIALS THAT WILL ATTACK POLYCARBONATE PLASTIC BOWLS.

| | | |
|----------------------------------|----------------------------|------------------------------|
| Acetaldehyde | Chlorobenzene | Methylene chloride |
| Acetic acid (conc.) | Chloroform | Methylene salicylate |
| Acetone | Cresol | Milk of lime (CaOH) |
| Acrylonitrile | Cyclohexanol | Nitric acid (conc.) |
| Ammonia | Cyclohexanone | Nitrobenzene |
| Ammonium fluoride | Cyclohexene | Nitrocellulose lacquer |
| Ammonium hydroxide | Dimethyl formamide | Phenol |
| Ammonium sulfide | Diozane | Phosphorous hydroxy chloride |
| Anaerobic adhesives and sealants | Ethgane tetrachloride | Phosphorous trichloride |
| Antifreeze | Ethyl acetate | Propionic acid |
| Benzene | Ethyl ether | Pyridine |
| Benzoic acid | Ethylamine | Sodium hydroxide |
| Benzyl alcohol | Ethylene chlorohydrin | Sodium sulfide |
| Brake fluids | Ethylene dichloride | Styrene |
| Bromobenzene | Ethylene glycol | Sulfuric acid (conc.) |
| Butyric acid | Formic acid (conc.) | Sulphural chloride |
| Carbolic acid | Freon (refrig. & Propell.) | Tetrahydronaphthalene |
| Carbon disulfide | Gasoline (high aromatic) | Tiophene |
| Carbon tetrachloride | Hydrazine | Toluene |
| Caustic potash solution | Hydrochloric acid (conc.) | Turpentine |
| Caustic soda solution | Lacquer thinner | Xylene |
| | Methyl alcohol | Perchlorethylene & Others |

TRADE NAMES OF SOME COMPRESSOR OILS, RUBBER COMPOUNDS AND OTHER MATERIALS THAT WILL ATTACK POLYCARBONATE PLASTIC BOWLS.

| | |
|---|------------------------------------|
| Atlas "Perma-Guard" | National Compound #N11 |
| Buna N | "Nylock" VC-3 |
| Cellulube #150 and #220 | Parco #1306 Neoprene |
| Crylex #5 cement | *PermaBond 910 |
| *Eastman 910 | Petron PD287 |
| Garlock #98403 (polyurethane) | Prestone |
| Haskel #568-023 | Pydraul AC |
| Hilgard Co.'s hil phene | Sears Regular Motor Oil |
| Houghton & Co. oil #1120, #1130 & #1055 | Sinclair oil "Lily White" |
| Houtosafe 1000 | Stauffer Chemical FYRQUEL #150 |
| Kano Kroil | Stillman #SR 269-75 (polyurethane) |
| Keystone penetrating oil #2 | Stillman #SR 513-70 (neoprene) |
| *Loctite 271 | Tannergas |
| *Loctite 290 | Telar |
| *Loctite 601 | Tenneco anderol #495 & #500 oils |
| *Loctite Teflon-Sealant | Titon |
| Marvel Mystery Oil | *Vibra-tite |
| Minn. Rubber 366Y | Zerex |

***When in raw liquid form.**

We cannot possibly list all harmful substances, so check with Mobay or the General Electric office for further information on polycarbonate plastic.

The trade names "EconOmist" and "Flow-Guide" are registered at the United States Patent Office. "Auto-Fill", "Dial-Air", "Flex-Drain", "Mainliner" and "Whirl-Flo" are trade names of the Wilkerson Corporation.

WILKERSON PRODUCTS ARE PROTECTED BY THE FOLLOWING U.S. PATENT AND PATENTS IN OTHER COUNTRIES, ADDITIONAL PATENTS ARE PENDING.

| | | | |
|-----------|-----------|-----------|-----------|
| 3,631,878 | 3,667,493 | 3,762,224 | 4,215,790 |
| 4,215,790 | 3,793,803 | 4,718,245 | 3,793,803 |
| 3,858,403 | D-292-310 | D-229-629 | 4,215,790 |
| 4,289,335 | 4,352,511 | 4,559,065 | 4,631,073 |
| 4,689,969 | 4,696,320 | 3,889,484 | 3,945,465 |
| 4,631,073 | D-234-848 | | |

WILKERSON®

Customer/Technical Service
Pneumatic Division
Richland, MI 49083

Tel: (269) 629-2550
Fax: (269) 629-2475

Fire Alarm Communicator 411UDAC Manual

Fire Alarm & Emergency Communication System Limitations

While a life safety system may lower insurance rates, it is not a substitute for life and property insurance!

An automatic fire alarm system—typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control panel (FACP) with remote notification capability—can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire.

An emergency communication system—typically made up of an automatic fire alarm system (as described above) and a life safety communication system that may include an autonomous control unit (ACU), local operating console (LOC), voice communication, and other various interoperable communication methods—can broadcast a mass notification message. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire or life safety event.

The Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premises following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in the Guide for Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. This document can be found at <http://www.systemsensor.com/appguides/>. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off in as many as 35% of all fires. While fire alarm systems are designed to provide early warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons:

Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in or behind walls, on roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level or floor of a building. A second-floor detector, for example, may not sense a first-floor or basement fire.

Particles of combustion or "smoke" from a developing fire may not reach the sensing chambers of smoke detectors because:

- Barriers such as closed or partially closed doors, walls, chimneys, even wet or humid areas may inhibit particle or smoke flow.
- Smoke particles may become "cold," stratify, and not reach the ceiling or upper walls where detectors are located.
- Smoke particles may be blown away from detectors by air outlets, such as air conditioning vents.
- Smoke particles may be drawn into air returns before reaching the detector.

The amount of "smoke" present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.

Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast-flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.

Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially in bedrooms), smoking in bed, and violent explosions

(caused by escaping gas, improper storage of flammable materials, etc.).

Heat detectors do not sense particles of combustion and alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Rate-of-rise heat detectors may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. Heat detectors are designed to protect property, not life.

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, compromising its ability to report a fire.

Audible warning devices such as bells, horns, strobes, speakers and displays may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. Any warning device may fail to alert people with a disability or those who have recently consumed drugs, alcohol, or medication. Please note that:

- An emergency communication system may take priority over a fire alarm system in the event of a life safety emergency.
- Voice messaging systems must be designed to meet intelligibility requirements as defined by NFPA, local codes, and Authorities Having Jurisdiction (AHJ).
- Language and instructional requirements must be clearly disseminated on any local displays.
- Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
- Studies have shown that certain people, even when they hear a fire alarm signal, do not respond to or comprehend the meaning of the signal. Audible devices, such as horns and bells, can have different tonal patterns and frequencies. It is the property owner's responsibility to conduct fire drills and other training exercises to make people aware of fire alarm signals and instruct them on the proper reaction to alarm signals.
- In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

A life safety system will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time and only if the batteries have been properly maintained and replaced regularly.

Equipment used in the system may not be technically compatible with the control panel. It is essential to use only equipment listed for service with your control panel.

Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily disabled. For added protection against telephone line failure, backup radio transmission systems are recommended.

The most common cause of life safety system malfunction is inadequate maintenance. To keep the entire life safety system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations, and UL and NFPA standards. At a minimum, the requirements of NFPA 72 shall be followed. Environments with large amounts of dust, dirt, or high air velocity require more frequent maintenance. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be scheduled monthly or as required by National and/or local fire codes and should be performed by authorized professional life safety system installers only. Adequate written records of all inspections should be kept.

Limit-D-1-12013

Installation Precautions

Adherence to the following will aid in problem-free installation with long-term reliability:

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until manuals are read and understood.

CAUTION - System Re-acceptance Test after Software Changes: To ensure proper system operation, this product must be tested in accordance with NFPA 72 after any programming operation or change in site-specific software. Re-acceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring. All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified.

This system meets NFPA requirements for operation at 0-49° C/32-120° F and at a relative humidity . However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and its peripherals be installed in an environment with a normal room temperature of 15-27° C/60-80° F.

Verify that wire sizes are adequate for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage.

Like all solid state electronic devices, this system may operate erratically or can be damaged when subjected to lightning induced transients. Although no system is completely immune from lightning transients and interference, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered.

Disconnect AC power and batteries prior to removing or inserting circuit boards. Failure to do so can damage circuits.

Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, or printed circuit board location.

Do not tighten screw terminals more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal.

This system contains static-sensitive components.

Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. FACP operation and reliability depend upon proper installation.

Precau-D1-9-2005

FCC Warning

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause interference to radio communications. It has been tested and found to comply with the limits for class A computing devices pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when devices are operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his or her own expense.

Canadian Requirements

This digital apparatus does not exceed the Class A limits for radiation noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

HARSH™, NIS™, and NOTI-FIRE-NET™ are all trademarks; and Acclimate® Plus, ECLIPSE®, Filtrex®, FlashScan®, NION®, NOTIFIER®, ONYX®, ONYXWorks®, Pinnacle®, UniNet®, VeriFire®, and VIEW® are all registered trademarks of Honeywell International Inc. Echelon® is a registered trademark and LonWorks™ is a trademark of Echelon Corporation. ARCNET® is a registered trademark of Datapoint Corporation. Microsoft® and Windows® are registered trademarks of the Microsoft Corporation.

©2014 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.

Software Downloads

In order to supply the latest features and functionality in fire alarm and life safety technology to our customers, we make frequent upgrades to the embedded software in our products. To ensure that you are installing and programming the latest features, we strongly recommend that you download the most current version of software for each product prior to commissioning any system. Contact Technical Support with any questions about software and the appropriate version for a specific application.

Documentation Feedback

Your feedback helps us keep our documentation up-to-date and accurate. If you have any comments or suggestions about our online Help or printed manuals, you can email us.

Please include the following information:

- Product name and version number (if applicable)
- Printed manual or online Help
- Topic Title (for online Help)
- Page number (for printed manual)
- Brief description of content you think should be improved or corrected
- Your suggestion for how to correct/improve documentation

Send email messages to:

FireSystems.TechPubs@honeywell.com

Please note this email address is for documentation feedback only. If you have any technical issues, please contact Technical Services.

Table of Contents

| | |
|--|-----------|
| Section 1: Product Description | 10 |
| 1.1: Product Features | 10 |
| 1.2: Specifications..... | 12 |
| 1.3: Circuits..... | 13 |
| 1.3.1: Channels/Inputs | 13 |
| 1.3.2: Notification Appliance Circuit | 13 |
| 1.3.3: Output Circuits | 13 |
| 1.3.4: Auxiliary Relays..... | 13 |
| 1.3.5: Earth Ground | 13 |
| 1.4: Controls and Indicators..... | 14 |
| 1.5: Components and Accessories | 15 |
| 1.6: Digital Communicator Operation | 15 |
| 1.7: Panel Configuration..... | 16 |
| 1.8: Operational Modes..... | 16 |
| 1.8.1: Normal Mode..... | 16 |
| 1.8.2: Real Time Clock Mode..... | 16 |
| 1.8.3: Program Mode | 16 |
| 1.8.4: Troubleshoot Mode..... | 16 |
| 1.8.5: Default Mode..... | 16 |
| 1.9: Telephone Requirements and Warnings..... | 17 |
| 1.9.1: Telephone Circuitry - PH1 & PH2 | 17 |
| 1.9.2: Digital Alarm Communicator:..... | 17 |
| 1.9.3: Telephone Company Rights and Warnings..... | 17 |
| Section 2: Installation..... | 18 |
| 2.1: Mounting Options | 18 |
| 2.2: Mounting..... | 18 |
| Backbox Mounting | 18 |
| Main Circuit Board Mounting | 18 |
| 2.3: Operating Power | 20 |
| Primary Power Source (AC) and Earth Ground Connections | 20 |
| Secondary Power Source (batteries)..... | 21 |
| 2.4: Input Channels | 22 |
| 2.5: Output Circuits..... | 25 |
| Notification Appliance Circuit | 25 |
| Relay Programming..... | 26 |
| 2.6: Telephone Circuits | 27 |
| 2.7: Optional Programmer | 28 |
| 2.8: UL Power-limited Wiring Requirements..... | 29 |
| Section 3: Modes of Operation | 30 |
| 3.1: Normal Mode..... | 30 |
| 3.1.1: Programmer Key Functions..... | 31 |
| MODE KEY | 31 |
| LAMP TEST KEY | 31 |
| 1st EVENT KEY | 32 |
| DOWN ARROW | 32 |
| UP ARROW | 32 |
| ENTER/STORE | 32 |
| 3.1.2: Programmer Display..... | 32 |
| 3.2: Password Creation and Entry..... | 32 |
| 3.3: Real Time Clock Mode..... | 33 |
| 3.4: Program Mode | 34 |
| 3.4.1: DACT Programming | 36 |
| Primary Central Station Phone Number (00 - 19)..... | 36 |

| | |
|---|----|
| Primary Central Station Number Communication Format (20) | 36 |
| Event Codes - Setting Entries | 37 |
| Ademco Contact ID Format Primary Central Station Event Codes | 37 |
| 4+2 Standard and 4+2 Express Formats Primary Central Station Event Codes | 38 |
| All 3+1, 4+1 and 4+2 Expanded Formats Primary Central Station Event Codes | 39 |
| Primary Central Station Number Account Code (21 - 24) | 40 |
| Primary Central Station Number 24 Hour Test Time (25 - 28) | 40 |
| Primary Central Station Number 24/12/8/6 Hour Test Time Interval (29) | 40 |
| Secondary Central Station Phone Number (30 - 49) | 40 |
| Secondary Central Station Number Communication Format (50) | 41 |
| Ademco Contact ID Format Secondary Central Station Event Codes | 42 |
| 4+2 Standard and 4+2 Express Formats Secondary Central Station Event Codes | 43 |
| All 3+1, 4+1 and 4+2 Expanded Formats Secondary Central Station Event Codes | 44 |
| Secondary Central Station Number Account Code (51 - 54) | 45 |
| Secondary Central Station Number 24 Hour Test Time (55 - 58) | 45 |
| Secondary Central Station Number 24/12/8/6 Hour Test Time Interval (59) | 45 |
| AC Loss Reporting Delay (60) | 45 |
| Backup Reporting (61) | 45 |
| Reserved for Future Use (62) | 45 |
| DACT Trouble Reminder (63) | 45 |
| Operational Mode Selection (64) | 45 |
| Input Channel 1 Function Selection (65) | 46 |
| Input Channel 2 Function Selection (66) ¹ | 46 |
| Input Channel 3 Function Selection (67) ¹ | 46 |
| Input Channel 4 Function Selection (68) ¹ | 46 |
| Input Channel 1 Delay Timer (69 - 71) | 46 |
| Input Channel 2 Delay Timer (72 - 74) ² | 46 |
| Input Channel 3 Delay Timer (75 - 77) | 47 |
| Input Channel 4 Delay Timer (78 - 80) ¹ | 47 |
| Touchtone/Rotary Select for Primary Phone (81) | 47 |
| Make/Break Ratio for Primary Phone (82) | 47 |
| Touchtone/Rotary Select for Secondary Phone (83) | 47 |
| Make/Break Ratio for Secondary Phone (84) | 47 |
| Output Relay #1 Enable (85) | 47 |
| Output Relay #1 Function Selections (86) | 47 |
| Output Relay #2 Enable (87) | 47 |
| Output Relay #2 Function Selections (88) | 48 |
| Reserved for Future Use (89) | 48 |
| Panel Unlock (90) | 48 |
| Alarm Verification Enable (91) | 48 |
| Silence Inhibit Notification Appliance Circuit (92) | 49 |
| Autosilence Notification Appliance Circuit (93) | 49 |
| Restoral Method (94) | 49 |
| Coding, Notification Appliance Circuit (95) | 50 |
| Trouble Call Limit - Dialer Runaway Prevention (96) | 50 |
| Panel Identification Number (97 - 100) | 50 |
| Service Terminal 1 Phone Number (101 - 120) | 51 |
| Ring Count on Primary Phone Line (121 - 122) | 51 |
| FAX/Answer Machine, Primary Phone Line (123) | 51 |
| Service Terminal 2 Phone Number (124 - 143) | 51 |
| Upload/Download Reports Sent to Secondary Central Station Phone #, Backup or Always (144) | 51 |
| Programming Event Code Settings (145 - 312) | 51 |
| 3.5: Default Mode | 51 |
| 3.6: Troubleshoot Mode | 52 |
| Channel/Inputs | 52 |
| AC Line | 52 |
| Notification Appliance Circuit | 52 |

| | |
|--|-----------|
| Telephone Line Testing | 53 |
| Section 4: Central Station Communications | 54 |
| 4.1: Transmittal Priorities | 57 |
| 4.2: Ademco Contact ID Format Event Code Description | 57 |
| Section 5: Remote Site Upload/Download | 60 |
| 5.1: General | 60 |
| 5.1.1: Security Features | 61 |
| Secret Code Verification | 61 |
| Panel Unlock | 61 |
| Time-out at 411UDAC | 61 |
| Callback to Service Terminal | 62 |
| Error Checking | 62 |
| Central Station Acknowledge | 62 |
| Data Protection/Integrity | 62 |
| 5.2: Downloading to the Communicator | 62 |
| 5.3: Uploading From the Communicator | 62 |
| 5.4: Simultaneous Data Transfers | 63 |
| Section 6: Battery Calculations | 64 |
| 6.1: 411UDAC Power Supply | 65 |
| Appendix A: Programming Sheets | 66 |
| A.1: Digital Communicator Options Program Sheets | 66 |
| A.2: Digital Communicator Options Program Sheet (Factory Defaults) | 68 |
| Appendix B: Event Codes/Transmission Format Programming Sheets | 70 |
| B.1: 4+2 Standard & 4+2 Express Formats <u>Primary</u> Central Station | 70 |
| B.2: 4+2 Standard & 4+2 Express Formats <u>Secondary</u> Central Station | 70 |
| B.3: 4+2 Standard & 4+2 Express Formats <u>Primary</u> Central Station | 71 |
| B.4: 4+2 Standard & 4+2 Express Formats <u>Secondary</u> Central Station | 71 |
| B.5: All 3+1, All 4+1 and 4+2 Expanded Formats for <u>Primary</u> Central Station | 72 |
| B.6: All 3+1, All 4+1 and 4+2 Expanded Formats for <u>Secondary</u> Central Station | 72 |
| B.7: All 3+1, All 4+1 and 4+2 Expanded Formats for <u>Primary</u> Central Station (Factory Defaults) | 72 |
| B.8: All 3+1, All 4+1 and 4+2 Expanded Formats for <u>Secondary</u> Central Station (Factory Defaults) | 72 |
| B.9: Ademco Contact ID Format <u>Primary</u> Central Station | 73 |
| B.10: Ademco Contact ID Format <u>Secondary</u> Central Station | 73 |
| B.11: Ademco Contact ID Format <u>Primary</u> Central Station (Factory Defaults) | 74 |
| B.12: Ademco Contact ID Format <u>Secondary</u> Central Station (Factory Defaults) | 74 |
| Appendix C: Ademco Contact ID Format Event Code Description | 75 |
| Appendix D: Events and Default Event Codes | 79 |
| Appendix E: Operational Modes | 80 |
| Index | 81 |

This digital communicator/transmitter has been designed to comply with standards set forth by the following regulatory agencies:

- Underwriters Laboratories
- NFPA National Fire Protection Association

Before proceeding, the installer should be familiar with the following documents.



NFPA Standards

Central Station Signaling Systems Protected Premises Unit (Automatic, Manual and Waterflow)

Proprietary Fire Alarm Systems (Protected Premises Unit)

Remote Station Fire Alarm Systems

Automatic Fire Detectors

Installation, Maintenance and Use of Notification Appliances for Fire Alarm Systems

Inspection, Testing and Maintenance for Fire Alarm Systems



Underwriters Laboratories Documents:

UL 217 Smoke Detectors, Single and Multiple Station

UL 268 Smoke Detectors for Fire Protective Signaling Systems

UL 346 Waterflow Indicators for Fire Protective Signaling Systems

UL 464 Audible Signaling Appliances

UL 521 Heat Detectors for Fire Protective Signaling Systems

UL 864 Standard for Control Units for Fire Protective Signaling Systems

UL 1481 Power Supplies for Fire Protective Signaling Systems

UL 1635 Digital Alarm Communicator System Units

UL 1638 Visual Signaling Appliances

UL 1971 Signaling Devices for Hearing Impaired

Other:

NEC Article 250 Grounding


NEC Article 300 Wiring Methods

NEC Article 760 Fire Protective Signaling Systems

Applicable Local and State Building Codes

Requirements of the Local Authority Having Jurisdiction (LAHJ)

This product has been certified to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, 9th Edition. Operation of this product with products not tested for UL 864, 9th Edition has not been evaluated. Such operation requires the approval of the local Authority Having Jurisdiction (AHJ).

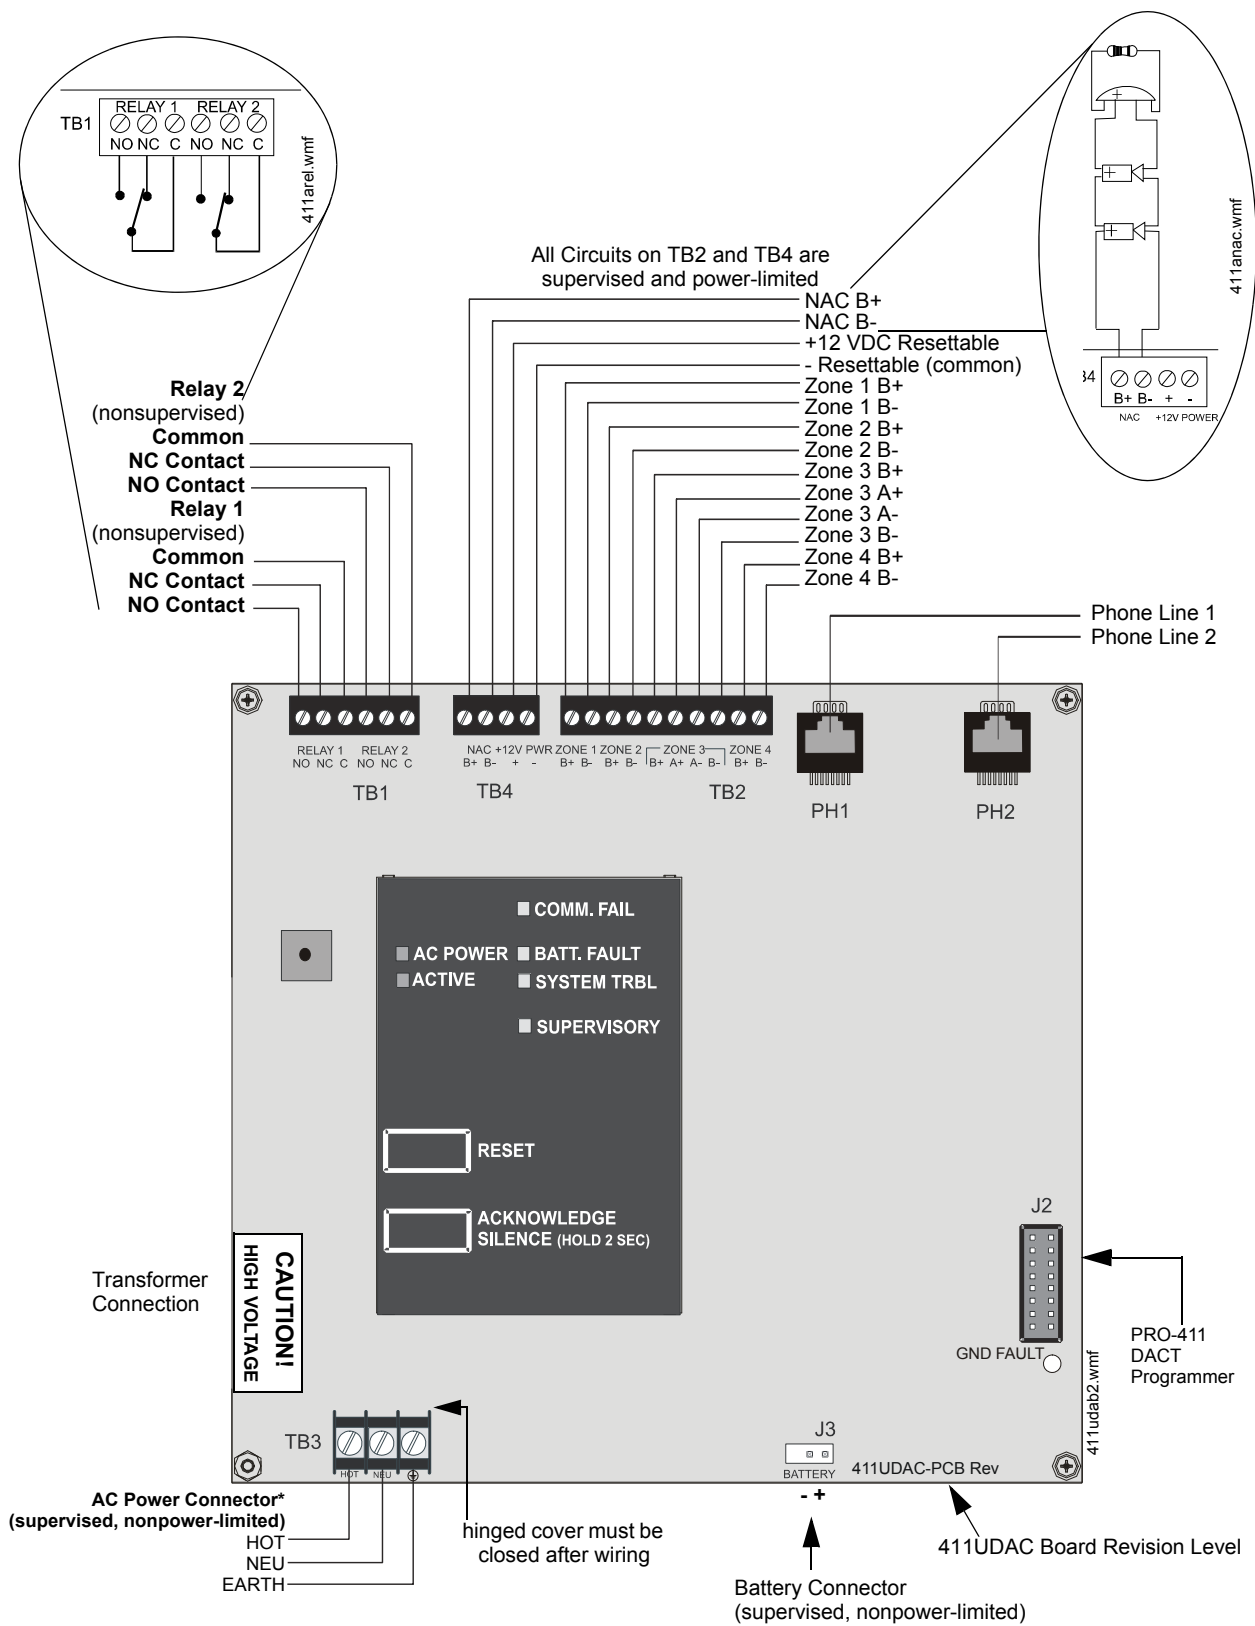

CAUTION: AC POWER TERMINAL LAYOUT CHANGE

USE CAUTION WHEN WIRING AC POWER TO THE 411UDAC AS TERMINAL LAYOUT HAS CHANGED ON TB3!!

Section 1: Product Description

The 411UDAC is a fire alarm communicator with four input/channels and dual telephone lines. The four inputs use conventional input devices. The 411UDAC accepts waterflow devices, two-wire smoke detectors, four-wire smoke detectors, pull stations and other normally-open contact devices. The unit also supervises AC voltage, telephone line input voltage/current, battery level and battery charger operation.

Outputs include one supplementary NAC (Notification Appliance Circuit), two programmable Form-C relays and 12 VDC resettable special application power. The 411UDAC interfaces with the public switched telephone network and is compatible with most central station receivers. A total of fifteen popular communications formats are supported, including the industry standard Ademco Contact ID. *The communicator also contains a unique DACT option that eliminates 'dialer runaway'. It restricts the transmission of any intermittent nuisance fault to 10 attempts in a 24 hour period.*

Accessories include the Fire-Watch 411 Series DACT Programmer (Model PRO-411) as well as the PK-411UD Windows®-based remote site programming software. The 411UDAC is supplied with a compact metal cabinet.

The digital communicator can be programmed or interrogated off-site via the public switched telephone network. Any IBM compatible personal computer with Windows® XP or greater, with a 1200 baud Hayes® compatible modem and Upload/Download software P/N PK-411UD, may serve as a service terminal.

1.1 Product Features

- Four input/channels - three fixed Style B (Class B) and one Style D (Class A) or Style B (Class B)
- Programmable input channels
 - ✓ 2 or 4-wire smoke (Inputs 1 & 3 only)
 - ✓ pull station
 - ✓ normally-open contact
 - ✓ host panel trouble (Slave Mode)
 - ✓ supervisory
 - ✓ supervisory autoresettable
 - ✓ waterflow (silenceable)
 - ✓ waterflow (nonsilenceable)
- One Style Y (Class B) NAC (supplementary application)
- Dual telephone lines
 - ✓ Dual telephone line voltage detect
 - ✓ Alternating phone lines for 24 hour test messages
- 12 VDC operation
- Alarm Verification
- Signal Silence Inhibit
- Autosilence
- Trouble Reminder
- Trouble Resound - troubles will resound the buzzer every 24 hours at midnight until the trouble is cleared
- Optional TR-6 Series Trim Ring
- 20-digit central station and service terminal telephone numbers
- NAC coding per ANSI S-3.41 (Temporal Coding)



Figure 1.1 411UDAC Digital Communicator

- Separate external keypad and display
 - ✓ provides means of programming 411UDAC in program mode
 - ✓ provides means of testing input/output circuits (including telephone connections) in Troubleshoot Mode
- Compact in size 14.5" (36.83 cm) high X 12.875" (32.7 cm) wide X 4.5" (11.43 cm) deep metal cabinet
- Communicates vital status of monitored control panel (Slave Mode):
 - ✓ fire alarm
 - ✓ host control panel trouble
 - ✓ fire supervisory
 - ✓ AC (mains) power loss (programmable)
 - ✓ other
- Communicates vital status of 411UDAC:
 - ✓ digital communicator troubles
 - ✓ telephone Line 1 and 2 voltage fault
 - ✓ Primary Central Station number communication fault
 - ✓ Secondary Central Station number communication fault
 - ✓ system off-normal (local Program Mode entered)
 - ✓ 24 Hour normal test
 - ✓ 24 Hour abnormal test (24 hour test message with previously reported alarm or trouble still active)
- Individual LEDs for:
 - ✓ AC Power
 - ✓ System Trouble
 - ✓ Input Active
 - ✓ Supervisory
 - ✓ Communication Fail
 - ✓ Battery Trouble
 - ✓ Earth Fault
- Local piezo sounder with separate and distinct sounds for the various conditions
- Acknowledge/System Silence switch - 1st press silences local piezo sounder, 2nd press silences NAC
- Reset switch
- Real time clock
- Two Form-C relays, fully programmable to activate for the following conditions:
 - ✓ fire alarm
 - ✓ host control panel trouble
 - ✓ fire supervisory (latching)
 - ✓ fire supervisory (autoresettable)
 - ✓ total communication failure
 - ✓ DACT trouble (factory default for relay)
- Optional PK-411UD Remote Upload/Download Kit
- 'Dialer runaway' feature
- User selectable restoral methods

1.2 Specifications

AC Power - TB3

120 VAC, 60 Hz, 0.7 amps
 Wire size: minimum 14 AWG (2.00 mm²) with 600V insulation
 Supervised, nonpower-limited

Battery (lead acid only) - J3

Maximum Charging Circuit: Float charge - 13.6V @ 3.15 amps
 Maximum Charger Capacity: 14 Amp Hour battery
 Supervised, nonpower-limited

Channels/Inputs - TB2 Terminals 1 through 10

Programmable Channels 1 through 4
 Power-limited circuitry
 Fully supervised (monitored for opens, shorts and earth fault)
 Nominal Operating Voltage: 12.0 VDC (ripple = 400 mV maximum)
 End-of-Line Resistor: 2.2K ohms, ½ watt (P/N 27070 UL listed)
 Operation for each channel:

- Channel/Input 1, Style B (Class B) 2 or 4-wire smoke detector input and Channel/Input 3, Style B (Class B) 2 or 4-wire smoke detectors or waterflows or Style D (Class A) waterflow input:
 - Alarm Current: 11 mA
 - Short Circuit Current: 24 mA maximum
 - Maximum Detector Current in Standby: 2.0 mA
 - Maximum Loop Resistance: 30 ohms
 - Detector Loop Current is sufficient to ensure operation of a minimum of one alarmed detector per zone*
 - Standby Current: 5.17 mA (including End-of-Line Resistor)
- Channel/Input 2 and Channel/Input 4 - Style B (Class B) contact closure input:
 - Short Circuit Current: 4.46 mA maximum
 - Maximum Loop Resistance: 100 ohms
 - Standby Current: 2.66 mA
 - Refer to the *Device Compatibility Document* for listed compatible devices.

Notification Appliance Circuit - TB4 Terminals 1(+) & 2(-)

The 411UDAC Notification Appliance Circuit may only be used to supplement host panel NACs
 Style Y (Class B) power-limited and supervised circuit (monitored for opens, shorts, and earth fault)
 Maximum voltage drop in wiring: 2.0 VDC
 Operating voltage nominal 13.8 VDC
 Current for all external devices: 1.0 amp
 End-of-line resistor: 2.2K ohms, ½ watt (P/N 27070)
 Refer to the *Device Compatibility Document* for listed compatible devices

Two Form-C Relays - TB1 Terminals 1 through 6

Operating voltage nominal 12 VDC
 Contact rating: 2.0 amps @ 30 VDC (resistive) or 0.5 amps @ 30 VAC (resistive)
 Non-supervised

12 VDC Resettable Special Application Power - TB4 Terminals 3(+) and 4(-)

Operating voltage nominal 12 volts
 Maximum ripple voltage: 10 mV_{RMS}
 Up to 200 mA is available for powering 4-wire smoke detectors
 Power-limited and supervised with a UL-listed power supervision relay
 For power supply and battery calculations, refer to Section 6.

1.3 Circuits

The 411UDAC circuit board contains a MicroController Unit (MCU), dual modular phone line jacks, piezo sounder, and connectors for input, output and power wiring. A piezo silence switch and reset switch are provided on the membrane panel which plugs into connector J7 on the main circuit board.

1.3.1 Channels/Inputs

Four input channels are provided on the 411UDAC. The 411UDAC can be used to monitor a host FACP (Fire Alarm Control Panel) in Slave Mode or as a stand-alone FAC (Fire Alarm Communicator). Each input can be programmed to monitor the following conditions:

- fire alarm activation
- 2 or 4-wire smoke (channels 1 & 3 only)
- pull station
- normally open contact device
- waterflow
- trouble activation
- fire supervisory activation

1.3.2 Notification Appliance Circuit

One Style B NAC (Notification Appliance Circuit) requiring a 2.2K ohm End-of-Line resistor. This NAC can only be used to supplement host panel NACs.

1.3.3 Output Circuits

- Modular jacks are used to interface the primary and secondary phone lines to the public telephone network. Phone lines are fully supervised at all times (if communication is enabled).
- 12 volt resettable special application power output (200 mA)
- 12 volt battery charger will charge up to 14 AH batteries

1.3.4 Auxiliary Relays

Two dry Form-C relays, with contacts rated for 2.0 amps @ 30 VDC (resistive) or 0.5 amps @ 30 VAC (resistive), are installed on the main circuit board. Each relay is programmable for:

- ✓ Alarm
- ✓ Fire supervisory - latching
- ✓ Fire supervisory - autoresettable
- ✓ Host panel trouble
- ✓ DACT trouble
- ✓ Total communications failure

1.3.5 Earth Ground

Connect a separate earth ground wire to ground stud in backbox for transient protection (refer to Figure 2.3 on page 21 for location of stud).

1.4 Controls and Indicators

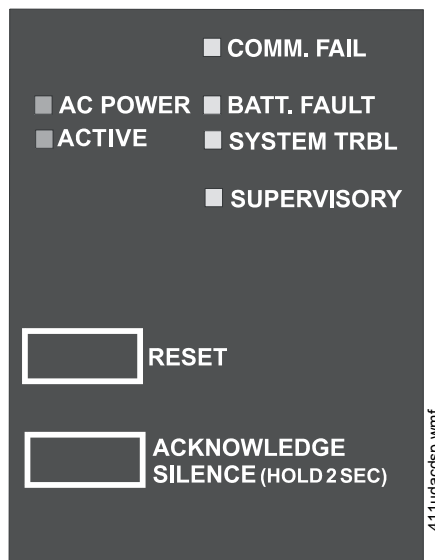


Figure 1.2 411UDAC Controls and Indicators

Front Panel Switch

- Reset Switch - to reset 411UDAC circuits
- Acknowledge/System Silence Switch
 - press once to acknowledge alarm or trouble (silence local 411UDAC piezo sounder and change all flashing LEDs to steady on)
 - press a second time and hold for minimum of two seconds to perform a System Signal Silence (silence Notification Appliance Circuit)

411UDAC Piezo Sounder

- The 411UDAC piezo sounder is used to locally annunciate DACT alarms and troubles. DACT troubles include input channel open circuit, NAC fault, phone line 1 or 2 voltage fault, phone number 1 or 2 communication fault and total communication failure. Separate and distinct sounds are provided for the following conditions:
 - ✓ alarm - steady On
 - ✓ trouble - 1 second On and 1 second Off
 - ✓ supervisory - ½ second On and ½ second Off

Front Panel Indicator

- AC Power - green LED
- Input Active - red LED
- Communication Fail - yellow LED
- System Trouble - yellow LED
- Supervisory - yellow LED
- Battery Trouble - yellow LED

Circuit Board Indicator

- Earth Fault - yellow LED (indicates zero impedance between panel and earth ground)

1.5 Components and Accessories

Main Circuit Board

The main circuit board contains the system's MCU (microcontroller unit), power supply, other primary components and wiring interface connectors. The main circuit board is shipped in the same carton as the cabinet but is not mounted in the cabinet. The circuit board should be installed only after the cabinet is mounted to the wall and the area is clean and free of potential contaminants.

Cabinet

The cabinet is red and measures 14.5" (36.83 cm) high X 12.875" (32.7 cm) wide X 4.5" (11.43 cm) deep. It provides space for up to two 7 Amp Hour batteries which must be ordered separately. A supplied bezel must be installed in the door opening.

Trim Ring

An optional Trim Ring (P/N TR-6-R) is available for the backbox. The Trim Ring provides a finished appearance for a semi-flush mounted panel.

Transformer Assembly

One transformer is shipped with the 411UDAC assembly, pre-mounted to the cabinet.

Fire-Watch 411 Series DACT Programmer (Model PRO-411)

The PRO-411 is an optional DACT programmer which can be used to troubleshoot and program the 411UDAC, as well as access the various modes of operation. The PRO-411 must be ordered separately.

PK-411UD Upload/Download Software Kit

The optional PK-411UD Kit consists of the PK-411UD Upload/Download software on CD and the PK-411UD Program Manual. The PK-411UD enables a user to program the 411UDAC off site via the public switched telephone network using any personal computer with Windows® XP or greater and a 1200 baud Hayes® compatible modem.

1.6 Digital Communicator Operation

The 411UDAC has been designed to be compatible with a wide variety of fire alarm, nonfire and combination control panels (Slave Mode operation). Numerous formats are also available for communication to a central station. Two modular phone jacks allow easy connection to telephone lines. Modular jacks are labeled PH1 and PH2 for the Primary and Secondary phone lines. The digital communicator provides the following functions:

- Line Seizure- takes control phone lines, disconnecting any premise phones which may be using the same lines
- Off/On-Hook - perform on and off-hook status to phone lines
- Listen for dial tone - 440 hertz tone typical in most networks
- Dialing the Central Station(s) phone number - default is Touch-Tone®, programmable to rotary
- Discern proper Central Station 'ACK' and 'Kiss-off' tone(s)
- Transmit data to the Central Station(s)
- Verify data has been accepted by the Central Station(s)
- Hang-up and release phone lines
- Communicate in a variety of formats (Table 4.1, "Format Selection Addresses (20 and 50) Programming," on page 55).

1.7 Panel Configuration

The 411UDAC can be configured, through programming, for the following modes of operation:

- Stand-alone Mode With Communicator Enabled - the 411UDAC functions as a latching digital alarm communicator in which all input circuit activations latch (except those programmed as autoresettable) and are restored only by pressing the local reset switch. The onboard communicator will attempt to transmit events to a Central Station
- Slave Mode With Communicator Enabled - the 411UDAC functions as a nonlatching slave to a host control panel and the onboard digital alarm communicator will attempt to transmit events to a Central Station
- Slave Mode With Communicator Disabled - the 411UDAC functions only as a nonlatching slave to a host control panel. The digital alarm communicator will not transmit to a Central Station

1.8 Operational Modes

1.8.1 Normal Mode

Normal Mode is the standard mode of operation in which the 411UDAC monitors the channel/input circuits as well as telephone line voltage and other internal circuits. In addition to locally annunciating system trouble, active channel/input and communication fail, the onboard communicator transmits system status information to UL listed central station receivers if programmed to do so. Transmitted data includes fire alarm, fire alarm trouble, supervisory alarm and AC loss information. Specific digital communicator troubles are also transmitted.

1.8.2 Real Time Clock Mode

Real Time Clock Mode allows the user to change the digital alarm communicator's internal 24 hour clock. Connecting an external Programmer allows access to the various Modes of operation. While the 411UDAC is in Real Time Clock Mode, it does not monitor channel inputs. Use of this mode requires a valid password.

1.8.3 Program Mode

Program Mode is used to change the programmed functions of the 411UDAC. While the 411UDAC is in Program Mode, it does not monitor channel inputs. In addition, some program items will be locked, which will prevent editing while the communicator is active (dialing, transmitting, etc.). Use of this mode requires a valid password.

1.8.4 Troubleshoot Mode

Troubleshoot Mode may be used to sample and display status for all channel/input circuits, Notification Appliance Circuit, AC power, battery, charger and 12 volt resettable power. In addition, Troubleshoot Mode may be used for testing the telephone line interconnect wiring. Connection from the 411UDAC's modular jacks, through the RJ31X jacks and into the telephone network may be easily checked. In this mode, the Programmer keypad acts similar to a telephone touchpad. While the 411UDAC is in Troubleshoot Mode, it does not monitor channel inputs.

1.8.5 Default Mode

Default Mode may be used to return all 411UDAC programming back to the factory default settings and to reset the Real-Time Clock to '00:01' midnight. See "Default Mode" on page 51.

1.9 Telephone Requirements and Warnings

1.9.1 Telephone Circuitry - PH1 & PH2

AC Ringer Equivalence Number (REN) = 0.4B

Mates with RJ31X Male Connector

Supervision Threshold: less than 5.0 volts for 2 minutes

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

1.9.2 Digital Alarm Communicator:

Before connecting the 411UDAC to the public switched telephone network, the installation of two RJ31X jacks is necessary. The following information is provided if required by the local telephone company:

Manufacturer: Fire•Lite Alarms Inc./Notifier

One Fire-Lite Place

Northford, CT 06472

Product Model Number: 411UDAC

FCC Registration Number: 1W6AL04B411UDAC

AC Ringer Equivalence: 0.4B

FCC ID label is located on the inside cover.

Important! The DACT must not be used to dial a phone number that is call-forwarded per requirements of UL 864 9th Edition.

1.9.3 Telephone Company Rights and Warnings

The telephone company, under certain circumstances, may temporarily discontinue services and/or make changes in its facilities, services, equipment or procedures which may affect the operation of this digital communicator. However, the telephone company is required to give advance notice of such changes or interruptions. If the digital communicator causes harm to the telephone network, the telephone company reserves the right to temporarily discontinue service. Advance notification will be provided except in cases when advance notice is not practical. In such cases, notification will be provided as soon as possible. The opportunity will be given to correct any problems and to file a complaint.

DO NOT CONNECT THIS PRODUCT TO COIN TELEPHONE, GROUND START OR PARTY LINE SERVICES.

When the digital communicator activates, premise phones will be disconnected.

Two separate phone lines are required. Do not connect both telephone interfaces to the same telephone line.

The digital communicator must be connected to the public switched telephone network upstream of any private telephone system at the protected premises.

An FCC compliant telephone cord must be used with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible RJ31X male modular plug which is Part 68 compliant.

Section 2: Installation

2.1 Mounting Options

The cabinet may be either semi-flush or surface mounted. The door is removable during the installation period by opening and lifting it off the hinges. The cabinet mounts using two key slots and two additional 0.25" diameter holes located in the backbox. The keyslots are located at the top of the backbox and the two securing holes at the bottom.

Carefully unpack the system and check for shipping damage. Mount the cabinet in a clean, dry, vibration-free area where extreme temperatures are not encountered. The area should be readily accessible with sufficient room to easily install and maintain the panel. Locate the top of the cabinet approximately five feet above the floor with the hinge mounting on the left. Determine the number of conductors required for the devices to be installed. Sufficient knockouts are provided for wiring convenience. Select the appropriate knockout(s) and pull the required conductors into the box. All wiring should be in accordance with the National and/or Local codes for fire alarm systems.

2.2 Mounting

Backbox Mounting

1. Mark and predrill holes for the top two keyhole mounting bolts using the dimensions shown in Figure 2.1.
2. Install two upper fasteners in the wall with the screw heads protruding.
3. Using the upper 'keyholes', temporarily mount the backbox over the two screws.
4. Mark the lower two holes, remove the backbox from the wall and drill the lower two holes in the wall.

Main Circuit Board Mounting

1. When the location is clean and free of construction dust or other contaminants, install the main PC board by installing the four supplied standoffs on the four main circuit board mounting studs located in the backbox. Refer to Figure 2.1 for locations.
2. Position the main circuit board's four corner mounting holes over the four standoffs just installed. *Be certain to observe the proper ESD (Electro Static Discharge) precautions to prevent damage to the static sensitive circuits. This includes, but is not limited to, use of a wrist strap.*
3. Secure the main circuit board to the standoffs with the four supplied screws and attached washers.
4. Plug the transformer connector into the main circuit board connector J4. The connector is keyed and can only be plugged-in one way. Refer to Figure 2.3 on page 21 and Figure 2.11 on page 29 for transformer connector location and AC power connections.
5. When wiring is completed, re-install the door.

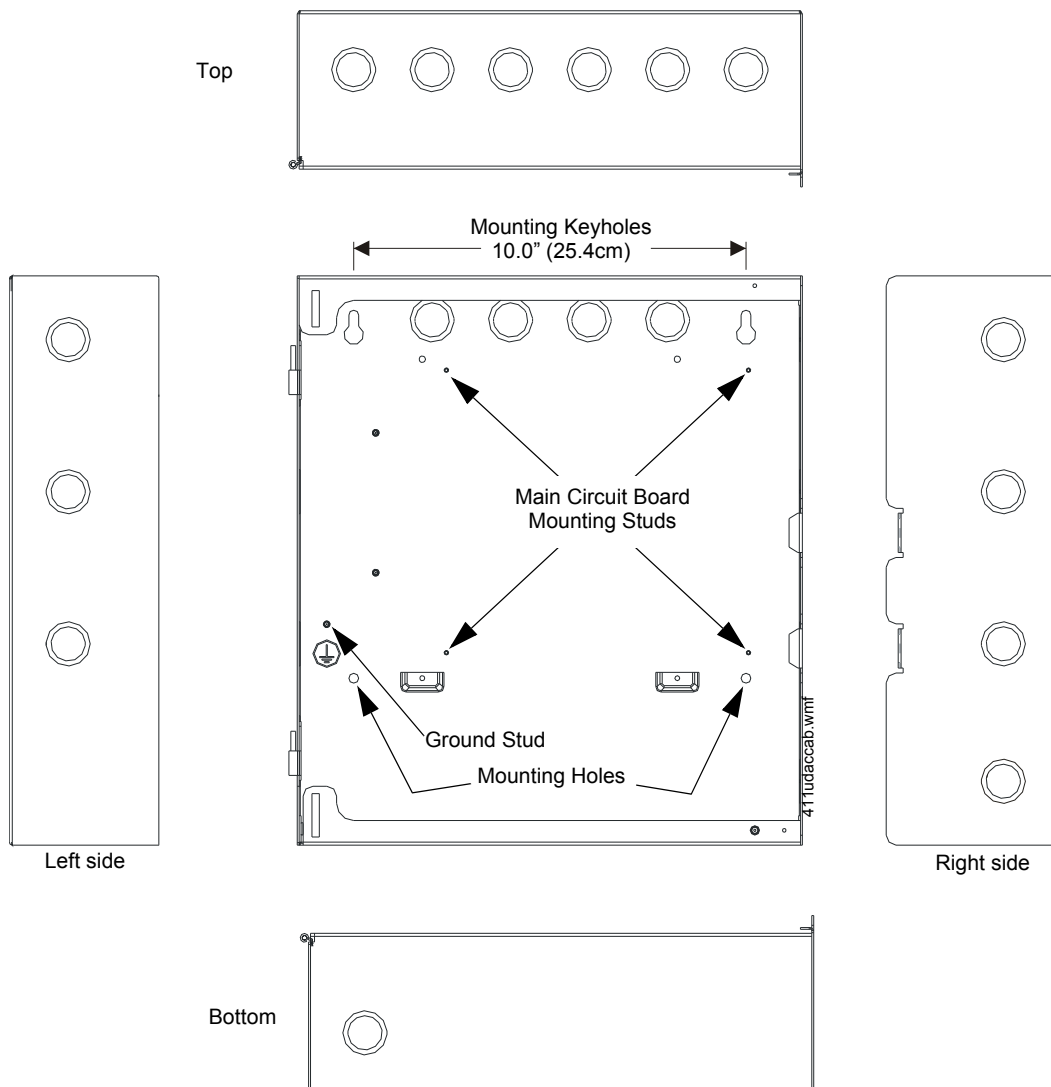


Figure 2.1 Cabinet Dimensions and Knockout Locations

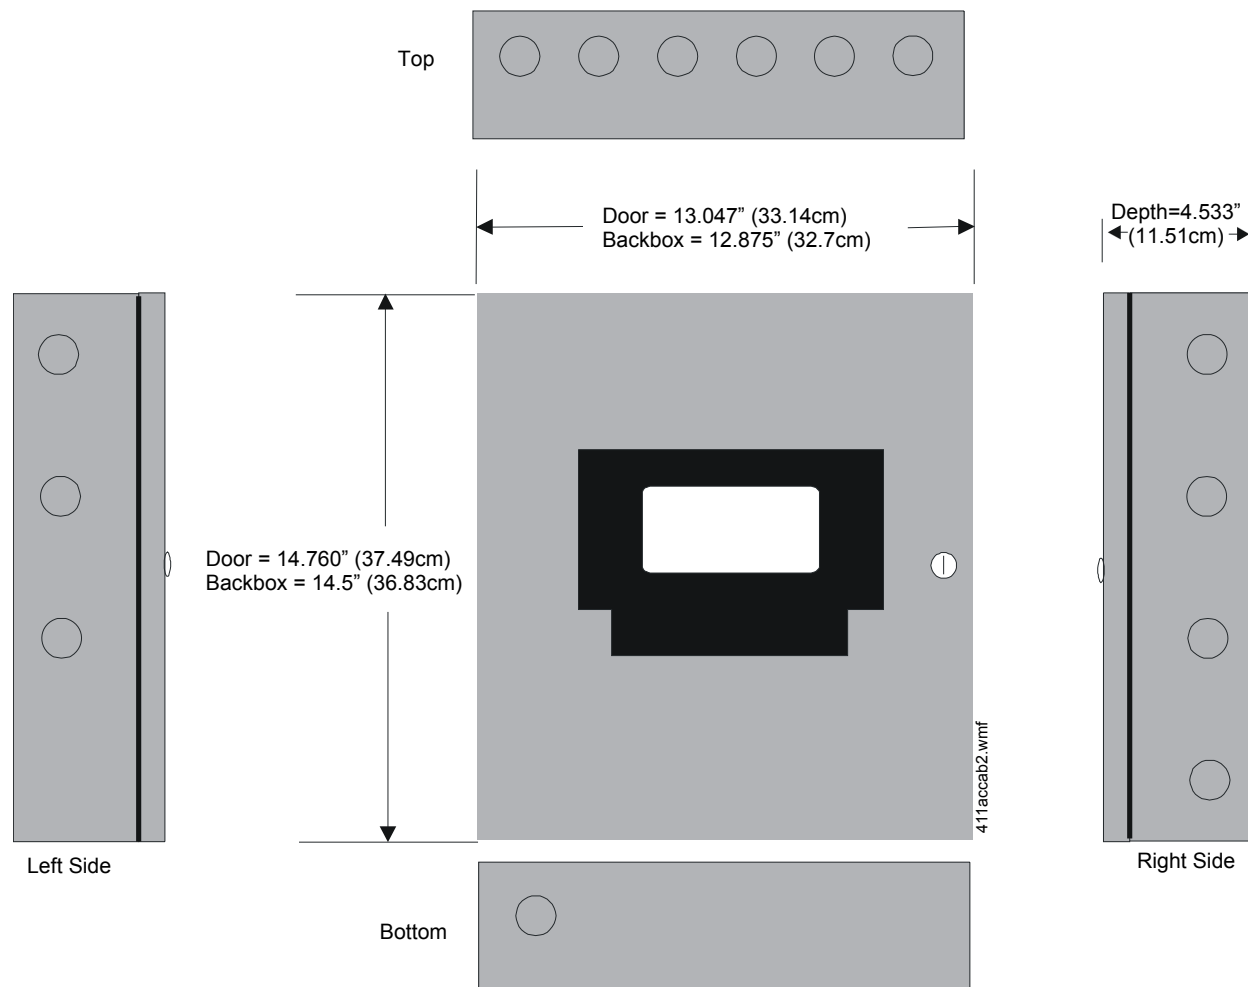


Figure 2.2 411UDAC Backbox

2.3 Operating Power



CAUTION: DISCONNECT POWER BEFORE SERVICING

SEVERAL DIFFERENT SOURCES OF POWER CAN BE CONNECTED TO THE 411UDAC. DISCONNECT ALL SOURCES OF POWER BEFORE SERVICING THIS UNIT. THE COMMUNICATOR AND ASSOCIATED EQUIPMENT MAY BE DAMAGED BY REMOVING AND/OR INSERTING MODULES OR CABLES WITH POWER APPLIED.

Primary Power Source (AC) and Earth Ground Connections

AC power connections are made inside the 411UDAC cabinet. The primary power source is 120 VAC, 60 Hz, 0.7 amps. Run a pair of wires (with ground conductor) from the protected premises main breaker box to TB3 of the main circuit board. As per the National Electric Code, use 14 AWG (2.00 mm²) or heavier gauge wire with 600V insulation. No other equipment may be connected to this circuit. In addition, this circuit must be provided with overcurrent protection and may not contain any power disconnect devices.

A separate earth ground connection must be made to ensure proper panel operation and lightning and transient protection. Remove the two keys nuts from the grounding stud in the backbox. Connect the incoming earth ground wire to supplied cable #71073 with a wire nut. Position the ring terminal end over the grounding stud. Secure with one of the keys nuts. Place the ring terminal from the other supplied ground cable #71073 over the ground stud and secure with the second keys nut. Wire the ground cable to the bottom position of TB3. Refer to the figure below for location of the stud. Apply AC power to the panel only after the system is completely installed and visually checked. Note that AC power must be applied to the panel before installing the battery interconnect cable.

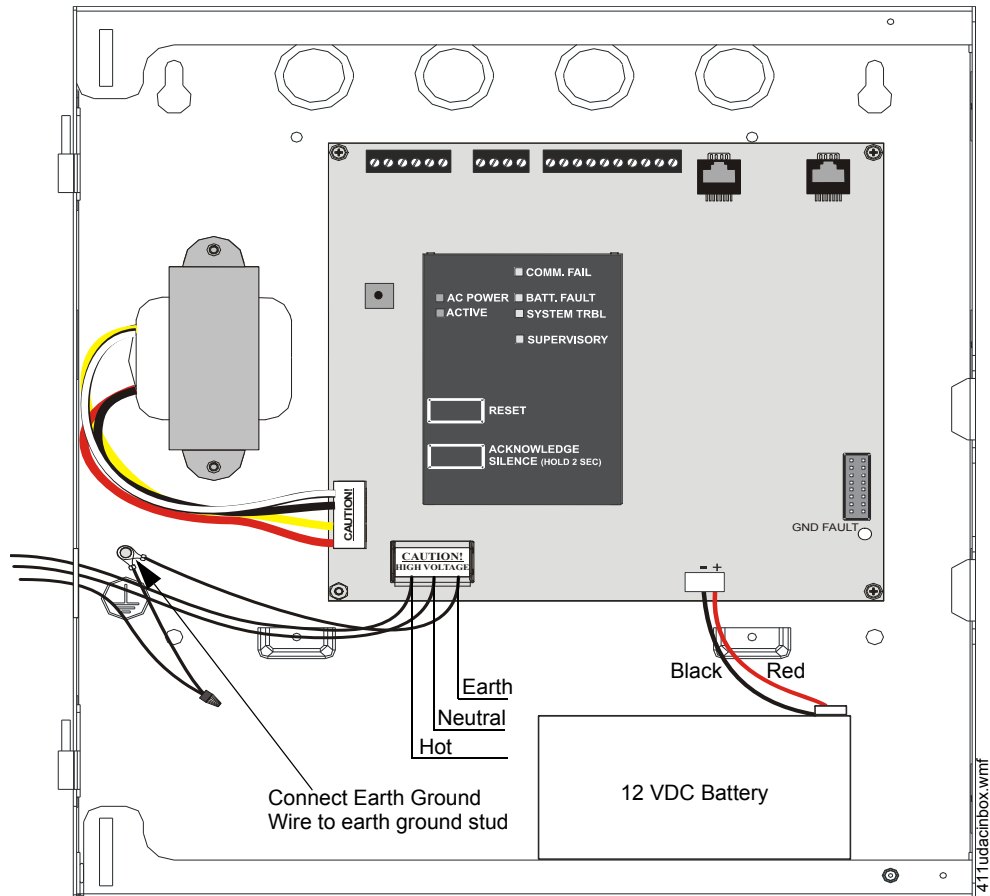


Figure 2.3 Operating Power Connections

Secondary Power Source (batteries)

Observe polarity while connecting the battery. When installing one 12 volt battery for up to 12 Amp Hour applications, connect the supplied battery cable (P/N 75516) by sliding the connector attached to the long red wire onto the positive (+) battery terminal and the connector attached to the long black wire onto the negative (-) battery terminal. Tie-wrap or tape the two unused short wires to the long wires.

When installing two 12 volt, 7 Amp Hour batteries (in parallel) for up to 14 Amp Hour applications, follow the same procedure as described for one battery except connect the unused short wires to the second battery. Slide the connector attached to the short red wire onto the positive (+) terminal of the second battery and the connector attached to the short black wire onto the negative (-) battery terminal of the second battery.

When the panel is ready to have power applied, connect the battery cable plug to connector J3 on the 411UDAC main circuit board. The battery charger is capable of recharging sealed lead acid type batteries. Refer to the battery calculations table to determine the correct battery rating.



CAUTION: BATTERY CONTAINS SULFURIC ACID

THE BATTERY CONTAINS SULFURIC ACID WHICH CAN CAUSE SEVERE BURNS TO THE SKIN AND EYES, AND CAN DESTROY FABRICS. IF CONTACT IS MADE WITH SULFURIC ACID, IMMEDIATELY FLUSH THE SKIN OR EYES WITH WATER FOR 15 MINUTES AND SEEK IMMEDIATE MEDICAL ATTENTION.

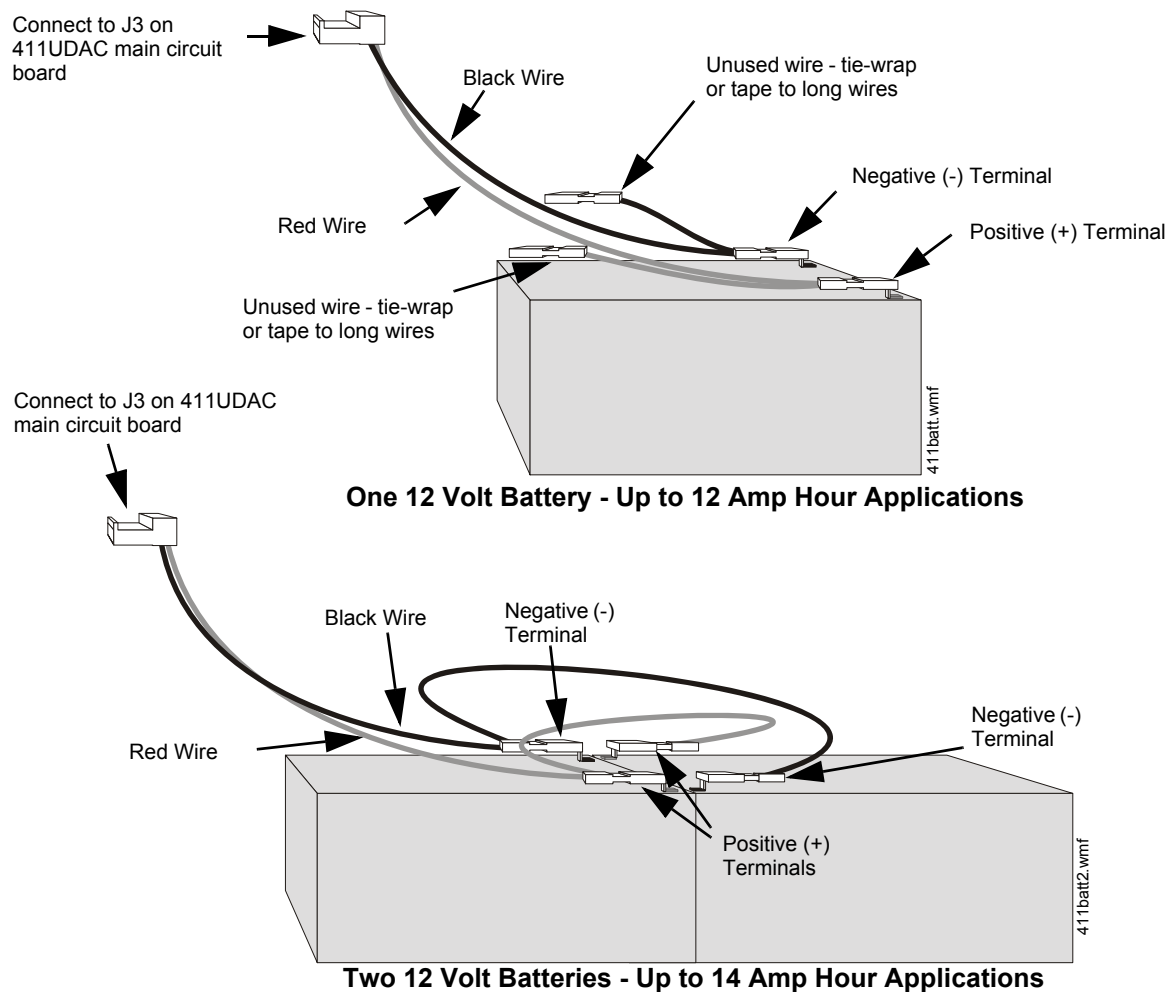


Figure 2.4 Battery Cable Connections

2.4 Input Channels

The 411UDAC has four channel inputs. Channel/input field wiring is supervised for opens (trouble), shorts (active) and ground faults (zero ohms impedance between panel and earth ground) by the 411UDAC. All conditions are visually and audibly annunciated and, if programmed, communicated to a Central Station.

Each channel is a Style B (Class B) Initiating Device Circuit with the exception of channel/input 3 which can be configured for Style B or Style D (Class A). All inputs can be connected to normally-open contact type devices. In addition, inputs 1 and 3 can be connected to conventional 2 or 4-wire smoke detectors. Figure 2.5, "Wiring Initiating Device Circuits" on page 23 for information on wiring Style B and Style D circuits.

The channel/inputs may be programmed as shown below:

- 2 or 4-wire smoke detector (inputs 1 & 3 only)
- Pull station
- Normally-open contact device
- Host panel trouble
- Supervisory
- Supervisory autoresettable
- Waterflow silenceable
- Waterflow nonsilenceable

A maximum of five waterflow devices may be used on any circuit programmed as a waterflow zone per NFPA 72.

It is allowable to mix an assortment of device types (i.e. smoke detectors, heat detectors, pull stations, etc.) on any zone. This is not recommended, however, since specific and detailed reports will not be possible (particularly critical when using Contact ID format). For example, the report of general fire alarm versus pull station fire alarm or smoke detector fire alarm could not be distinguished.

The factory default programming for each channel is as follows:

- ✓ Channel 1 - fire alarm (2 or 4-wire smoke)
- ✓ Channel 2 - pull station
- ✓ Channel 3 - fire alarm (2 or 4-wire smoke)
- ✓ Channel 4 - pull station

The following illustration shows Channel 1 connected to 4-wire smoke detectors, and UL-listed power supervision relay; Channel 2 connected to manual pull stations; Channel 3 connected to manual pull stations; and Channel 4 connected to waterflow devices. In this example, the factory default programming for Channel 4 must be changed from *pull station* to *waterflow device*.

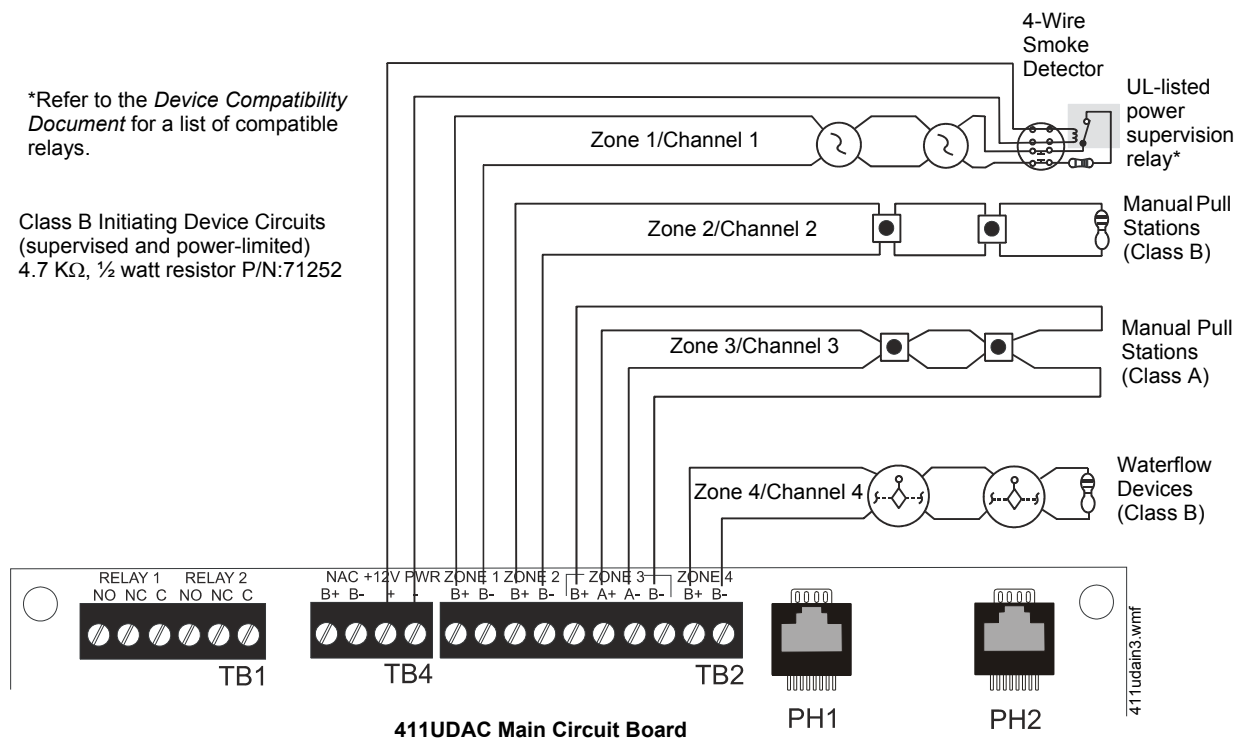


Figure 2.5 Wiring Initiating Device Circuits

Note: The addressable monitor module input, which is being used to monitor the 411UDAC Relay Output programmed for DACT Trouble must be programmed as 'DACT Trouble' at the FACP. The 411UDAC must be programmed as a Slave Communicator (programming address 64 set to '2')

Program the 411UDAC as follows:
 Channel 1 - Normally Open Contact Device (alarm)
 Channel 2 - Host Panel Trouble
 Channel 3 - Supervisory

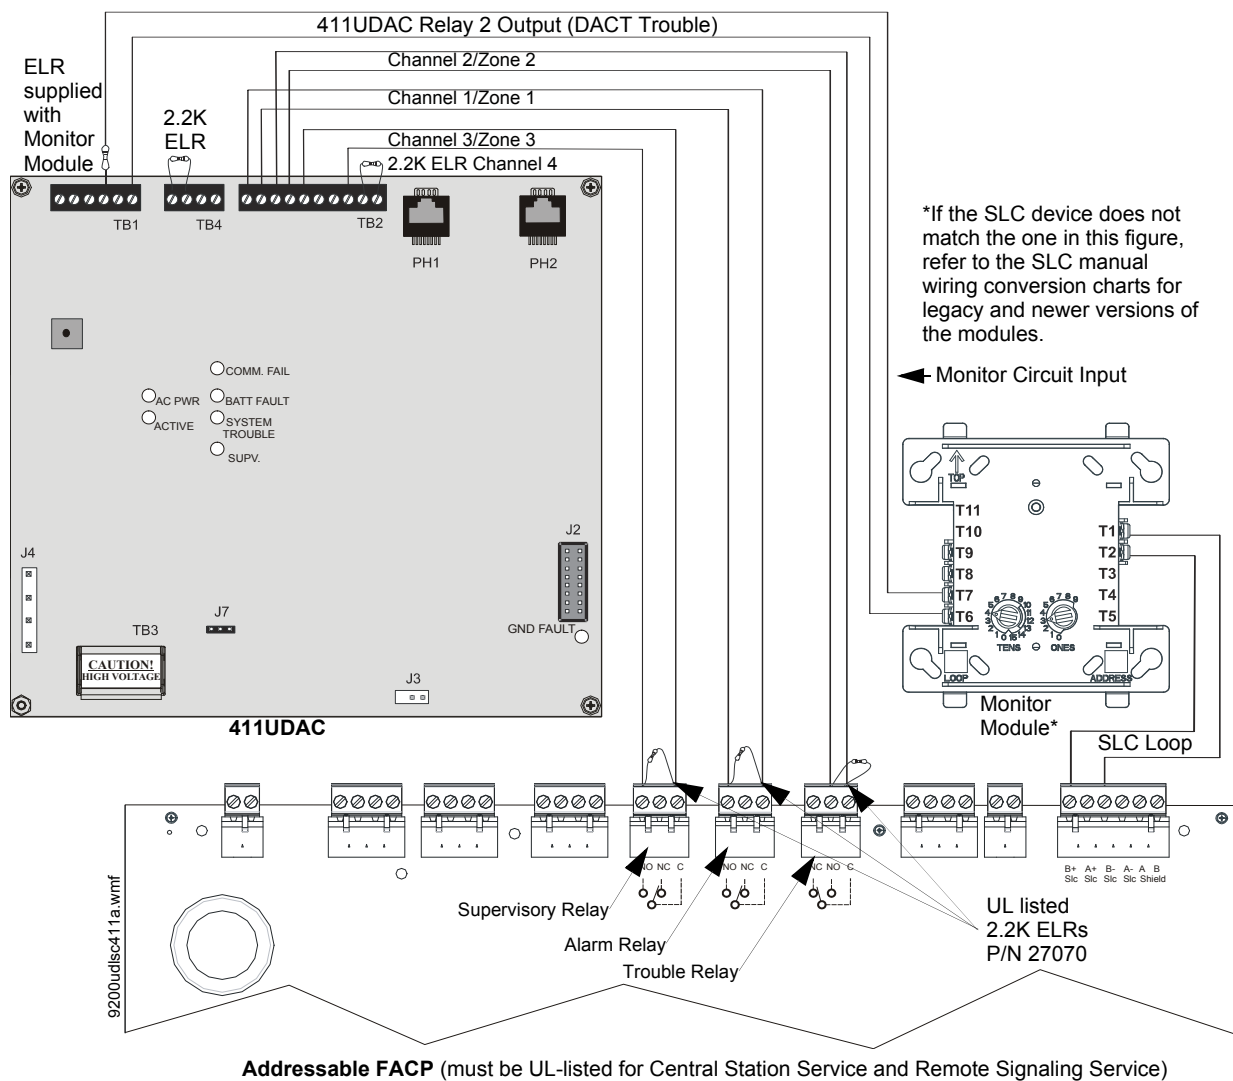


Figure 2.6 Typical Addressable FACP Connection to 411UDAC

2.5 Output Circuits

Notification Appliance Circuit

The 411UDAC provides one Style Y (Class B) NAC (Notification Appliance Circuit). The NAC is supervised and power-limited and is capable of 1.0 amp of current. Refer to the *Device Compatibility Document* for a listing of compatible notification appliances.

Notes:

1. The 411UDAC can only be used to supplement host panel NACs.
2. Do not connect strobes to the 411UDAC Notification Appliance Circuit.

The NAC may be programmed as follows:

- Silenceable
- Nonsilenceable (waterflow)
- Silence Inhibited (one minute)
- Autosilence (5 to 30 minutes)

Style Y (Class B) Notification Appliance Circuit
(supervised and power-limited).
2.2K ohms, ½ watt P/N 27070

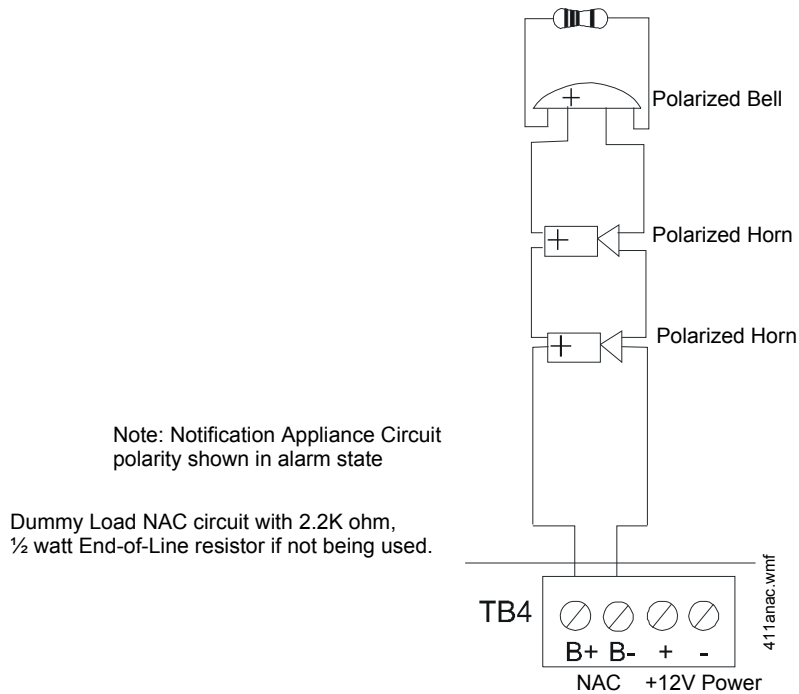


Figure 2.7 Notification Appliance Circuit Connections

Relay Programming

The relays are programmable for activation on fire alarm, host panel trouble, fire supervisory, total communication failure and DACT. Refer to “DACT Programming” on page 36. Addresses ‘85 - 88’ are used for programming relay functions and enable.

Note: Relay connections may be power-limited or nonpower-limited. However, connecting one type next to the other type is not allowed. Both circuits must be either power-limited or nonpower-limited.

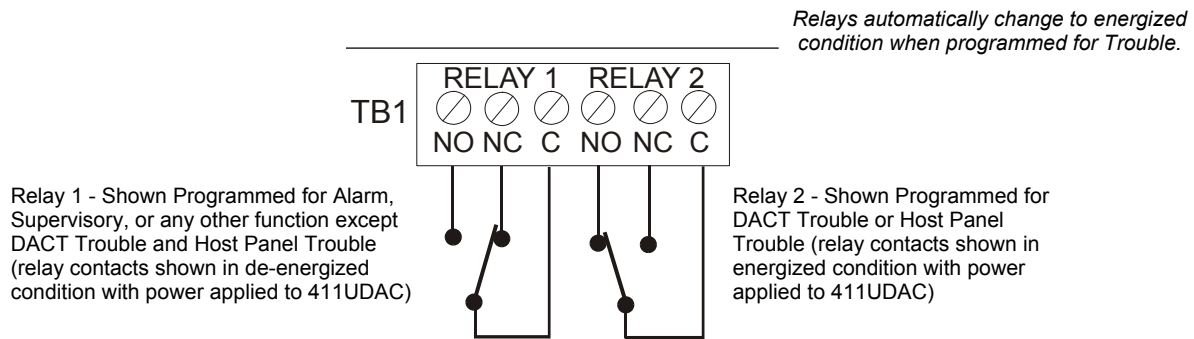


Figure 2.8 Programmable Relay

2.6 Telephone Circuits

Provision to connect two independent telephone lines is available via two telephone jacks labeled PH1 (Primary) and PH2 (Secondary). Telephone line control/command is possible via double line seizure as well as usage of an RJ31X style interconnection. (RJ31X jacks must be ordered separately).



CAUTION: PROPER FUNCTIONALITY

IT IS CRITICAL THAT THE 411UDAC BE LOCATED AS THE FIRST DEVICE ON THE INCOMING TELEPHONE CIRCUIT TO PROPERLY FUNCTION.

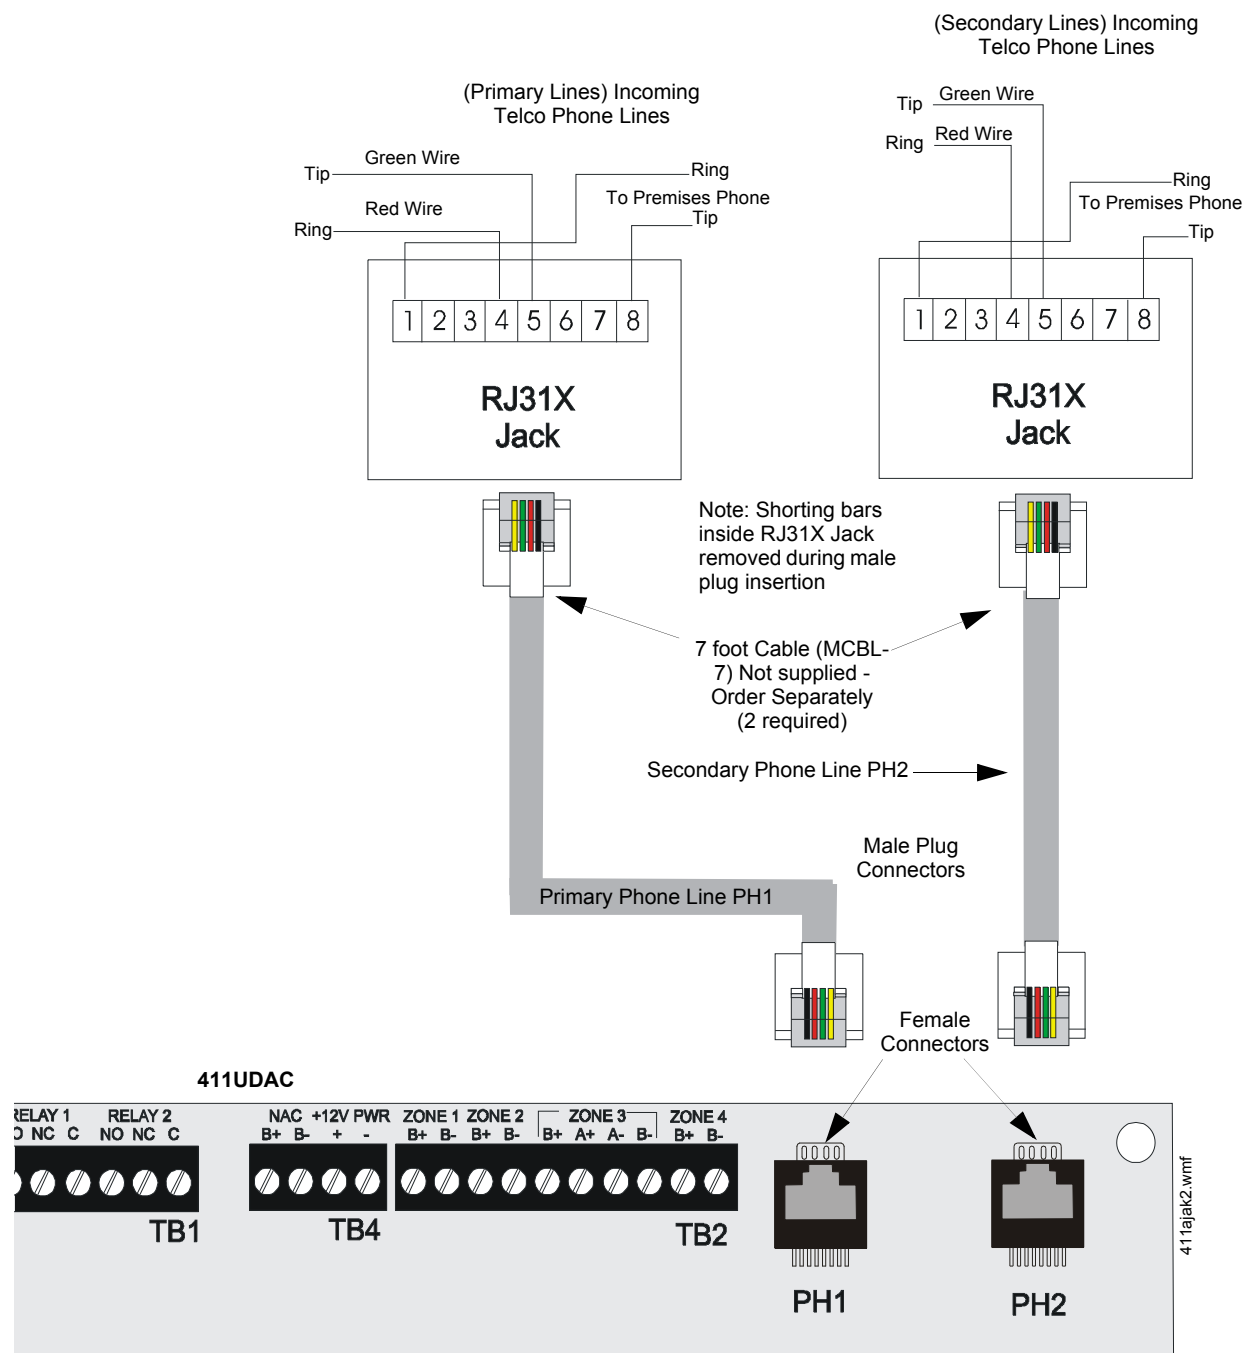


Figure 2.9 Wiring Phone Jacks

2.7 Optional Programmer

The Fire-Watch 411 Series DACT Programmer (Model PRO-411) is used to:

- ✓ switch between the digital alarm communicator's five Modes of operation
- ✓ set the digital alarm communicator's 24 hour internal clock in Real-Time Clock Mode
- ✓ program the 411UDAC digital alarm communicator in Program Mode
- ✓ test the status of input and output circuits (including telephone lines) in Troubleshoot Mode
- ✓ return all digital alarm communicator programming to the factory default settings in Default Mode

To use the PRO-411 Programmer:

1. Remove all power from the 411UDAC.
2. Unlock and open the 411UDAC door.
3. Connect the Programmer cable to connector J2 located in the lower right corner of the 411UDAC. Note that the key on the connector must align with the slot in the J2 connector.
4. Reapply power to the 411UDAC.
5. Operate the Programmer by pressing the **MODE** key. Enter the appropriate four digit code and then press the **[ENTER/STORE]** key.

Note that it is not possible to switch from Normal Mode to any other mode if any of the four Channels is programmed for fire alarm or fire supervisory and is active, that is, in alarm (shorted).

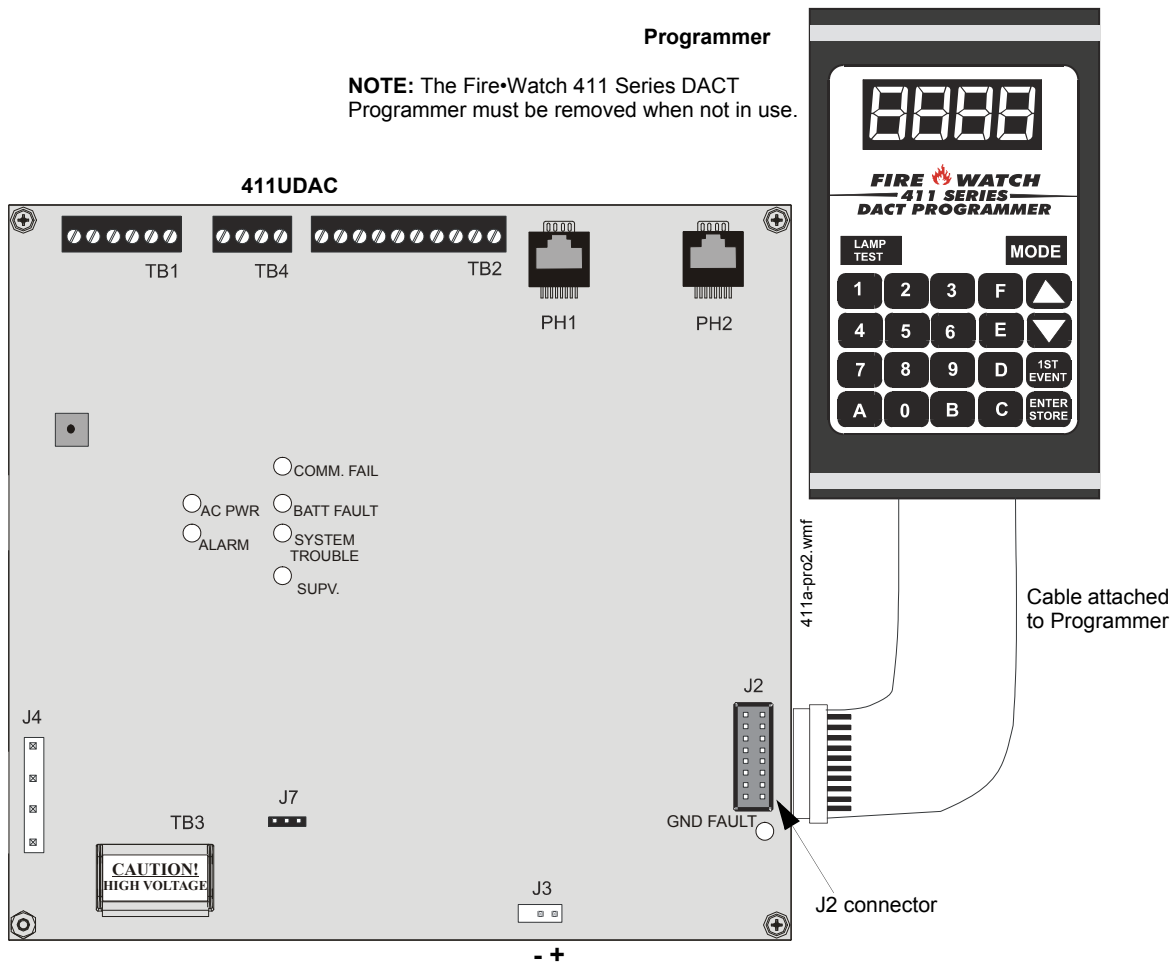


Figure 2.10 Programmer Connection to 411UDAC

2.8 UL Power-limited Wiring Requirements

Power-limited and nonpower-limited circuit wiring must remain separated in the cabinet. All power-limited circuit wiring must remain at least 0.25" away from any nonpower-limited circuit wiring. Furthermore, all power-limited and nonpower-limited circuit wiring must enter and exit the cabinet through different knockouts and/or conduits. A typical wiring diagram for the 411UDAC is shown below.

Note: Relay connections may be power-limited or nonpower-limited, provided that 0.25" spacing is maintained between conductors of power-limited and nonpower-limited circuits.

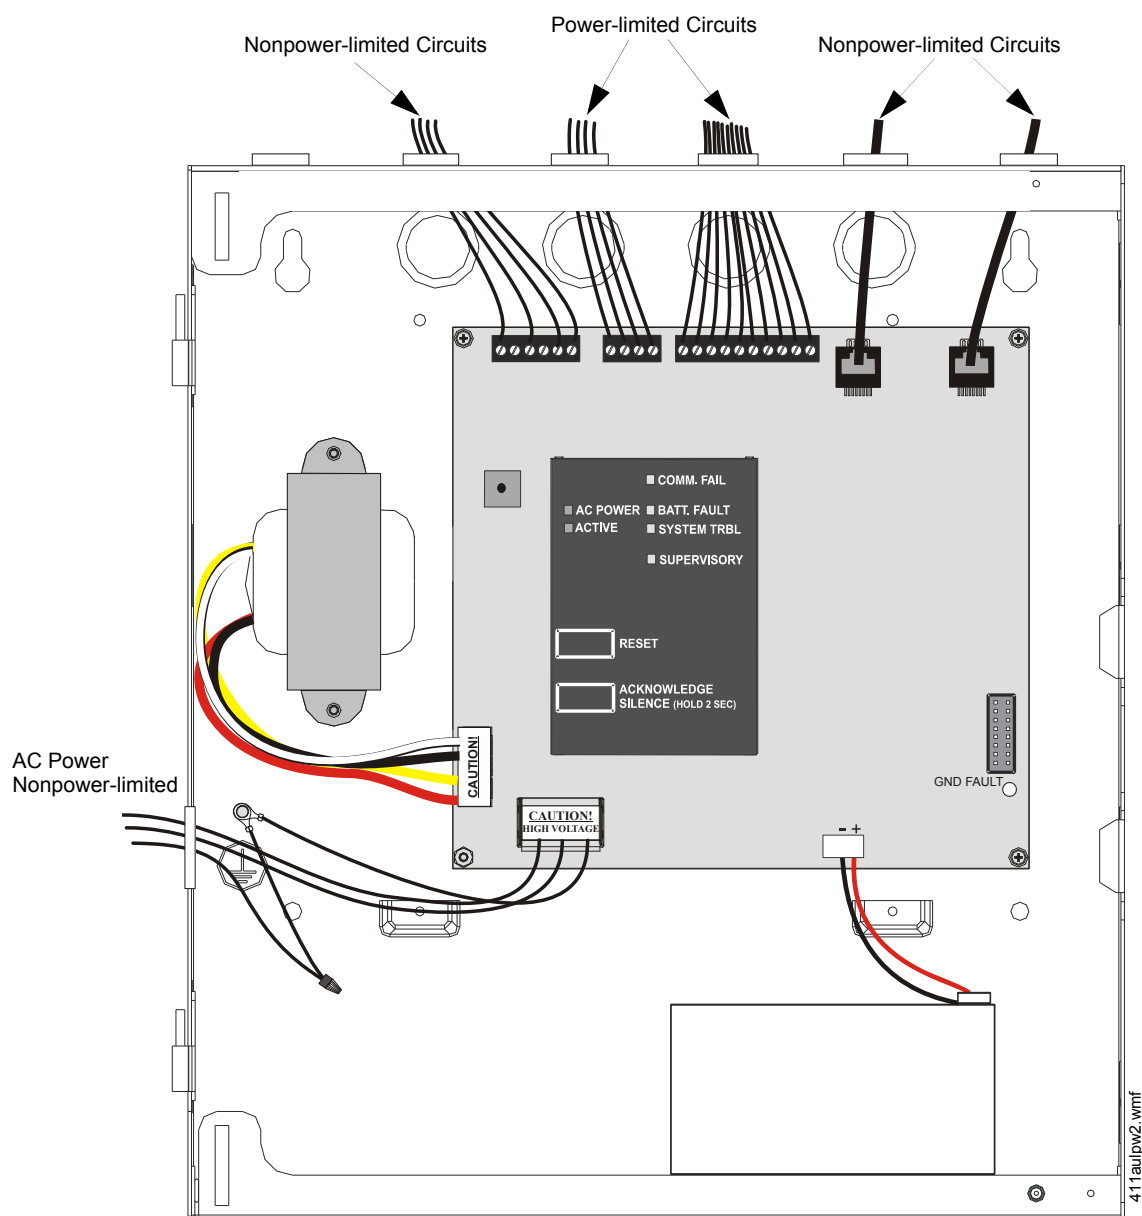


Figure 2.11 Typical UL Power-limited Wiring Diagram

Section 3: Modes of Operation

The 411UDAC has five operational modes:

- Normal Mode
- Real Time Clock Mode
- Program Mode (requires password)
- Troubleshoot Mode
- Default Mode (requires password)

The operational mode for the 411UDAC is Normal Mode. The operator is able to switch between any modes of operation provided no alarm events are active in the system. It should be noted that the unit will not respond to input activations while in any mode except Normal Mode.

Some modes require a password. Refer to Section 3.2.

Access to any other Mode requires connection of the PRO-411 DACT Programmer which consists of a keypad and display. Figure 3.1, “Programmer Keypad” on page 31.

Note that if the 411UDAC is configured to operate as a Slave Communicator, it will attempt to transmit all panel status to a Central Station. If set to operate in the Test Communicator configuration, the 411UDAC will function as a local slave panel only without transmitting panel status to a Central Station.

3.1 Normal Mode

Normal Mode is the standard (default) mode of operation for the 411UDAC. The unit continuously monitors the status of the four input channels as well as the status of the onboard digital communicator. If no activity is detected on the four input channels (no shorts or opens) and the 411UDAC is operating free of internal troubles, the unit will display the following conditions:

- ✓ All LEDs are off except the AC Power LED
- ✓ NAC output is off
- ✓ Onboard piezo sounder is off
- ✓ The relays are in their normal deactivated state
- ✓ Communicator is not transmitting to the Central Station

The 411UDAC transmits system status reports to a central station, if programmed to do so, via the public switched telephone network. Two supervised telephone line connections are made to interface the digital communicator to the telephone lines. Both telephone lines are supervised by the 411UDAC for proper voltage.

The 411UDAC is capable of line seizure on both the primary and secondary telephone line interfaces. *Any time the digital communicator detects the necessity to call the Central Station, line seizure will disconnect any local premises phones sharing the same telephone line. Sharing of phone lines, for fire systems, must be approved by the Local Authority Having Jurisdiction.* All transmissions to the Central Station will be sent over the Primary phone line. In the event of a noisy or faulty phone line, transmissions will be sent over the backup Secondary phone line.

Transmission options exist to:

- send reports to the secondary phone number as backup only
- send reports to both the primary and secondary phone numbers
- send reports to the first available central station phone number

If 10 total attempts to communicate are unsuccessful, the 411UDAC will turn on the Communication Fail LED.

The 411UDAC meets NFPA 72 requirements for Remote Station Protective Signaling Service and Central Station Signaling Service reporting requirements for: (a) the type of signal, (b) condition and (c) location of the reporting premises. See “Central Station Communications” on page 54, for additional information.

The 411UDAC can be switched from Normal Mode to any other Mode, provided no channel programmed for fire alarm or fire supervisory is active, that is, in alarm (shorted). The PRO-411 DACT Programmer, for use with the Fire•Watch 411 Series, must be connected to the 411UDAC in order to change from mode to mode.

3.1.1 Programmer Key Functions

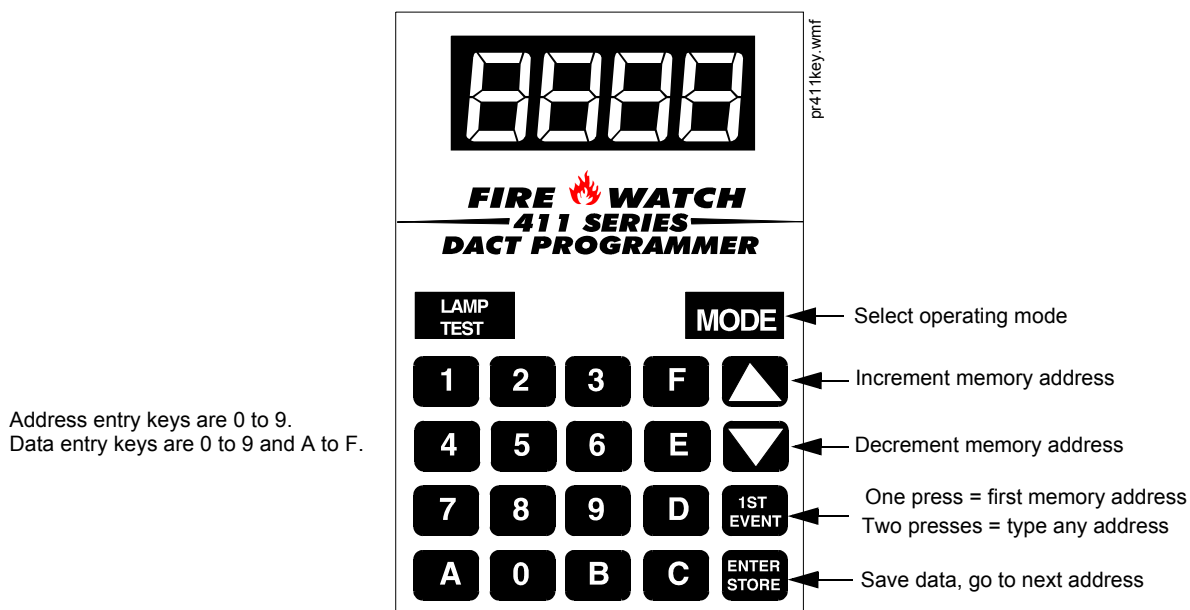


Figure 3.1 Programmer Keypad

MODE KEY

Pressing the **MODE** key followed by a valid 4-digit numerical code and the **[ENTER/STORE]** key selects one of the five modes of operation. To enter Normal Mode from any other mode, press the **MODE** key followed by **6676** and then **[ENTER/STORE]**.

- **6676** spells NORM on a Touch-Tone[®] phone.

If an incorrect key is entered, reenter the proper 4-digit code before pressing the **[ENTER/STORE]** key. Note that as information is entered into the 411UDAC, the digits will scroll across the Programmer display from right to left.

```

  _ 6
 _ 66
 _ 667
6676

```

A pause of up to 10 seconds between each number is allowed while entering the code.

LAMP TEST KEY

Pressing the Lamp Test key on the Programmer, while the digital communicator is in Normal Mode, will cause the front panel LEDs and all segments of the four 7-segment display on the 411UDAC to light. A Lamp Test can only be performed in Normal Mode. The Lamp Test key can also be used in Troubleshoot Mode to view the 12 volt resettable power value.

1st EVENT KEY

This key, along with the **UP** and **DOWN** arrow keys, are used only in Program Mode. Press the **1st EVENT** key at any time to display the first program memory address and its content. The following may be displayed on the Programmer:

00_F
(address) (data)

If the **1st EVENT** key is pressed a second time, the following will be displayed on the Programmer display:

0.
↑
Digit to be programmed

The contents of any address can be viewed by entering the digits of the desired address. For example, to view the contents of address 86, press the '8' key on the keypad. '8' will appear as the first digit in the display, a blank will appear in the position of the second digit and the decimal point will move one position to the right, indicating that the next digit can now be entered.

8.
↑
Digit to be programmed

Press the '6' key on the keypad. '6' will appear as the second digit on the display and the decimal point will move one position to the right. Press the **[ENTER/STORE]** to view the contents of address 86.

86_.

DOWN ARROW

Use the **DOWN** arrow key to decrement the memory address and view its content.

UP ARROW

Use the **UP** arrow key to increment the memory address and view its content.

ENTER/STORE

Stores entry into nonvolatile E² memory located on the 411UDAC printed circuit board, then increments to the next higher address.

3.1.2 Programmer Display

Four 7-segment red LED characters provide visual display of information in the various modes of operation.

3.2 Password Creation and Entry

In order to access the Default Mode or Programming Mode, a valid password must be entered.

1. Press the **MODE** key followed by the 4-digit entry code (**3337** for Default Mode or **7764** for Program Mode).
2. Press the **[ENTER/STORE]** key. The display will read **LinP** indicating that a valid password is required to continue.

3. For the initial power-up of the 411UDAC or for the first power-up after a manually defaulted password, key in the default password **0000** and press **[ENTER/STORE]**. The display will then read **dC_P**.
4. Press **d** to continue with the default password or press **C** to change to a new password.
5. If **d** is entered in step 4, the display goes directly to the programming/default modes.
6. If **C** is entered in step 4, the display will read **En_P** prompting for a new password.
 - Key in a new 4-digit password. Valid passwords are any four digit code from 0001-9999.
 - The display will then read **rEnP**. Key in the new password again for verification.
 - Once the new password has been verified, the programming/default modes will be accessed.

If at any time a password was entered incorrectly, the display will read **AErr** indicating an invalid entry was made.

3.3 Real Time Clock Mode

Real Time Clock Mode is entered by pressing the **MODE** key followed by the 4-digit entry code **2525** and pressing the **[ENTER/STORE]** key. Accessing this mode requires authentication. Refer to Section 3.2.

- **2525** spells CLCK on a Touch-Tone[®] phone.

If an incorrect key is entered, reenter the proper 4-digit code before pressing the **[ENTER/STORE]** key. Note that as information is entered into the 411UDAC, the digits will scroll across the Programmer display from right to left.

```

  _2
 _25
_252
2525

```

A pause of up to 10 seconds between each number is allowed while entering the code. After pressing the **[ENTER/STORE]** key, the 411UDAC will be in Real Time Clock Mode. A maximum of 10 minutes idle time is allowed at this point before beginning program entries and between each key stroke, otherwise, the 411UDAC will return to Normal Mode. Note that the time is not stored until the fourth and final digit is selected and the **[ENTER/STORE]** key is pressed. If the 411UDAC returns to Normal Mode prior to entering the fourth digit, no changes will be stored and the original time is retained.

On entering Real Time Clock Mode, **0.001** will appear on the Programmer display:

```

      0.001
      ↑
Digit to be programmed

```


The time is displayed in military time. Note the position of the decimal point in the display. This indicates that the first digit to be programmed is the one to the left of the decimal point. To program the first hour digit, press the corresponding number on the Programmer keypad and then press the **[ENTER/STORE]** key. For example, to program 2:00 PM (**1400** in military time), press '1' on the keypad and then the **[ENTER/STORE]** key. The number '1' will appear as the far left digit and the decimal point will move one position to the right indicating that the second digit from the left is now ready for programming.

```

      10.01
      ↑
Digit to be programmed

```

Enter the second hour digit (4 in this example) and press the **[ENTER/STORE]** key. The number '4' will appear as the digit second from the left and the decimal point will move one position to the right indicating that the third digit from the left is now ready for programming.

140.1

 Digit to be programmed

Enter the first minute digit (0 in this example) and press the **[ENTER/STORE]** key. The number '0' will appear as the digit third from the left and the decimal point will move one position to the right indicating that the fourth digit from the left is now ready for programming.

1400.

 Digit to be programmed

Enter the second minute digit (0 in this example) and press the **[ENTER/STORE]** key. The number '0' will appear as the digit fourth from the left. Following the entry of the fourth and final digit, the operating mode will immediately switch to Normal Mode, indicating that programming of the time is now completed.

To exit Real Time Clock Mode before completing clock programming, press the **MODE** key, followed by the 4-digit code for an alternate mode and then the **[ENTER/STORE]** key. During Real Time Clock Mode, if no key is pressed within 10 minutes, the 411UDAC will revert to Normal Mode.

Note that upon power-up, the internal clock starts running at 00:01 midnight. It must be changed so that the 411UDAC can accurately call in test signals to the Central Station. Upon power loss or on entering Default Mode, the clock reverts to 00:01 midnight and must be reset.

3.4 Program Mode

| NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION AND OTHER INVOLVED PARTIES | | | |
|---|----------------------------|--|--|
| This product incorporates field-programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all as indicated below: | | | |
| Program feature or option | Permitted in UL 864? (Y/N) | Possible settings | Settings permitted in UL 864 |
| AC Loss Delay | Y | AC Loss Delay = 0, 1, 2 (factory default), 6, 7, 8, 10, 11, 12, 13, 14, 15, 16, 17, or 18 hours Refer to "AC Loss Reporting Delay (60)" on page 45. | AC Loss Delay = 1 or 2 hours |
| Input Channel 1-4 Delay Timer | Y | 0 – 179 seconds Refer to "Input Channel 1 Delay Timer (69 - 71)" on page 46 | Delay timer = 0 - 90 seconds |
| Trouble Call Limit | N | Program Address 96 = 0 (factory default): unlimited calling to Central Station for any trouble condition Program Address 96 = 1: limits call for each unique trouble to 10 within a 24 hour period Refer to "Trouble Call Limit - Dialer Runaway Prevention (96)" on page 50 | Program Address 96 = 0 for unlimited Central Station trouble calls |

All programming selections made during Program Mode are stored in nonvolatile memory. This ensures that the 411UDAC will retain all entries made in Programming Mode even if power is removed.

The user must program the primary and secondary phone numbers, account numbers, 24-hour test report times and verify event codes for each Central Station account. The 411UDAC is shipped with the program options/features already factory programmed. Alternative options/features may be programmed if desired. If all factory default settings are acceptable, programming is complete.

Program Mode is entered by pressing the **MODE** key followed by the 4-digit program mode entry code **7764** and pressing the **[ENTER/STORE]** key. Accessing this mode requires authentication. Refer to Section 3.2.

- **7764** spells PROG on a Touch-Tone® phone.

If an incorrect key is entered, reenter the proper 4-digit code before pressing the **[ENTER/STORE]** key. Note that as information is entered into the 411UDAC, the digits will scroll across the Programmer display from right to left.

```

  _7
 _77
_776
7764

```

A pause of up to 10 seconds between each number is allowed while entering the code. After pressing the **[ENTER/STORE]** key, the 411UDAC will be in Program Mode. A maximum of 10 minutes idle time is allowed at this point before beginning program entries and between each key stroke, otherwise, the unit will return to Normal Mode. All entries made prior to the 10 minute time-out are valid and are stored.

Once in Program Mode, the 411UDAC will:

- ✓ Light the DACT Trouble LED
- ✓ Activate Relay if programmed for DACT trouble
- ✓ Ignore all other keys other than those mentioned in this section
- ✓ Display **00_F** on the Programmer display
- ✓ Continue to communicate any events not previously acknowledged at a central station prior to entering Programming Mode
- ✓ Communicate an 'Off Normal' event to the Central Station
- ✓ Turn off piezo

While in Program Mode, the first three locations on the left of the Programmer display represent the memory address and the last location (farthest right) represents the contents of the memory address. The first address displayed is shown below:

```

  00_F
(address) (data)

```

Certain program items will be locked from editing if the communicator is active (dialing, transmitting, etc.). These programming locations are '00-19' Primary Central Station Phone Number, '20' Primary Central Station Communications Format, '21-24' Primary Central Station Account Code, '30-49' Secondary Central Station Phone Number, '50' Secondary Central Station Communications Format, '51-54' Secondary Central Station Account Code, '61' Central Station Backup Reporting and '145-end' Event Codes.

To unlock these locations, either wait until the communicator stops transmitting or disable the communicator via address location 64 by changing the content of this address to '0.'

When desired changes have been completed, exit Programming Mode by pressing the **MODE** key, followed by the 4-digit code for an alternate mode and then the **[ENTER/STORE]** key. During Program Mode, if no key is pressed within 10 minutes, the unit will revert to Normal Mode.

The Programmer cable should not be removed from the 411UDAC unless the unit is in Normal Mode. If the Programmer cable is removed while the 411UDAC is in a Mode other than Normal Mode, the communicator will automatically revert to Normal Mode following a 10 minute time-out period. Note that if the Programmer is in Troubleshoot Mode when the cable is removed, the 411UDAC will revert to Normal Mode following a 20 minute time-out period.

3.4.1 DACT Programming

Primary Central Station Phone Number (00 - 19)

The first twenty addresses (00 - 19) are factory set to 'F' (00_F to 19_F). Programming is done as follows:

- ✓ If your phone number is 484-7161, press 4.
- ✓ The display will read 00_4.
- ✓ Press [ENTER/STORE] to save the entry to memory and increment to the next address 01_F.
- ✓ Enter the remaining numbers in their respective addresses as shown below:

| | | | | | | | | | | | | | | | | | | | | |
|---------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Entry | 4 | 8 | 4 | 7 | 1 | 6 | 1 | F | F | F | F | F | F | F | F | F | F | F | F | |
| Address | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 |

Valid entries for both the primary and secondary phone numbers are 0 to 9 and A to F with the numeric digits as dialed numbers and the hexadecimal digits representing the following functions:

- A = * on a Touch-Tone phone keypad
- B = # on a Touch-Tone phone keypad
- C = look for secondary dial tone for up to two seconds (then dial anyway)
- D = three second pause
- E = five second pause
- F = end of phone number (Note: F must remain in all unused phone number addresses)

If the first digit of the Primary Central Station Phone Number remains 'F' and the digital communicator is enabled for transmission to a Central Station, a primary phone number fault will be generated. The phone number must begin with a digit other than 'F.'

New FCC regulations allow extra digits to the CIC (Carrier ID Code), to identify the long distance carrier. The expanded phone number field of 20 digits facilitates this function. Simply enter the digits required by the telephone company if desired.

Primary Central Station Number Communication Format (20)

One location is needed to select the Communication Format to the primary phone number. Address 20 is used for this purpose. The factory default setting for this address is 'E', which is Contact ID Format. You may enter '0' through 'D' in place of the default, then press [ENTER/STORE]. Choose from the list of formats below:

- 0: 4+1 Ademco Express Standard, DTMF, 1400/2300 ACK
- 1: 4+2 Ademco Express Standard, DTMF, 1400/2300 ACK
- 2: 3+1 Standard 1800 Hz Carrier, 2300 Hz ACK
- 3: 3+1 Expanded 1800 Hz Carrier, 2300 Hz ACK
- 4: 3+1 Standard 1900 Hz Carrier, 1400 Hz ACK
- 5: 3+1 Expanded 1900 Hz Carrier, 1400 Hz ACK
- 6: 4+1 Standard 1800 Hz Carrier, 2300 Hz ACK
- 7: 4+1 Expanded 1800 Hz Carrier, 2300 Hz ACK
- 8: 4+1 Standard 1900 Hz Carrier, 1400 Hz ACK

- 9: 4+1 Expanded 1900 Hz Carrier, 1400 Hz ACK
- A: 4+2 Standard 1800 Hz Carrier, 2300 Hz ACK
- B: 4+2 Expanded 1800 Hz Carrier, 2300 Hz ACK
- C: 4+2 Standard 1900 Hz Carrier, 1400 Hz ACK
- D: 4+2 Expanded 1900 Hz Carrier, 1400 Hz ACK
- E: Contact ID, DTMF, 1400/2300 ACK
- F: Future use

Consult the Central Station for proper Format selection. For any Format chosen, all event codes are automatically programmed by the 411UDAC. Refer to Table 3.1, "Ademco Contact ID Format - Primary," on page 37, Table 3.2, "4+2 Standard and 4+2 Express Formats - Primary," on page 38 and Table 3.3, "All 3+1, 4+1 and 4+2 Expanded Formats - Primary," on page 39.

Event Codes - Setting Entries

The Format selected in address 20 will cause the 411UDAC to automatically program addresses 145 - 228 with the factory default settings. Any of the Event Code settings may be altered. Consult your Central Station prior to altering the event code settings. An entry of all zeros for any event code will cause the communicator to NOT transmit the report. *Transmission of reports to either or both Central Station phone numbers may be disabled.*

Upon accessing the first event code address (address 145) shown in Table 3.2, the following may be displayed on the Programmer 7-Segment Display, if the corresponding Format was selected in address 20.

1451
(address) (data)

The first three locations on the left of the Programmer display represent the memory address **145** of the Format previously selected in address 20. The last location **1** (farthest right) represents the contents of memory address **145** (which is the first digit of the event code).

The following Tables list the data which is automatically programmed for each Format that can be selected in address 20. The addresses shown in each Table contain the Setting data which is automatically programmed by the 411UDAC. To change the value, key in the new digit and then press the [ENTER/STORE] key to save the new value. Use the **Up** and **Down Arrow** keys to increment to the next address or decrement to the previous address.

Ademco Contact ID Format Primary Central Station Event Codes

If 'E' is entered for address 20, the following data is automatically programmed for the Primary Central Station phone number event codes. Enter '000' for the Setting to disable the report to the Central Station. The Channel # is not programmable.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> | <u>Channel/Input #</u> |
|----------------|---|----------------|------------------------|
| 145 - 147 | Primary # Input Channel 1 Active Event Code | 111 | 001 |
| 148 - 150 | Primary # Input Channel 2 Active Event Code | 115 | 002 |
| 151 - 153 | Primary # Input Channel 3 Active Event Code | 111 | 003 |
| 154 - 156 | Primary # Input Channel 4 Active Event Code | 115 | 004 |
| 157 - 159 | Primary # Input Channel 1 Fault Event Code | 380 | 001 |
| 160 - 162 | Primary # Input Channel 2 Fault Event Code | 380 | 002 |
| 163 - 165 | Primary # Input Channel 3 Fault Event Code | 380 | 003 |
| 166 - 168 | Primary # Input Channel 4 Fault Event Code | 380 | 004 |
| 169 - 171 | Primary # AC Voltage Fault Event Code | 301 | 000 |
| 172 - 174 | Primary # Earth Fault Event Code | 310 | 000 |

Table 3.1 Ademco Contact ID Format - Primary

| <u>Address</u> | <u>Description</u> | <u>Setting</u> | <u>Channel/Input #</u> |
|----------------|---|----------------|------------------------|
| 175 - 177 | Primary # Low Battery Fault Event Code | 302 | 000 |
| 178 - 180 | Primary # No Battery Fault Event Code | 311 | 000 |
| 181 - 183 | Primary # Phone Line 1 Voltage Fault Event Code | 351 | 000 |
| 184 - 186 | Primary # Phone Line 2 Voltage Fault Event Code | 352 | 000 |
| 187 - 189 | Primary # NAC Fault Event Code | 321 | 000 |
| 190 - 192 | Primary # Charger Fault Event Code | 300 | 000 |
| 193 - 195 | Primary # Phone Number 1 Communication Fault Event Code | 354 | 001 |
| 196 - 198 | Primary # Phone Number 2 Communication Fault Event Code | 354 | 002 |
| 199 - 201 | Primary # System Off Normal Fault Event Code | 308 | 000 |
| 202 - 204 | Primary # System Test Message | 602 | 000 |
| 205 - 207 | Primary # System Abnormal Test Message | 608 | 000 |
| 208 - 210 | Primary # Upload/Download Request Code | 411 | 000 |
| 211 - 213 | Primary # Upload Successful Code | 416 | 000 |
| 214 - 216 | Primary # Download Successful Code | 412 | 000 |
| 217 - 219 | Primary # Upload/Download Failed Code | 413 | 000 |

Table 3.1 Ademco Contact ID Format - Primary**4+2 Standard and 4+2 Express Formats Primary Central Station Event Codes**

If '1, A or C' is entered for address 20, the following data is automatically programmed for the Primary Central Station phone number event codes. Enter '00' for the Setting to disable the report to the Central Station.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> |
|----------------|---|----------------|
| 145 - 146 | Primary # Input Channel 1 Active Event Code | 11 |
| 147 - 148 | Primary # Input Channel 2 Active Event Code | 12 |
| 149 - 150 | Primary # Input Channel 3 Active Event Code | 13 |
| 151 - 152 | Primary # Input Channel 4 Active Event Code | 14 |
| 153 - 154 | Primary # Input Channel 1 Fault Event Code | F1 |
| 155 - 156 | Primary # Input Channel 2 Fault Event Code | F2 |
| 157 - 158 | Primary # Input Channel 3 Fault Event Code | F3 |
| 159 - 160 | Primary # Input Channel 4 Fault Event Code | F4 |
| 161 - 162 | Primary # AC Fault Event Code | 92 |
| 163 - 164 | Primary # Earth Fault Event Code | 61 |
| 165 - 166 | Primary # Low Battery Fault Event Code | 62 |
| 167 - 168 | Primary # No Battery Fault Event Code | 63 |
| 169 - 170 | Primary # Phone Line 1 Voltage Fault Event Code | 64 |
| 171 - 172 | Primary # Phone Line 2 Voltage Fault Event Code | 65 |
| 173 - 174 | Primary # NAC Fault Event Code | 66 |
| 175 - 176 | Primary # Charger Fault Event Code | 47 |
| 177 - 178 | Primary # Phone Number 1 Communication Fault Event Code | 6A |
| 179 - 180 | Primary # Phone Number 2 Communication Fault Event Code | 6B |
| 181 - 182 | Primary # System Off Normal Fault Event Code | 6F |
| 183 - 184 | Primary # Input Channel 1 Active Restore Code | E1 |
| 185 - 186 | Primary # Input Channel 2 Active Restore Code | E2 |
| 187 - 188 | Primary # Input Channel 3 Active Restore Code | E3 |
| 189 - 190 | Primary # Input Channel 4 Active Restore Code | E4 |
| 191 - 192 | Primary # Input Channel 1 Fault Restore Code | D1 |
| 193 - 194 | Primary # Input Channel 2 Fault Restore Code | D2 |
| 195 - 196 | Primary # Input Channel 3 Fault Restore Code | D3 |

Table 3.2 4+2 Standard and 4+2 Express Formats - Primary

| <u>Address</u> | <u>Description</u> | <u>Setting</u> |
|----------------|---|----------------|
| 197 - 198 | Primary # Input Channel 4 Fault Restore Code | D4 |
| 199 - 200 | Primary # AC Voltage Fault Restore Code | 93 |
| 201 - 202 | Primary # Earth Fault Restore Code | A1 |
| 203 - 204 | Primary # Low Battery Fault Restore Code | A2 |
| 205 - 206 | Primary # No Battery Fault Restore Code | A3 |
| 207 - 208 | Primary # Phone Line 1 Voltage Fault Restore Code | A4 |
| 209 - 210 | Primary # Phone Line 2 Voltage Fault Restore Code | A5 |
| 211 - 212 | Primary # NAC Fault Restore Code | A6 |
| 213 - 214 | Primary # Charger Fault Restore Code | 57 |
| 215 - 216 | Primary # Phone Number 1 Communication Fault Restore Code | AA |
| 217 - 218 | Primary # Phone Number 2 Communication Fault Restore Code | AB |
| 219 - 220 | Primary # System Off Normal Restore Code | AF |
| 221 - 222 | Primary # System Test Message | 99 |
| 223 - 224 | Primary # System Abnormal Test Message | 91 |
| 225 - 226 | Primary # Upload/Download Request Code | 71 |
| 227 - 228 | Primary # Upload Successful Code | 72 |
| 229 - 230 | Primary # Download Successful Code | 73 |
| 231 - 232 | Primary # Upload/Download Failed Code | 74 |

Table 3.2 4+2 Standard and 4+2 Express Formats - Primary**All 3+1, 4+1 and 4+2 Expanded Formats Primary Central Station Event Codes**

If '0, 2, 3, 4, 5, 6, 7, 8, 9, B or D' is entered for address 20, the following data is automatically programmed for the Primary Central Station phone number event codes. Enter '0' for the Setting to disable the report to the Central Station.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> |
|----------------|---|----------------|
| 145 | Primary # Input Channel 1 Active Event Code | 1 |
| 146 | Primary # Input Channel 2 Active Event Code | 1 |
| 147 | Primary # Input Channel 3 Active Event Code | 1 |
| 148 | Primary # Input Channel 4 Active Event Code | 1 |
| 149 | Primary # Input Channel 1 Fault Event Code | F |
| 150 | Primary # Input Channel 2 Fault Event Code | F |
| 151 | Primary # Input Channel 3 Fault Event Code | F |
| 152 | Primary # Input Channel 4 Fault Event Code | F |
| 153 | Primary # AC Power Fault Event Code | 9 |
| 154 | Primary # Earth Fault Event Code | 6 |
| 155 | Primary # Low Battery Fault Event Code | 6 |
| 156 | Primary # No Battery Fault Event Code | 6 |
| 157 | Primary # Phone Line 1 Voltage Fault Event Code | 6 |
| 158 | Primary # Phone Line 2 Voltage Fault Event Code | 6 |
| 159 | Primary # NAC Fault Event Code | 6 |
| 160 | Primary # Charger Fault Event Code | 4 |
| 161 | Primary # Phone Number 1 Communication Fault Event Code | 6 |
| 162 | Primary # Phone Number 2 Communication Fault Event Code | 6 |
| 163 | Primary # System Off Normal Fault Code | 6 |
| 164 | Primary # Input Channel 1 Active Restore Code | E |
| 165 | Primary # Input Channel 2 Active Restore Code | E |
| 166 | Primary # Input Channel 3 Active Restore Code | E |
| 167 | Primary # Input Channel 4 Active Restore Code | E |
| 168 | Primary # Input Channel 1 Fault Restore Code | D |
| 169 | Primary # Input Channel 2 Fault Restore Code | D |
| 170 | Primary # Input Channel 3 Fault Restore Code | D |

Table 3.3 All 3+1, 4+1 and 4+2 Expanded Formats - Primary

| Address | Description | Setting |
|----------------|---|----------------|
| 171 | Primary # Input Channel 4 Fault Restore Code | D |
| 172 | Primary # AC Voltage Fault Restore Code | 9 |
| 173 | Primary # Earth Fault Restore Code | A |
| 174 | Primary # Low Battery Fault Restore Code | A |
| 175 | Primary # No Battery Fault Restore Code | A |
| 176 | Primary # Phone Line 1 Voltage Fault Restore Code | A |
| 177 | Primary # Phone Line 2 Voltage Fault Restore Code | A |
| 178 | Primary # NAC Fault Restore Code | A |
| 179 | Primary # Charger Fault Restore Code | |
| 180 | Primary # Phone Number 1 Communication Fault Restore Code | A |
| 181 | Primary # Phone Number 2 Communication Fault Restore Code | A |
| 182 | Primary # System Off Normal Restore Code | A |
| 183 | Primary # System Test Message | 9 |
| 184 | Primary # System Abnormal Test Message | F * |
| 185 | Primary # Upload/Download Request Code | 7 |
| 186 | Primary # Upload Successful Code | 7 |
| 187 | Primary # Download Successful Code | 7 |
| 188 | Primary # Upload/Download Failed Code | 7 |

Table 3.3 All 3+1, 4+1 and 4+2 Expanded Formats - Primary

* For Formats 'B' and 'D', this address is defaulted to '9' instead of 'F.'

Primary Central Station Number Account Code (21 - 24)

The four locations at addresses 21 - 24 default to all '0's. Valid entries are 0 - 9 and A - F. The number of digits entered must match the format selection. If programming '2, 3, 4 or 5' into address 20, enter three digits (one digit each in locations 21, 22 and 23 - location 24 is ignored). If programming '0, 1, 6, 7, 8, 9, A, B, C, D or E' into address 20, enter four digits (one each in locations 21, 22, 23 and 24).

Primary Central Station Number 24 Hour Test Time (25 - 28)

Use military time when entering the 24 hour 'test' time. The 24 hour test report to phone number 1 takes up four locations, from addresses 25 - 28. The default is 00:00 (12:00 midnight). The limits for each location are as follows (do not use values of A - F as entries).

25: enter 0, 1 or 2

26: enter 0 - 9

27: enter 0 - 5

28: enter 0 - 9

Primary Central Station Number 24/12/8/6 Hour Test Time Interval (29)

The test report sent to the Primary phone number may be sent every 6, 8, 12 or 24 hours. If the message is to be sent every 24 hours, leave the factory default entry of '0'. If other test report times are needed, enter 1 = 12 hour, 2 = 8 hour or 3 = 6 hour.

Secondary Central Station Phone Number (30 - 49)

Addresses **30 - 49** are factory set to 'F' (**30_F to 49_F**). Programming is typically done as follows:

- ✓ If your phone number is 484-7161, press **4**.
- ✓ The display will read **30_4**.
- ✓ Press **[ENTER/STORE]** to save the entry to memory and increment to the next address **31_F**.

✓ Enter the remaining numbers in their respective addresses as shown below:

| | | | | | | | | | | | | | | | | | | | | |
|---------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Entry | 4 | 8 | 4 | 7 | 1 | 6 | 1 | F | F | F | F | F | F | F | F | F | F | F | F | |
| Address | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 |

Valid entries for both the primary and secondary phone numbers are 0 to 9 and A to F with the numeric digits as dialed numbers and the hexadecimal digits representing the following functions:

- A = * on a Touch-Tone phone keypad
- B = # on a Touch-Tone phone keypad
- C = look for secondary dial tone for up to two seconds (then dial anyway)
- D = three second pause
- E = five second pause
- F = end of phone number (Note: F must remain in all unused phone number addresses)

If the first digit of the Secondary Central Station Phone Number remains 'F' and the digital communicator is enabled for transmission to a Central Station, a secondary phone number fault will be generated. The phone number must begin with a digit other than 'F.'

Secondary Central Station Number Communication Format (50)

One location is needed to select the Communication Format to the secondary phone number. Address 50 is used for this purpose. The factory default setting for this address is 'E', which is Contact ID Format. You may enter '0' through 'D' in place of the default, then press **[ENTER/STORE]**. Choose from the list of formats below:

- 0: 4+1 Ademco Express Standard, DTMF, 1400/2300 ACK
- 1: 4+2 Ademco Express Standard, DTMF, 1400/2300 ACK
- 2: 3+1 Standard 1800 Hz Carrier, 2300 Hz ACK
- 3: 3+1 Expanded 1800 Hz Carrier, 2300 Hz ACK
- 4: 3+1 Standard 1900 Hz Carrier, 1400 Hz ACK
- 5: 3+1 Expanded 1900 Hz Carrier, 1400 Hz ACK
- 6: 4+1 Standard 1800 Hz Carrier, 2300 Hz ACK
- 7: 4+1 Expanded 1800 Hz Carrier, 2300 Hz ACK
- 8: 4+1 Standard 1900 Hz Carrier, 1400 Hz ACK
- 9: 4+1 Expanded 1900 Hz Carrier, 1400 Hz ACK
- A: 4+2 Standard 1800 Hz Carrier, 2300 Hz ACK
- B: 4+2 Expanded 1800 Hz Carrier, 2300 Hz ACK
- C: 4+2 Standard 1900 Hz Carrier, 1400 Hz ACK
- D: 4+2 Expanded 1900 Hz Carrier, 1400 Hz ACK
- E: Contact ID, DTMF, 1400/2300 ACK
- F: Future use

The Format selected in address 50 will cause the 411UDAC to automatically program addresses 229 - 312 with the factory default settings. Any of the Event Code settings may be altered. Consult your Central Station prior to altering the event code settings. An entry of all zeros for any event code will cause the communicator to NOT transmit the report. *Transmission of reports to either or both Central Station phone numbers may be disabled.*

Refer to "Central Station Communications" on page 54 for information on Format reporting.

Upon accessing the first event code address which is 229 (Table 3.5, “4+2 Standard and 4+2 Express Formats - Secondary,” on page 43), the following may be displayed on the Programmer’s 7-Segment Display, if the corresponding Format was selected in address 50.

2291
(address) (data)

The first three locations on the left of the Programmer’s display represent the memory address **229**. The last location **1** (farthest right) represents the contents of memory address **229** which is the first digit of the event code.

The following Tables list the data which is automatically programmed for each Format that can be selected in address 50. The addresses shown in each Table contain the event code Setting data which is automatically programmed by the 411UDAC. To change the value, key in the new digits and then press the [ENTER/STORE] key to save the new value. Use the **Up** and **Down Arrow** keys to increment to the next address or decrement to the previous address.

Ademco Contact ID Format Secondary Central Station Event Codes

If ‘E’ is entered for address 50, the following data is automatically programmed for the Secondary Central Station phone number event codes. Enter '000' for the Setting to disable the report to the Central Station.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> | <u>Channel/Input #</u> |
|----------------|---|----------------|------------------------|
| 233 - 235 | Secondary # Input Channel 1 Active Event Code | 111 | 001 |
| 236 - 238 | Secondary # Input Channel 2 Active Event Code | 115 | 002 |
| 239 - 241 | Secondary # Input Channel 3 Active Event Code | 111 | 003 |
| 242 - 244 | Secondary # Input Channel 4 Active Event Code | 115 | 004 |
| 245 - 247 | Secondary # Input Channel 1 Fault Event Code | 380 | 001 |
| 248 - 250 | Secondary # Input Channel 2 Fault Event Code | 380 | 002 |
| 251 - 253 | Secondary # Input Channel 3 Fault Event Code | 380 | 003 |
| 254 - 256 | Secondary # Input Channel 4 Fault Event Code | 380 | 004 |
| 257 - 259 | Secondary # AC Voltage Fault Event Code | 301 | 000 |
| 260 - 262 | Secondary # Earth Fault Event Code | 310 | 000 |
| 263 - 265 | Secondary # Low Battery Fault Event Code | 302 | 000 |
| 266 - 268 | Secondary # No Battery Fault Event Code | 311 | 000 |
| 269 - 271 | Secondary # Phone Line 1 Voltage Fault Event Code | 351 | 000 |
| 272 - 274 | Secondary # Phone Line 2 Voltage Fault Event Code | 352 | 000 |
| 275 - 277 | Secondary # NAC Fault Event Code | 321 | 000 |
| 278 - 280 | Secondary # Charger Fault Event Code | 300 | 000 |
| 281 - 283 | Secondary # Phone Number 1 Communication Fault Event Code | 354 | 001 |
| 284 - 286 | Secondary # Phone Number 2 Communication Fault Event Code | 354 | 002 |
| 287 - 289 | Secondary # System Off Normal Fault Event Code | 308 | 000 |
| 290 - 292 | Secondary # System Test Message | 602 | 000 |
| 293 - 295 | Secondary # System Abnormal Test Message | 608 | 000 |
| 296 - 298 | Secondary # Upload/Download Request Code | 411 | 000 |
| 299 - 301 | Secondary # Upload Successful Code | 416 | 000 |
| 302 - 304 | Secondary # Download Successful Code | 412 | 000 |
| 305 - 307 | Secondary # Upload/Download Failed Code | 413 | 000 |

Table 3.4 Ademco Contact ID Format - Secondary

4+2 Standard and 4+2 Express Formats Secondary Central Station Event Codes

If 1, A or C is entered for address 50, the following data is automatically programmed for the Secondary Central Station phone number event codes. Enter '00' for the Setting to disable the report to the Central Station.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> |
|----------------|---|----------------|
| 233 - 234 | Secondary # Input Channel 1 Active Event Code | 11 |
| 235 - 236 | Secondary # Input Channel 2 Active Event Code | 12 |
| 237 - 238 | Secondary # Input Channel 3 Active Event Code | 13 |
| 239 - 240 | Secondary # Input Channel 4 Active Event Code | 14 |
| 241 - 242 | Secondary # Input Channel 1 Fault Event Code | F1 |
| 243 - 244 | Secondary # Input Channel 2 Fault Event Code | F2 |
| 245 - 246 | Secondary # Input Channel 3 Fault Event Code | F3 |
| 247 - 248 | Secondary # Input Channel 4 Fault Event Code | F4 |
| 249 - 250 | Secondary # AC Fault Event Code | 92 |
| 251 - 252 | Secondary # Earth Fault Event Code | 61 |
| 253 - 254 | Secondary # Low Battery Fault Event Code | 62 |
| 255 - 256 | Secondary # No Battery Fault Event Code | 63 |
| 257 - 258 | Secondary # Phone Line 1 Voltage Fault Event Code | 64 |
| 259 - 260 | Secondary # Phone Line 2 Voltage Fault Event Code | 65 |
| 261 - 262 | Secondary # NAC Fault Event Code | 66 |
| 263 - 264 | Secondary # Charger Fault Event Code | 47 |
| 265 - 266 | Secondary # Phone Number 1 Communication Fault Event Code | 6A |
| 267 - 268 | Secondary # Phone Number 2 Communication Fault Event Code | 6B |
| 269 - 270 | Secondary # System Off Normal Fault Event Code | 6F |
| 271 - 272 | Secondary # Input Channel 1 Active Restore Code | E1 |
| 273 - 274 | Secondary # Input Channel 2 Active Restore Code | E2 |
| 275 - 276 | Secondary # Input Channel 3 Active Restore Code | E3 |
| 277 - 278 | Secondary # Input Channel 4 Active Restore Code | E4 |
| 279 - 280 | Secondary # Input Channel 1 Fault Restore Code | D1 |
| 281 - 282 | Secondary # Input Channel 2 Fault Restore Code | D2 |
| 283 - 284 | Secondary # Input Channel 3 Fault Restore Code | D3 |
| 285 - 286 | Secondary # Input Channel 4 Fault Restore Code | D4 |
| 287 - 288 | Secondary # AC Voltage Fault Restore Code | 93 |
| 289 - 290 | Secondary # Earth Fault Restore Code | A1 |
| 291 - 292 | Secondary # Low Battery Fault Restore Code | A2 |
| 293 - 294 | Secondary # No Battery Fault Restore Code | A3 |
| 295 - 296 | Secondary # Phone Line 1 Voltage Fault Restore Code | A4 |
| 297 - 298 | Secondary # Phone Line 2 Voltage Fault Restore Code | A5 |
| 299 - 300 | Secondary # NAC Fault Restore Code | A6 |
| 301 - 302 | Secondary # Charger Fault Restore Code | 57 |
| 303 - 304 | Secondary # Phone Number 1 Communication Fault Restore Code | AA |
| 305 - 306 | Secondary # Phone Number 2 Communication Fault Restore Code | AB |
| 307 - 308 | Secondary # System Off Normal Restore Code | AF |
| 309 - 310 | Secondary # System Test Message | 99 |
| 311 - 312 | Secondary # System Abnormal Test Message | 91 |
| 313 - 314 | Secondary # Upload/Download Request Code | 71 |
| 315 - 316 | Secondary # Upload Successful Code | 72 |
| 317 - 318 | Secondary # Download Successful Code | 73 |
| 319 - 320 | Secondary # Upload/Download Failed Code | 74 |

Table 3.5 4+2 Standard and 4+2 Express Formats - Secondary

All 3+1, 4+1 and 4+2 Expanded Formats Secondary Central Station Event Codes

If 0, 2, 3, 4, 5, 6, 7, 8, 9, B or D is entered for address 50, the following data is automatically programmed for the Secondary Central Station phone number event codes. Enter '0' for the Setting to disable the report to the Central Station.

| <u>Address</u> | <u>Description</u> | <u>Setting</u> |
|----------------|---|----------------|
| 233 | Secondary # Input Channel 1 Active Event Code | 1 |
| 234 | Secondary # Input Channel 2 Active Event Code | 1 |
| 235 | Secondary # Input Channel 3 Active Event Code | 1 |
| 236 | Secondary # Input Channel 4 Active Event Code | 1 |
| 237 | Secondary # Input Channel 1 Fault Event Code | F |
| 238 | Secondary # Input Channel 2 Fault Event Code | F |
| 239 | Secondary # Input Channel 3 Fault Event Code | F |
| 240 | Secondary # Input Channel 4 Fault Event Code | F |
| 241 | Secondary # AC Power Fault Event Code | 9 |
| 242 | Secondary # Earth Fault Event Code | 6 |
| 243 | Secondary # Low Battery Fault Event Code | 6 |
| 244 | Secondary # No Battery Fault Event Code | 6 |
| 245 | Secondary # Phone Line 1 Voltage Fault Event Code | 6 |
| 246 | Secondary # Phone Line 2 Voltage Fault Event Code | 6 |
| 247 | Secondary # NAC Fault Event Code | 6 |
| 248 | Secondary # Charger Fault Event Code | 4 |
| 249 | Secondary # Phone Number 1 Communication Fault Event Code | 6 |
| 250 | Secondary # Phone Number 2 Communication Fault Event Code | 6 |
| 251 | Secondary # System Off Normal Fault Code | 6 |
| 252 | Secondary # Input Channel 1 Active Restore Code | E |
| 253 | Secondary # Input Channel 2 Active Restore Code | E |
| 254 | Secondary # Input Channel 3 Active Restore Code | E |
| 255 | Secondary # Input Channel 4 Active Restore Code | E |
| 256 | Secondary # Input Channel 1 Fault Restore Code | D |
| 257 | Secondary # Input Channel 2 Fault Restore Code | D |
| 258 | Secondary # Input Channel 3 Fault Restore Code | D |
| 259 | Secondary # Input Channel 4 Fault Restore Code | D |
| 260 | Secondary # AC Voltage Fault Restore Code | 9 |
| 261 | Secondary # Earth Fault Restore Code | A |
| 262 | Secondary # Low Battery Fault Restore Code | A |
| 263 | Secondary # No Battery Fault Restore Code | A |
| 264 | Secondary # Phone Line 1 Voltage Fault Restore Code | A |
| 265 | Secondary # Phone Line 2 Voltage Fault Restore Code | A |
| 266 | Secondary # NAC Fault Restore Code | A |
| 267 | Secondary # Charger Fault Restore Code | 5 |
| 268 | Secondary # Phone Number 1 Communication Fault Restore Code | A |
| 269 | Secondary # Phone Number 2 Communication Fault Restore Code | A |
| 270 | Secondary # System Off Normal Restore Code | A |
| 271 | Secondary # System Test Message | 9 |
| 272 | Secondary # System Abnormal Test Message | F * |
| 273 | Secondary # Upload/Download Request Code | 7 |
| 274 | Secondary # Upload Successful Code | 7 |
| 275 | Secondary # Download Successful Code | 7 |
| 276 | Secondary # Upload/Download Failed Code | 7 |

Table 3.6 All 3+1, 4+1 and 4+2 Expanded Formats - Secondary

* For Formats 'B' and 'D', this address is defaulted to '9' instead of 'F.'

Secondary Central Station Number Account Code (51 - 54)

The four locations at addresses 51 - 54 default to all '0's. Valid entries are 0 - 9 and A - F. The number of digits entered must match the format selection. If programming '2, 3, 4 or 5' into address 50, enter three digits (one digit each in locations 51, 52 and 53 - location 54 is ignored). If programming '0, 1, 6, 7, 8, 9, A, B, C, D or E' into address 50, enter four digits (one each in locations 51, 52, 53 and 54).

Secondary Central Station Number 24 Hour Test Time (55 - 58)

Use military time when entering the 24 hour 'test' time. The 24 hour test report to phone number 1 takes up four locations, from addresses 55 - 58. The default is 00:00 (12:00 midnight). The limits for each location are as follows (do not use values of A - F as entries):

55: enter 0, 1 or 2

56: enter 0 - 9

57: enter 0 - 5

58: enter 0 - 9

Secondary Central Station Number 24/12/8/6 Hour Test Time Interval (59)

The test report sent to the Secondary phone number may be sent every 6, 8, 12 or 24 hours. If the message is to be sent every 24 hours, leave the factory default entry of '0'. If other test report times are needed, enter 1 = 12 hour, 2 = 8 hour or 3 = 6 hour.

AC Loss Reporting Delay (60)

Enter a digit of 0 - 9 or A - F corresponding to the number of hours to be delayed in reporting the loss of AC power. The factory default is '2' for 2 hours. The valid entries are '0' = no delay; '1' = 1 hours; '2' = 2 hours; '3' = 6 hours; '4' = 7 hours; '5' = 8 hours; '6' = 9 hours; '7' = 10 hours; '8' = 11 hours; '9' = 12 hours; 'A' = 13 hours; 'B' = 14 hours; 'C' = 15 hours; 'D' = 16 hours; 'E' = 17 hours; 'F' = 18 hours.

UL requires a 1-3 hour delay.

Backup Reporting (61)

Leaving address 61 at '0' means that reports will be transmitted to the secondary Central Station phone number only if attempts to communicate to the primary Central Station phone number are unsuccessful. Programming a '1' causes all reports to be transmitted to both the primary and secondary Central Station phone numbers. Programming a '2' causes reports to go to the first available receiver.

Do not alter this entry while the digital communicator is active!

Reserved for Future Use (62)

DACT Trouble Reminder (63)

The factory default entry of '0' in address location 63 disables the trouble reminder feature. Selecting '1' for location 63 will cause a reminding beep (after the Silence switch is pressed) every 15 seconds for active alarms and every two minutes during a DACT trouble condition. The beeps from the onboard piezo sounder will occur until the alarm or DACT fault is cleared. The piezo sounder will begin beeping at a rate of one second On and one second Off after 24 hours unless the DACT fault has been cleared.

Operational Mode Selection (64)

The factory default setting is '0' for latching inputs and the onboard communicator disabled. This prevents the unit from transmitting status information to the Central Station(s).

| Address 64 Setting | 411UDAC Operational Mode | 411UDAC Function |
|--------------------|-----------------------------------|---|
| 0 | Stand-alone/Communicator Disabled | latching inputs/onboard communicator disabled |
| 1 | Stand-alone/Communicator Enabled | latching inputs/onboard communicator enabled |
| 2 | Slave/Communicator Enabled | non-latching inputs/onboard communicator enabled |
| 3 | Slave/Communicator Disabled | non-latching inputs/onboard communicator disabled |

Table 3.7 411UDAC Operational Modes**Input Channel 1 Function Selection (65)¹**

Factory default for Channel 1 is '0' for activation on fire alarm (2 or 4-wire smoke). Enter '1' for pull station; '2' for normally open contact device; '3' for host panel trouble; '4' for fire supervisory; '5' for fire supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.

Input Channel 2 Function Selection (66)¹

Factory default for Channel 2 is '1' for pull station. Enter '2' for normally open contact device; '3' for host panel trouble; '4' for fire supervisory; '5' for fire supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.

Note that '0' is not a valid entry.

Input Channel 3 Function Selection (67)¹

Factory default for Channel 3 is '0' for activation on fire alarm (2 or 4-wire smoke). Enter '1' for pull station; '2' for normally open contact device; '3' for host panel trouble; '4' for fire supervisory; '5' for fire supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.

Input Channel 4 Function Selection (68)¹

Factory default for Channel 4 is '1' for pull station. Enter '2' for normally open contact device; '3' for host panel trouble; '4' for fire supervisory; '5' for fire supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.

Note that '0' is not a valid entry.

Input Channel 1 Delay Timer (69 - 71)²

The Delay Timer is used to delay digital communicator transmission to a Central Station when the Input Channel is activated. Input Channel 1 Delay Timer is factory set to '000' seconds for no delay. The timer may be programmed for a delay of from 0 to 179 seconds. *Inputs programmed for fire alarm, pull station, host control panel trouble and fire supervisory, must not be delayed. A delay, therefore, cannot be selected for inputs programmed for these fire applications.* If the input is set for a waterflow function, the delay timer will also delay activation of the relay, piezo sounder and LEDs.

Input Channel 2 Delay Timer (72 - 74)²

The Delay Timer is used to delay digital communicator transmission to a Central Station when the Input Channel is activated. Input Channel 2 Delay Timer is factory set to '000' seconds for no delay. The timer may be programmed for a delay of from 0 to 179 seconds. *Inputs programmed for fire alarm, pull station, host control panel trouble and fire supervisory, must not be delayed. A*

1. Changing the input function will automatically change the corresponding Primary and Secondary event codes to reflect the new input function. The Communication Format should be programmed first, followed by the Input Channel Function. See “Events and Default Event Codes” on page 79.
2. This timer does not delay LED or Output Relay activation and is not used for channels programmed as AC Loss circuits.

delay, therefore, cannot be selected for inputs programmed for these fire applications. If the input is set for a waterflow function, the delay timer will also delay activation of the relay, piezo sounder and LEDs.

Input Channel 3 Delay Timer (75 - 77)¹

The Delay Timer is used to delay digital communicator transmission to a Central Station when the Input Channel is activated. Input Channel 3 Delay Timer is factory set to '000' seconds for no delay. The timer may be programmed for a delay of from 0 to 179 seconds. *Inputs programmed for fire alarm, pull station, host control panel trouble and fire supervisory, must not be delayed. A delay, therefore, cannot be selected for inputs programmed for these fire applications.* If the input is set for a waterflow function, the delay timer will also delay activation of the relay, piezo sounder and LEDs.

Input Channel 4 Delay Timer (78 - 80)¹

The Delay Timer is used to delay digital communicator transmission to a Central Station when the Input Channel is activated. Input Channel 4 Delay Timer is factory set to '000' seconds for no delay. The timer may be programmed for a delay of from 0 to 179 seconds. *Inputs programmed for fire alarm, pull station, host control panel trouble and fire supervisory, must not be delayed. A delay, therefore, cannot be selected for inputs programmed for these fire applications.* If the input is set for a waterflow function, the delay timer will also delay activation of the relay, piezo sounder and LEDs.

Touchtone/Rotary Select for Primary Phone (81)

A '0' programmed in this address by the factory, triggers Touchtone dialing over the primary phone line. Select '1' for rotary dialing.

Make/Break Ratio for Primary Phone (82)

This address is used only if a '1' has been programmed for address 81. The Make/Break ratio is factory set to '0' which is 67/33 ratio, but may be changed to '1' which is 62/38 ratio.

Touchtone/Rotary Select for Secondary Phone (83)

A '0' programmed in this address by the factory, triggers Touchtone dialing over the secondary phone line. Select '1' for rotary dialing.

Make/Break Ratio for Secondary Phone (84)

This address is used only if a '1' has been programmed for address 83. The Make/Break ratio is factory set to '0' which is 67/33 ratio, but may be changed to '1' which is 62/38 ratio.

Output Relay #1 Enable (85)

The factory default setting for Output Relay #1 is '0' for disabled. Enter '1' to enable the relay.

Output Relay #1 Function Selections (86)

The Output Relay can be programmed to activate for any one of six conditions. The factory default for address 86 is '0' for activation on fire alarm. Program a '1' for host panel trouble; '2' for DACT trouble; '3' for latching fire supervisory; '4' for autoresettable fire supervisory; '8' for total communication failure.

Output Relay #2 Enable (87)

The factory default setting for Output Relay #2 is '0' for disabled. Enter '1' to enable the relay.

1. This timer does not delay LED or Output Relay activation and is not used for channels programmed as AC Loss circuits.

Output Relay #2 Function Selections (88)

Output Relay #2 can be programmed to activate for any one of six conditions. The factory default for address 88 is '2' for activation on DACT trouble. Program a '0' for activation on fire alarm; '1' for host panel trouble; '3' for latching fire supervisory; '4' for autoresettable fire supervisory; '8' for total communication failure.

Reserved for Future Use (89)

Leave default setting of '0'

Panel Unlock (90)

The communicator must be unlocked to accept a remote upload/download. Leaving the default setting of '0' will require the unlock code **8655** be entered for each data transfer session (30 minute timeout). Enter '1' to keep the communicator in a permanent unlocked state.

Alarm Verification Enable (91)

Alarm verification works only on zones programmed as 2 or 4-wire smoke detector zones (i.e. zones 1 and 3). After detecting an alarm, the panel removes power from two or four-wire smoke zones, resetting all 2 or 4-wire smoke detectors. Power is reapplied and a 18 second restart period allows detectors to stabilize. During the retard/reset/restart period of 25 seconds, subsequent alarms by the same initiating zone are ignored. An alarm detected on any other 2 or 4-wire detector zone during the restart period will cause immediate verified alarms. A subsequent alarm on the initiating zone occurring within the confirmation time will cause a verified alarm.



NOTE: Mixing devices on zones designated as 2 or 4-wire smoke zones is not recommended. The communicator will not transmit a signal to the Central Station signifying that alarm verification is in progress.

During the alarm verification period, access to other modes of operation is prevented.

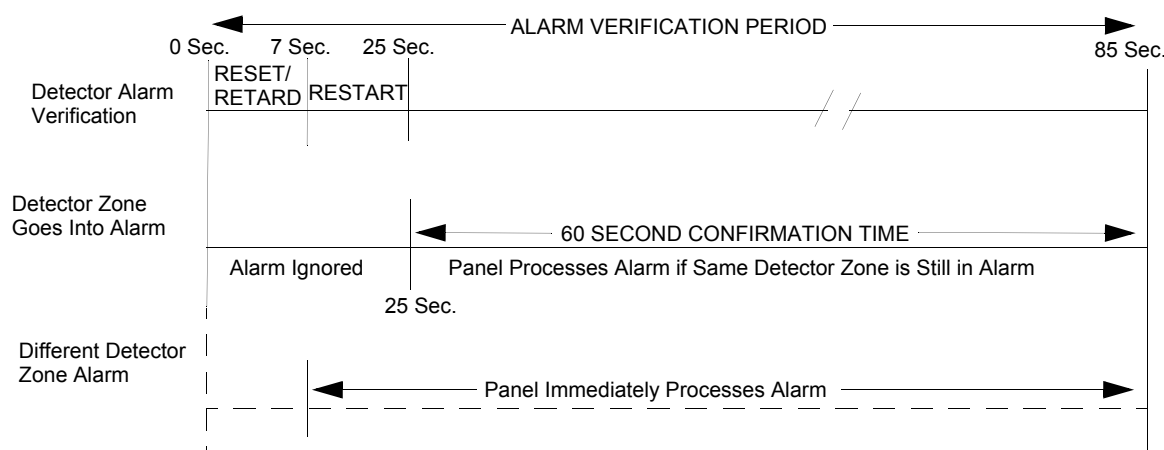


Figure 3.2 Verification Timing Diagram

Factory Default is no verification which is an entry of '0'. Entering '1' enables verification. Alarm Verification is ignored if the 411UDAC is configured for nonlatching Slave Communicator operation or Test Mode.



NOTE: Consult local Authority Having Jurisdiction (AHJ) prior to altering this address.

Silence Inhibit Notification Appliance Circuit (92)

Setting address 92 to '1' prevents the silencing or resetting of the Notification Appliance Circuit for one minute following an alarm. The factory default setting is '0' for no silence inhibit.

Autosilence Notification Appliance Circuit (93)

The Notification Appliance Circuit may be autosilenced after a programmed time interval between 5 and 30 minutes. Enter '1' for 5 minute autosilence; '2' for 10 minutes; '3' for 15 minutes; '4' for 20 minutes; '5' for 25 minutes; '6' for 30 minutes. The factory default is '0' for no autosilence.

Restoral Method (94)

Restoral Method refers to the *communication* of Restoral Events to a Central Station. It has no effect on the actual input circuit restoral itself.

- Typical Restoral Method - '0' entry programs the panel to transmit each input circuit restoral, as it occurs, to the Central Station. In Slave Mode, this means that as soon as an input restores, the communicator will immediately transmit the Restoral Event to the Central Station. In Stand-alone Mode, the restoral of inputs programmed as Autoresettable Supervisory will also cause the communicator to transmit a Restoral Event immediately. All other input types in Stand-alone Mode are latching and their restoral will not communicate a Restoral Event until the Reset Switch is pressed.
- Conditional Restoral Method #1 - '1' entry programs the panel to transmit each input circuit restoral, as it occurs, to the Central Station. In Slave Mode, this means that as soon as an input restores, the communicator will immediately transmit the Restoral Event to the Central Station. In Stand-alone Mode, the restoral of inputs programmed as Autoresettable Supervisory will also cause the communicator to transmit a Restoral Event immediately. All other input types in Stand-alone Mode are latching and the communication of their Restoral Events are dependent upon an after-reset condition.
The input circuit must be physically clear of an input short upon completion of the reset period. If, and only if, the input circuit is normal (clear of an input short) after the reset period will the communicator transmit a Restoral Event to the Central Station. If the input circuit remains active after the reset period, no transmission will take place.
- Conditional Restoral Method #2 - '2' entry programs the panel to transmit each input circuit restoral if, and only if, *all* input circuits are normal (clear of an input short). In Slave Mode, this means that as soon as *all* input circuits are restored, the communicator will transmit the Restoral Event(s) to the Central Station. In Stand-alone Mode, the restoral of inputs programmed as either Autoresettable Supervisory will cause the communicator to transmit a Restoral Event if, and only if, all input circuits are normal¹. All other input types in Stand-alone Mode are latching and the communication of their Restoral Events are dependent upon an after-reset condition. If, and only if, all input circuits are normal (clear of an input short) after the reset period will the communicator transmit a Restoral Event(s) to the Central Station. If *any* input circuit remains active after the reset period, no transmission will take place, *even if other input circuits are truly restored*.

1. Latching input circuits will never restore in Stand-alone Mode until the Reset Switch is pressed. If both an Autoresettable input circuit and a Latching input circuit are activated and subsequently cleared, only the Autoresettable input circuit will restore, but no transmission will occur to the Central Station since there is still an input circuit active (the Latching input circuit).

Table 3.8 describes the events that would take place after the reset period, according to each unique Communicator Restoral Method. It is assumed that an input circuit is active before reset.

| Input Circuit After Reset | Typical Restoral Method | Conditional Restoral Method #1 | Conditional Restoral Method #2 |
|---------------------------|---|--|---|
| SHORTED | All local annunciation of the active event stops. The short is rediscovered after reset period and local annunciation begins again.* The panel communicates: 1. A Restoral Event 2. An Active Event† | All local annunciation of the active event stops. The short is rediscovered after reset period and local annunciation begins again.* The panel communicates nothing because this input is still in an active state after reset. | All local annunciation of the active event stops. The short is rediscovered after reset period and local annunciation begins again.* The panel communicates nothing because an input (can be any input) is still in an active state after reset. |
| NOT SHORTED | All local annunciation of the active event stops. The circuit is found to be in a normal state. The panel communicates: 1. A Restoral Event | All local annunciation of the active event stops. The circuit is found to be in a normal state. The panel communicates: 1. A Restoral Event | All local annunciation of the active event stops. The circuit is found to be in a normal state. <i>If, and only if, <u>all</u> input circuits are found to be in a normal state</i> will the panel communicate: 1. A Restoral Event Otherwise, the panel will communicate nothing. |

Table 3.8 Restoral Methods

* Local annunciation is dependent upon input circuit function. Inputs programmed as waterflow devices will not annunciate until the waterflow retard period has expired. Inputs programmed as 2 or 4-wire smoke devices, with the Alarm Verification feature enabled, will not annunciate until the alarm is verified.

† Inputs programmed with a delay will not communicate the Active Event until the delay period has expired.

Coding, Notification Appliance Circuit (95)

Coding of the Notification Appliance Circuit is selectable as '0' for no coding (steady) or '1' for Temporal (½ second On, ½ second Off, ½ second On, ½ second Off, ½ second On, 1½ second Off). Factory default is '0' for no coding (steady). *Note that this NAC should only be used to supplement host panel NACs.*

Trouble Call Limit - Dialer Runaway Prevention (96)

Factory default setting of '0' in address 96, allows the digital communicator to call the Central Station each time any DACT trouble and any active Channel programmed for host panel trouble is detected by the 411UDAC. Programming a '1' in this address enables the Trouble Call Limit feature, which limits the number of 411UDAC and Input Channel Trouble calls to the Central Station to 10 calls for each unique trouble event within a 24 hour period. Separate limit counters keep track of each unique type of trouble (e.g. open input channel). To clear the limit counters, disable and then enable this location. Note that the number of phone line (communication) faults called to the Central Station are not limited by this feature. No subsequent restoral message is sent to the Central Station(s) for a particular trouble whose limit of 10 calls has been reached. Local DACT annunciation will still track the particular trouble and restoral.

Panel Identification Number (97 - 100)

The Panel Identification Number is a 4-digit code (valid digits are 0 to F) that is used to identify the installed panel. It is important to program this 4-digit code at the job site the first time that downloading is performed so that the called Service Terminal can identify the panel. The Factory default is '0000'. (Future Use).

Service Terminal 1 Phone Number (101 - 120)

Addresses 100 - 119 are reserved for the Service Terminal Number 1 phone number. Factory default is all 'F's. Valid entries are 0 - 9 plus A, B, C, D and E. Use 'F' to designate the end of the phone number. See "Remote Site Upload/Download" on page 60 for additional information.

Ring Count on Primary Phone Line (121 - 122)

Use this address to designate the number of rings allowed on the primary phone line prior to answering an incoming call from the Service Terminal. Factory default is '3' meaning the communicator will not answer an incoming call until 3 rings are detected. This entry may be programmed up to a maximum of '25' rings. A setting of '00' prevents the communicator from answering incoming calls.

FAX/Answer Machine, Primary Phone Line (123)

This entry is used when the primary phone line is being shared with a FAX, answering machine or other device. Factory default is '0' for no sharing of the primary phone line. An entry of '1' indicates that another device is sharing the primary phone line. The communicator will wait for three consecutive calls from the Service Terminal spaced 30 seconds apart, before responding. Sharing of phone lines requires the prior approval of the AHJ (Authority Having Jurisdiction).

Service Terminal 2 Phone Number (124 - 143)

Addresses 123 - 142 are reserved for the Service Terminal Number 2 phone number. Factory default is all 'F's. Valid entries are 0 - 9 plus A, B, C, D and E. Use 'F' to designate the end of the phone number. See "Remote Site Upload/Download" on page 60 for additional information.

Upload/Download Reports Sent to Secondary Central Station Phone #, Backup or Always (144)

Leaving address 144 programmed to the factory default setting of '0' means that reports for request for 'upload/download' and 'failed upload/download' will be sent to the secondary Central Station phone number only if attempts to the primary Central Station phone number are unsuccessful. Programming a '1' causes all reports to be transmitted to both primary and secondary phone numbers. Programming a '2' causes reports to be sent to the first available receiver.

Do not alter entry while the communicator is active.

Programming Event Code Settings (145 - 312)

Event Code Settings, corresponding to the Formats selected for the Primary Central Station phone number in address 20 and the Secondary Central Station phone number in address 50, are automatically set to factory default values. Refer to Table 3.1, "Ademco Contact ID Format - Primary," on page 37, Table 3.2, "4+2 Standard and 4+2 Express Formats - Primary," on page 38, and Table 3.3, "All 3+1, 4+1 and 4+2 Expanded Formats - Primary," on page 39 for format designated by address 20. Refer to Table 3.4, "Ademco Contact ID Format - Secondary," on page 42, Table 3.5, "4+2 Standard and 4+2 Express Formats - Secondary," on page 43, and Table 3.6, "All 3+1, 4+1 and 4+2 Expanded Formats - Secondary," on page 44 for format designated by address 50. The Event Code Settings can be altered. *Consult your Central Station prior to changing the event code settings.*

3.5 Default Mode

To return all program entries, including the upload/download secret password and time, to their factory original settings, perform the following steps only when the system is idle (i.e. the communicator is not active) and there are no active fire alarms or fire supervisories in the system:

Press the **MODE** key followed by the 4-digit code **3337** and press the **[ENTER/STORE]** key.

3337 spells DEFP (**DE**fault **P**rogramming) on a Touch-Tone[®] phone.

If an incorrect key is entered, reenter the proper 4-digit code before pressing the [ENTER/STORE] key. Within five seconds, repeat this entry by again pressing the **MODE** key followed by the 4-digit code **3337** and pressing the [ENTER/STORE] key. The display will read **LinP**. Enter your 4-digit password. When reprogramming is complete, the real time clock will display.

3.6 Troubleshoot Mode

In this mode, system status may be displayed on the 4-character display of the PRO-411. An internal voltmeter measures the voltage present at the channel/inputs, AC power input, and Notification Appliance Circuit. A lack of keyboard activity for a period of 20 minutes will cause the panel to return to Normal Mode.

To access the Troubleshoot Mode, press the **MODE** key followed by the digits 8768 and then the [ENTER/STORE] key.

8768 spells TROU on a Touch-Tone® phone.

Once in this mode, the 411UDAC will continue to communicate any events not yet acknowledged at a central station prior to entering Troubleshoot Mode. The **UP** arrow and **DOWN** arrow keys do not function in this mode.

All status displays in Troubleshoot Mode are shown in real-time, which means the display will update automatically as the status changes.

Channel/Inputs

Pressing **1** through **4** followed by the [ENTER/STORE] key on the PRO-411 displays the input status of the selected channel. Listed below are the status display and corresponding nominal threshold voltages, as measured across B+ and B-, for each zone:

| Channel # | Normal with ELR | Shorted | Open Circuit |
|----------------------|-----------------|----------|--------------|
| 1 through 4 (status) | N | S | O |
| 1 and 3 (voltage) | 11.5V | 0V | 12.0V |
| 2 and 4 (voltage) | 5.0V | 0V | 12.0V |

Where **N** = normal, **S** = active, and **O** = fault (or open)

AC Line

Pressing **A** followed by the [ENTER/STORE] key will display the AC input voltage as shown below. The following lists the AC line voltage range. The AC Power LED will turn off and the trouble LED will turn on when the AC line voltage drops below the Low Line threshold.

| AC Line Voltage | Low Line | Normal | High Line |
|-----------------|----------|---------|-----------|
| | 102 VAC | 115 VAC | 132 VAC |

Notification Appliance Circuit

Pressing **8** followed by the [ENTER/STORE] key will display the status of the Notification Appliance Circuit. Listed below are the status display and corresponding nominal threshold voltages for the NAC measured across B+ and B-:

| NAC | Normal with ELR | Shorted | Open Circuit |
|---------|-----------------|----------|--------------|
| status | N | S | O |
| voltage | -1.0V | 0V | -5.5V |

Where **N** = normal, **S** = shorted, and **O** = open

Telephone Line Testing

Press **C** for touchtone dialing or **D** for rotary dialing, followed by **[ENTER/STORE]**.

The Programmer keypad may be used as a telephone touchpad for number dialing. Once the first digit is pressed, the display will move the **C** or **D** character one position to the left, while placing the next digit to be dialed on the farthest right display position. Continue to press the phone numbers to be dialed. The dialer stores the digits as they are pressed. Press **1st EVENT** to go off hook and dial the stored digits. Pressing **[ENTER/STORE]** after dialing has started will terminate dialing. Successive depressions of the **1st EVENT** key hangs up and picks up the phone (places the phone on or off the hook).

The secondary phone line may be tested by pressing the **E** key for touchtone dialing or the **F** key for rotary dialing and then following the same procedure used for the primary phone line. A handset may be temporarily connected across transformer T1 of the 411UDAC as indicated in Figure 3.1. The handset, when connected across T1, may be used only as an amplifier/speaker or telephone with the keypad used for number dialing.

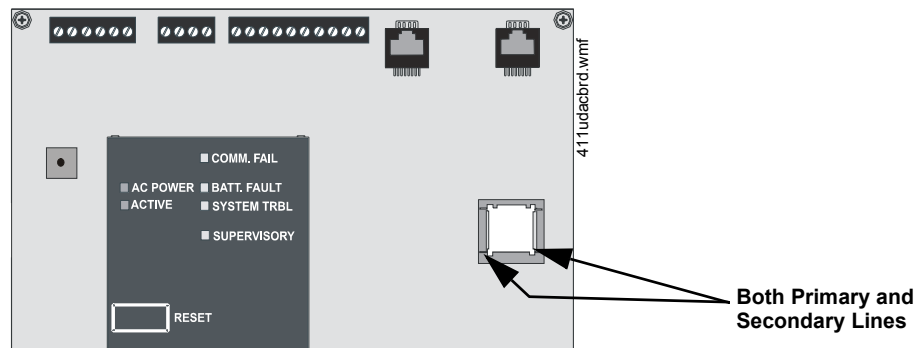


Figure 3.1 Handset/Speaker Connection

Section 4: Central Station Communications

The 411UDAC transmits system status reports to Central Stations via the public switched telephone network. Two supervised telephone line connections are made to interface the communicator to the telephone lines. Two 7-foot telephone cords P/N MCBL-7 may be used for this purpose (not supplied - order separately).

The digital communicator supervises both telephone lines for proper voltage. A delay of two minutes will occur before a fault in either phone line connection is reported as a trouble. When a fault is detected, an audible trouble signal will sound, the yellow Trouble LED will turn on, the optional trouble relay will activate if programmed for DACT trouble and the trouble condition will be reported to a central station over the remaining good phone line.

The digital communicator comes with line seizure capability provided for both the primary and secondary telephone line interfaces. Any time that the DACT needs to make a call to a central station, line seizure will disconnect any local premises phones sharing the same telephone line. All transmissions to central stations will be sent over the Primary Central Station phone line. In the event of noisy phone lines, transmissions will be sent over the backup Secondary phone line.

Two phone numbers must be programmed, the Primary Central Station phone number and the Secondary Central Station phone number. There are three options for transmission to the Central Station:

- All reports are always sent to the Primary Central Station phone number with the Secondary Central Station number for emergency backup purposes only
- All reports are sent to both Central Station phone numbers
- Reports are sent to the first available Central Station phone number only

The digital communicator is capable of reporting detailed messages depending upon the Format in use. Table 4.1 shows the data reporting structure for each of the pulsed formats as well as the Ademco Express Formats. Ademco Express Formats allow a typical data message to be transmitted to the Central Station in under 5 seconds. Pulsed formats typically require 15 to 20 seconds in comparison. Table 4.2 defines each letter code used in Table 4.1. See “Ademco Contact ID Format Event Code Description” on page 57 for a description of the data reporting structure for Ademco Contact ID Format.

| | Format # 0, 2, 4, 6, 8 | Format # 3, 5, 7, 9 | Format # 1, A, C | Format # B, D |
|---|-----------------------------------|---------------------------------|-----------------------------|--------------------------|
| Report | 3+1/4+1/Standard 4+1 Express | 3+1/4+1/Expanded | 4+2/Standard 4+2 Express | 4+2/Expanded |
| Fire Alarm | SSS(S) FA | SSS(S) FA FAFAFA(FA) 2 | SSSS FAFA2 | SSSS FAZ |
| Fire Alarm Restore | SSS(S) RFA | SSS(S) RFA RFARFARFA (RFA) 2 | SSSS RFARFA2 | SSSS RFAZ |
| Channel/Input Trouble (Channel/Input Open) | SSS(S) TZ | SSS(S) TZ TZTZTZ(TZ) Z | SSSS TZTZ2 | SSSS TZZ |
| Channel/Input Trouble Restore | SSS(S) RTZ | SSS(S) RTZ RTZRTZRTZ(RTZ) Z | SSSS RTZRTZ2 | SSSS RTZZ |
| System Trouble | SSS(S) TS | SSS(S) TS TSTSTS(TS) Y | SSSS TSTS2 | SSSS TSY |
| System Trouble Restore | SSS(S) RTS | SSS(S) RTS RTSRTSRTS(RTS) Y | SSSS RTSRTS2 | SSSS RTSY |
| AC Loss | SSS(S) P | SSS(S) P PPP(P) Z | SSSS PP2 | SSSS PP2 |
| AC Loss Restore | SSS(S) RP | SSS(S) RP RPRPRP(RP) Z | SSSS RPRP2 | SSSS RPRP2 |
| Fire Supervisory Condition | SSS(S) V | SSS(S) V VVV(V) Z | SSSS VV2 | SSSS VZ |
| Fire Supervisory Condition Restore | SSS(S) RV | SSS(S) RV RVRVR(RV) Z | SSSS RVRV2 | SSSS RVZ |
| Test Report | SSS(S) X | SSS(S) X | SSSS XX2 | SSSS XX2 |
| Up or Download | SSS(S) UD | SSS(S) UD | SSS UDUD2 | SSS UDUD2 |

Table 4.1 Format Selection Addresses (20 and 50) Programming

Where:

| | | |
|-------------|---|--|
| SSS or SSSS | = | Subscriber ID |
| FA | = | Fire Alarm (1st digit) |
| FA2 | = | Fire Alarm (2nd digit) |
| Z | = | Channel/Input Number |
| RFA | = | Fire Alarm Restore (1st digit) |
| RFA2 | = | Fire Alarm Restore (2nd digit) |
| TZ | = | Zone Trouble (1st digit) |
| TZ2 | = | Zone Trouble (2nd digit) |
| RTZ | = | Zone Trouble Restore (1st digit) |
| RTZ2 | = | Zone Trouble Restore (2nd digit) |
| TS | = | System Trouble (1st digit) |
| TS2 | = | System Trouble (2nd digit) |
| RTS | = | System Trouble Restore (1st digit) |
| RTS2 | = | System Trouble Restore (2nd digit) |
| P | = | AC Loss (1st digit) |
| P2 | = | AC Loss (2nd digit) |
| RP | = | AC Loss Restore (1st digit) |
| RP2 | = | AC Loss Restore (2nd digit) |
| V | = | Fire Supervisory Condition (1st digit) |
| V2 | = | Fire Supervisory Condition (2nd digit) |
| RV | = | Fire Supervisory Condition Restore (1st digit) |
| RV2 | = | Fire Supervisory Condition Restore (2nd digit) |
| X | = | Test Report (1st digit) |
| X2 | = | Test Report (2nd digit) |
| Y | = | Trouble corresponding to the following: |
| | 1 | = Not Used |
| | 2 | = Not Used |
| | 3 | = Not Used |
| | 4 | = Telco Primary Line Fault |
| | 5 | = Telco Secondary Line Fault |
| | 6 | = Not Used |
| | 7 | = Not Used |
| | 8 | = Not Used |
| | 9 | = Not Used |
| | A | = Communication Failure Primary Number |
| | B | = Communication Failure Secondary Number |
| | C | = Not Used |
| | D | = Not Used |
| | E | = Not Used |
| | F | = Not Used |
| UD | = | Upload/Download (1st digit) |
| UD2 | = | Upload/Download (2nd digit) |

Table 4.2 Format Selection Address Explanation

Note that for Expanded Reporting, the digital communicator automatically adds the digit corresponding to the Channel/Input number, and the second digit corresponding to any system trouble condition. Only the first digit shown in Table 3.3 and Table 3.6 is programmable.

4.1 Transmittal Priorities

The digital communicator transmits highest priority events first. Events in terms of priority are listed below in descending order:

1. Fire Alarm (highest priority level)
2. Fire Supervisory
3. System Troubles
 - Host Panel Trouble (active input programmed for trouble)
 - AC Fail (after delay)
 - Channel/Input faults
 - Telephone line fault
 - Communication trouble
 - System Off Normal
4. Restoral Reports
 - Fire Alarm
 - Fire Supervisory
 - Host Panel Trouble
 - AC
 - Channel/Input fault
 - Telephone line
 - Communication
 - System Off Normal
5. System Test
6. Upload/Download events (lowest priority)

4.2 Ademco Contact ID Format Event Code Description

This section describes the various Event Codes and their messages which are available for the Ademco Contact ID Format. The reporting structure for the Ademco Contact ID Format is as follows:

SSSS 18 QXYZ GG CCC

Where:

| | | |
|------|---|--|
| SSSS | = | Four digit Subscriber ID Account Code (addresses 21 - 24 and 51 - 54) |
| 18 | = | Identifies transmission as Contact ID to the receiver at the Central Station |
| Q | = | Event Qualifier where 1 = New Event and 3 = New Restore |
| XYZ | = | Event code (shown in Tables) |
| GG | = | Group number |
| CCC | = | Channel/Input number |

Notes:

1. **18**, which is used in the reporting structure to identify the transmission as Contact ID, is not printed out in the alarm and trouble report.
2. **Q**, which is the Event Qualifier for the reporting structure, is printed out in the report as an **E** for New Event or **R** for New Restore.
3. GG Group Number is fixed at '00' and cannot be changed.
4. CCC Channel/Input Number is transmitted as '001' for Channel/Input 1, '002' for Channel/Input 2, '003' for Channel/Input 3, '004' for Channel/Input 4.

Ademco Contact ID Reporting Structure

A typical printout from a Central Station receiver (such as the Ademco 685) of alarm and trouble reports in the Ademco Contact ID Reporting Structure follows:

| <u>Time</u> | <u>Date</u> | <u>Rcvr/Line ID</u> | <u>SSSS</u> | <u>QXYZ</u> | <u>GG</u> | <u>CCCC</u> |
|-------------|-------------|---------------------|-------------|-------------|-----------|--|
| 11:28 | 03/25 | 11 | 7777 | E110 | 00 | C001 - general fire alarm on Channel/Input 1 |
| 11:28 | 03/25 | 11 | 7777 | E111 | 00 | C002 - smoke detector alarm on Channel/Input 2 |
| 11:28 | 03/25 | 11 | 7777 | E380 | 00 | C003 - fault on Channel/Input 3 |
| 11:28 | 03/25 | 11 | 7777 | R110 | 00 | C001 - Channel/Input 1 alarm restored |
| 11:28 | 03/25 | 11 | 7777 | R111 | 00 | C002 - smoke detector Channel/Input 2 restored |
| 11:28 | 03/25 | 11 | 7777 | R380 | 00 | C003 - Channel/Input 3 fault restored |
| 11:28 | 03/25 | 11 | 7777 | E158 | 00 | C004 - high temperature, Channel/Input 4 |
| 11:28 | 03/25 | 11 | 7777 | E151 | 00 | C004 - gas detected, Channel/Input 4 |

The following table contains UL listed receivers compatible with the 411UDAC's onboard DACT.

| Format # (Addresses 20 and 50) | | FBI CP220FB (1) | Ademco 685 (2) | Silent Knight 9000 (3) | Silent Knight 9800 (4) | Osborne Hoffman 2000E (5) | Radionics 6600 (6) | Surgard System III (7) | Surgard MLR-2 (8) | Surgard MR-2000 (9) | Ademco MX8000 (10) |
|-----------------------------------|------------------------|--------------------|-------------------|---------------------------|---------------------------|------------------------------|-----------------------|---------------------------|----------------------|------------------------|-----------------------|
| 0 | 4+1 Ademco Express | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 1 | 4+2 Ademco Express | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2 | 3+1/Standard/1800/2300 | ✓ | ✓ | ✓ | ✓ | ✓ | | | | ✓ | ✓ |
| 3 | 3+1/Expanded/1800/2300 | ✓ | ✓ | ✓ | ✓ | ✓ | | | | ✓ | ✓ |
| 4 | 3+1/Standard/1900/1400 | ✓ | ✓ | ✓ | ✓ | ✓ | | | | ✓ | ✓ |
| 5 | 3+1/Expanded/1900/1400 | ✓ | ✓ | ✓ | ✓ | ✓ | | | | ✓ | ✓ |
| 6 | 4+1/Standard/1800/2300 | | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ |
| 7 | 4+1/Expanded/1800/2300 | | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ |
| 8 | 4+1/Standard/1900/1400 | | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ |
| 9 | 4+1/Expanded/1900/1400 | | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ |
| A | 4+2/Standard/1800/2300 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| B | 4+2/Expanded/1800/2300 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| C | 4+2/Standard/1900/1400 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| D | 4+2/Expanded/1900/1400 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| E | Ademco Contact ID | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |

Table 4.3 Compatible UL Listed Receivers

- (1) With version 3.9 software.
- (2) With 685-8 Line Card with Rev. 4.4d software.
- (3) With 9002 Line Card Rev. 9035 software or 9032 Line Card with 9326A software.
- (4) With 124077V2.00 Receiver and 126047 Line Card Rev. M.
- (5) With V.7301 Receiver S/W.
- (6) With 01.01.03 Receiver S/W and Line Card 01.01.03.
- (7) Surgard System III software version 1.6.
- (8) Surgard MLR-2 software version 1.86.
- (9) With DSP4016 and V1.6 Line Card.
- (10) With 124060V206B and 124063 Line Card Rev. B

IMPORTANT! It is the installer's responsibility to ensure that the Digital Alarm Communicator/Transmitter is compatible with the Central Station Receiver, utilized by the monitoring service, prior to installation. The Compatibility Table provides a list of compatible receivers and associated software versions for the receivers. Changes in the hardware and/or software by the receiver manufacturers may affect the receiver compatibility with the DACT. After completing the installation, communication between the DACT and Central Station Receiver must be tested and verified.

Section 5: Remote Site Upload/Download

The 411UDAC may be programmed off site via the public switched telephone network. Any personal computer with Windows® XP or greater Upload/Download software P/N PK-411UD (available on PK-CD or online), may serve as a Service Terminal. For details on the remote site upload/download software package, refer to the *PK-411UD Manual*. The Upload/Download software allows the following:

- Download of the entire program
- Upload of the entire program
- Upload current status, system voltages or time
- Real-time upload of current status or system voltages
- Download new time



CAUTION: ERROR CHECKING

CHANGES TO PROGRAM ENTRIES OCCUR AS A RESULT OF THE DOWNLOADING PROCESS. AFTER SUCCESSFUL DOWNLOADING, MAKE CERTAIN TO PERFORM THE FOLLOWING STEPS:

1. Manually view programmed entries and compare to intended program data.
 2. Test all affected system operations.
 3. Immediately correct any problems found.
-

5.1 General

Any time that the digital communicator is contacted, a secret code (factory default 0000) is verified between the digital communicator and the Service Terminal. Changing the Secret Code may only be accomplished at the Service Terminal and subsequently loaded into the panel. Future upload or download requests cause verification of the Secret Code by the communicator before processing of data is allowed. If the Secret Code is not verified, the communicator will terminate the request immediately.

In order to contact the communicator, the following must be true:

- ✓ The digital communicator may be in any mode of operation including Normal, Program, Real Time Clock, Troubleshoot or Lamp Test. Downloading is not possible if the communicator is active during Central Station communications or while testing the phone lines while in Troubleshoot Mode.
- ✓ The digital communicator must be unlocked so it can accept a remote upload/download. Entering mode **8655** (UNLK) will unlock the panel for 30 minutes. Refer to "Panel Unlock (90)" for other programming options.
- ✓ There cannot be any active communications ongoing with a Central Station receiver.
- ✓ All active events must be successfully 'kissed-off' by the Central Station(s). The digital communicator must be in a standby state with no new information waiting to be transmitted to a Central Station.

Two basic communication mechanisms are supported as follows:

- Contact with callback - The Service Terminal calls the digital communicator. The communicator answers the call, confirms the calling party then hangs-up. The Service Terminal then waits for a callback from the communicator. After the digital communicator calls the Central Station and successfully reports that a request has been received, the communicator calls the Service Terminal back. Upon secret code verification, data transfers occur. When the data transfers are completed and the Service Terminal disconnects from the communicator, the digital communicator calls the Central Station back to confirm either successful or unsuccessful results.

- Contact with callback disabled - The Service Terminal calls the communicator. No hang-up sequence occurs. Data transfers proceed.

Note that Callback enable/disable is controlled by the master user at the Service Terminal on a per call basis.

With program address location 64 set to '1' in Program Mode, anytime a contact with callback is initiated, the communicator will first either contact the primary Central Station or contact both the primary and secondary Central Stations or contact the first available Central Station phone number to report a 'request for upload/download' message (depending upon the program entry in address location 137). Once the request is 'kissed-off' by the Central Station(s), the communicator will then call the appropriate Service Terminal and begin the downloading process.

With program address location 64 set to '1' in Program Mode, anytime a contact with callback disabled is initiated, the communicator and the Service Terminal will communicate and transfer data without first contacting a Central Station. When the data transfers are completed and the communicator disconnects from the Service Terminal, the communicator will call the Central Station and report one of the following:

- Upload/download request received
- Upload and/or download successful
- Upload/download failed

To prevent the 'request for upload/download' message(s) from being reported to the Central Station(s), make certain to set address 64 to '0' or '3' or disable all upload/download reports back to both Central Stations. Refer to Table 3.2 on page 38 through Table 3.4, "Ademco Contact ID Format - Secondary," on page 42 for additional information.

Unlike most competitive products, during the downloading process, the input monitoring and 411UDAC supervision remain active. Should an input activation or system trouble occur, the communicator immediately terminates downloading, processes the trouble or alarm locally and transmits the information to the Central Station(s).

5.1.1 Security Features

Remote site upload and download with the 411UDAC have been carefully designed to include key security features to ensure proper functionality. The key features are listed and explained below.

Secret Code Verification

A secret code is stored in the communicator by a Service Terminal to prevent unauthorized access. The secret code is created at the Service Terminal by a Master user and cannot be viewed or changed by anyone other than a Master user. Viewing of the secret code is prohibited at the communicator. Prior to allowing an upload or download of data, the communicator will verify the secret code transmitted by the Service Terminal.

Panel Unlock

The communicator must be in an unlocked state to accept a remote upload/download. Entering the 4 digit code will unlock the panel for a period of 30 minutes, unless otherwise programmed.

Time-out at 411UDAC

Upon answering an incoming call on the primary Central Station phone line, the communicator will listen for a modem connection signal. If this signal is not received within 30 seconds, the communicator will disconnect the call. Upon successful connection (i.e. secret code verified and callback complete if applicable), if no communication occurs within two minutes, the communicator will disconnect the call.

Callback to Service Terminal

Any time that the communicator is remotely requested to allow an upload or download with callback, it will confirm the source of the incoming call, hang-up and call the calling party (Service Terminal phone number) back.

Error Checking

As each block of data is received by the communicator, it is checked for accuracy. If an error is detected, the block is retransmitted until correct, up to a maximum of four times. If the Secret Code is not verified and four errors occur, the call is disconnected and the report that the upload/download was not successful is called to the Central Station(s).

Central Station Acknowledge

There is an option whereby the communicator will report to one or both Central Stations that a request for uploading or downloading has been received prior to processing the call. This is called the 'callback' option. If the Central Station(s) does not acknowledge receipt of this request, uploading or downloading is prohibited. If acknowledged by the Central Station(s), another message is transmitted informing the Central Station(s) that:

- downloading was successful
- uploading was successful
- uploading/downloading was not successful

Data Protection/Integrity

Programming data is completely verified for accuracy prior to reprogramming of the 411UDAC EEPROM. Incomplete or corrupted data packets are ignored or retried.

5.2 Downloading to the Communicator

Before initiating the download procedure, make certain that the communicator is unlocked and in the standby state.

Once an incoming call is accepted/answered by the communicator, the 411UDAC will:

1. Establish basic modem connection
2. Verify secret code
3. Verify callback vs. no callback request from the Service Terminal. If callback is requested, perform steps 4 through 10; if no callback is requested, perform steps 9 and 10 only
4. Verify product type
5. Identify the Service Terminal location
6. Hang-up/disconnect call
7. Call the Central Station(s) and transmit a request for upload/download message (if programmed to do so). If this message is accepted, the communicator will proceed to the next step
8. Return call to the Service Terminal
9. Verify secret code
10. Verify Product type
11. Begin downloading
12. Upon completion of download, call the Central Station(s) back and report a successful download or failed upload/download status (if programmed to do so).

5.3 Uploading From the Communicator

Items that may be uploaded from the communicator to a Service Terminal are:

- All or portions of programmed data plus the real time clock

- Troubleshoot system voltages in real-time or as a 'snapshot'
- Current system status in real-time continuous or as a 'snapshot'

Uploading is possible at any time provided the following conditions are true:

- ✓ The communicator may be in any mode of operation. Uploading is not possible if the communicator is active or while testing the phone lines while in Troubleshoot Mode.
- ✓ There cannot be any active communications ongoing with a Central Station receiver.
- ✓ All active events must be successfully 'kissed-off' by the Central Station(s). The communicator must be in a standby state with no new information waiting to be transmitted to a Central Station.

Once an incoming call is accepted/answered by the communicator, the 411UDAC will:

1. Establish basic modem connection
2. Verify secret code
3. Verify callback vs. no callback request from the Service Terminal. If callback is requested, perform steps 4 through 10; if no callback is requested, perform steps 9 and 10 only
4. Verify product type
5. Identify the Service Terminal location
6. Hang-up/disconnect call
7. Call the Central Station(s) and transmit a request for upload/download message (if programmed to do so). If this message is accepted, the communicator will proceed to the next step
8. Return call to the Service Terminal
9. Verify secret code
10. Verify product type
11. Begin downloading
12. Upon completion of download, call the Central Station(s) back and report a successful download or failed upload/download status (if programmed to do so).

Unlike most competitive products, during the uploading process, the 411UDAC fire protection remains active. Should a system trouble or alarm condition occur, the communicator immediately terminates uploading and processes the trouble or alarm locally and transmits the information to the Central Station(s).

5.4 Simultaneous Data Transfers

Uploading and downloading may take place on a single telephone call. Control and selection of the data transaction is coordinated at the Service Terminal. This eliminates multiple phone calls, allows instant verification of downloaded data files and simplifies the overall process.

Section 6: Battery Calculations

Use the Total Standby and Alarm Load Currents calculated in Tables 6.2, and 6.3, for the following battery calculations.

| | | | | |
|---|---|--|---|-------|
| Standby Load Current in amps (from Table 6.2) [] | X | Required Standby Time in Hours (24 or 60 Hours) [] | = | _____ |
| Alarm Load Current in amps (from Table 6.3) [] | X | Required Alarm Time in Hours (i.e. 5 min. = 0.084 Hours) [] | = | _____ |
| Add Standby and Alarm Load for Required Ampere Hour Battery | | | | _____ |
| Multiplying by derating factor of 1.2 | | | | x 1.2 |
| Total Ampere Hour Battery ¹ | | | | _____ |

Table 6.1 Battery Calculations

1. Select a battery with an Amp Hour rating greater than that calculated in Table 6.1.
✓ NFPA 72 for Central Station and Proprietary Protected Premises systems require 24 hours of standby
2. Two 12 VDC, 7 Amp Hour batteries, wired in parallel, can be located in the backbox to provide 14 Amp Hours of backup (refer to Figure 2.4 on page 22 for battery cable connections)

6.1 411UDAC Power Supply

The 411UDAC provides filtered power for operating the digital communicator, external devices and the battery charger. The power for operating external devices is limited. Use Table 6.2 (standby or nonalarm) and Table 6.3 (alarm) to determine if external loading is within the capabilities of the power supply.

| Device Type | # of Devices | | Current (amps) | | Total Current (amps) |
|--|--------------|---|----------------|---|----------------------|
| Main Circuit Board | 1 | X | 0.150 | = | 0.150 |
| 2-wire Detector Heads | [] | X | [] | = | |
| 4-wire Detector Heads | [] | X | [] | = | |
| Power Supervision Relays | | X | | = | |
| Additional Current Draw from 12 VDC Resettable | [] | X | [] | = | |
| Sum Column for Standby Load | | | | = | amps |

Table 6.2 Load in Standby

Notes:

1. Refer to the *Device Compatibility Document* for compatible listed power supervision relays.
2. Refer to the *Device Compatibility Document* for 2-wire and 4-wire smoke detector standby current.

| Device Type | # of Devices | | Current (amps) | | Total Current (amps) |
|--|--------------|---|----------------|---|----------------------|
| Main Circuit Board | 1 | X | 0.220 | = | 0.220 |
| 2-wire Detector Heads | [] | X | [] | = | |
| 4-wire Detector Heads | [] | X | [] | = | |
| Power Supervision Relay | [] | X | 0.025 | = | |
| Notification Appliances | [] | X | [] | = | |
| Additional Current Draw from 12 VDC Resettable | [] | X | [] | = | |
| Sum Column for Alarm Load | | | | = | amps |

Table 6.3 Load in Alarm

Notes:

1. Refer to the *Device Compatibility Document* for compatible listed power supervision relays.
2. Refer to the *Device Compatibility Document* for 2-wire and 4-wire smoke detector current.
3. Maximum available current for notification appliances is 1.0 amp
4. Maximum available current from resettable output is 0.200 amps
5. Total system current cannot exceed 1.6 amps

Appendix A: Programming Sheets

A.1 Digital Communicator Options Program Sheets

To enter Programming Mode, press the **MODE** key, **7764**, and then the **[ENTER/STORE]** key.

Addresses 00 to 19 store the Primary Central Station phone number. *Enter 'F' to represent the end of number.*

☐ ₂₀ Primary Central Station Communication Format: *Valid entries are 0 to 9 and A to F.*

Primary Central Station Account Code: *Valid entries are 0 to 9 and A to F.*

☐ 25 ☐ 26 ☐ 27 ☐ 28 Primary Central Station 24-hour Test Time: *Use military time (i.e. 1400 for 2:00 PM).*

☐₂₉ Primary Number Test Time Interval. Enter '0' for 24-hour; '1' for 12-hour; '2' for 8-hour; '3' for 6-hour.

Addresses 30 to 49 store the Secondary Central Station phone number. *Enter 'F' to represent the end of number.*


☐ ₅₀ Secondary Central Station Communication Format: *Valid entries are 0 to 9 and A to F.*


Secondary Central Station Account Code: *Valid entries are 0 - 9 and A - F.*

 55 56 57 58 Secondary Central Station 24-hour Test Time: *Use military time (i.e. 1400 for 2:00 PM).*


☐₅₉ Secondary Number Test Time Interval. Enter '0' for 24-hour; '1' for 12-hour; '2' for 8-hour; '3' for 6-hour.


₆₀ AC Loss Reporting Delay. Enter '0' for no delay; '1' for 1 hours; '2' for 2 hours; '3' for 6 hours; '4' for 7 hours; '5' for 8 hours; '6' for 9 hours; '7' for 10 hours; '8' for 11 hours; '9' for 12 hours; 'A' for 13 hours; 'B' for 14 hours; 'C' for 15 hours; 'D' for 16 hours; 'E' for 17 hours; 'F' for 18 hours.


 ₆₁ Backup Reporting. Enter '0' to report to Secondary phone number as backup only; '1' to report to both Primary and Secondary phone number for all reports/messages; '2' reports go to first available receiver.


 62 Reserved for Future Use.


☐ ₆₃ DACT Trouble Reminder. Enter '0' to disable; '1' to enable.




 **64** Operational Mode Selection. Enter '0' for stand-alone/communicator disabled; '1' for stand-alone/communicator enabled; '2' for slave/communicator enabled; '3' for slave/communicator disabled. Default setting is '0'.




 ₆₅ Input Channel 1 Function Selection. Enter '0' for fire alarm; '1' for pull station; '2' for normally open contact; '3' for host panel trouble; '4' for supervisory; '5' for supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.




 ₆₆ Input Channel 2 Function Selection. Enter '1' for pull station; '2' for normally open contact; '3' for host panel trouble; '4' for supervisory; '5' for supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow non-silenceable.

 ₆₇ Input Channel 3 Function Selection. Enter '0' for fire alarm; '1' for pull station; '2' for normally open contact; '3' for host panel trouble; '4' for supervisory; '5' for supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow nonsilenceable.

 68 Input Channel 4 Function Selection. Enter '1' for pull station; '2' for normally open contact; '3' for host panel trouble; '4' for supervisory; '5' for supervisory autoresettable; '6' for waterflow silenceable; '7' for waterflow non-silenceable.

 ₆₉ ₇₀ ₇₁ Input Channel 1 Delay Timer. Enter 0 - 179 seconds delay. *Factory default is '000' for no delay.*
Does not delay Input Channels programmed for fire functions.

 ₇₂  ₇₃  ₇₄ Input Channel 2 Delay Timer. Enter 0 - 179 seconds delay. *Factory default is '000' for no delay.*
Does not delay Input Channels programmed for fire functions.

   Input Channel 3 Delay Timer. Enter 0 - 179 seconds delay. *Factory default is '000' for no delay.*
Does not delay Input Channels programmed for fire functions.

☐₇₈ ☐₇₉ ☐₈₀ Input Channel 4 Delay Timer. Enter 0 - 179 seconds delay. *Factory default is '000' for no delay. Does not delay Input Channels programmed for fire functions.*

☐₈₁ Touchtone/Rotary Select for Primary Phone. Enter '0' for touchtone dialing; '1' for rotary dialing.

☐₈₂ Make/Break Ratio for Primary Phone. Enter '0' for 67/33 ratio; '1' for 62/38 ratio.

☐₈₃ Touchtone/Rotary Select for Secondary Phone. Enter '0' for touchtone dialing; '1' for rotary dialing.

☐₈₄ Make/Break Ratio for Secondary Phone. Enter '0' for 67/33 ratio; '1' for 62/38 ratio.

☐₈₅ Output Relay #1 enable. Enter '1' to enable Relay #1; '0' to disable relay.

☐₈₆ Output Relay #1 Function. Enter '0' for relay to activate on alarm; '1' host panel trouble; '2' DACT trouble; '3' for latching fire supervisory; '4' for autoresettable fire supervisory; '7' (future use); '8' for total communication failure.

☐₈₇ Output Relay #2 enable. Enter '1' to enable Relay #2; '0' to disable relay.

☐₈₈ Output Relay #2 Function. Enter '0' for relay to activate on fire alarm; '1' host panel trouble; '2' for DACT trouble; '3' for latching fire supervisory; '4' for autoresettable fire supervisory; '7' (future use); '8' total communication failure.

☐₈₉ Reserved for future use. Leave default setting of '0.'

☐₉₀ Panel unlock. Enter '0' for password unlock, '1' for permanent unlock.

☐₉₁ Alarm verification. Enter '0' for no verification; '1' for verification of all 2 or 4-wire smoke zones.

☐₉₂ Silence inhibit. Enter '0' for no silence inhibit; '1' to inhibit silencing of NAC for one minute.

☐₉₃ Autosilence. Enter '0' for no autosilence; '1' for 5 minute autosilence; '2' for 10 minutes; '3' for 15 minutes; '4' for 20 minutes; '5' for 25 minutes; '6' for 30 minutes.

☐₉₄ Restoral method. Enter '0' for Typical restoral method; '1' for Conditional Restoral Method #1; '2' for Conditional Restoral Method #2.

☐₉₅ Coding, Notification Appliance Circuit. Enter '0' for no coding (steady); '1' for Temporal coding.

☐₉₆ Trouble Call Limit - Dialer Runaway Prevention Feature. Enter a '0' to disable this feature; '1' to enable Trouble Call Limit. *Factory default is '0' for disabled.*

☐₉₇ ☐₉₈ ☐₉₉ ☐₁₀₀ Panel Identification Number.

☐₁₀₁ ☐₁₀₂ ☐₁₀₃ ☐₁₀₄ ☐₁₀₅ ☐₁₀₆ ☐₁₀₇ ☐₁₀₈ ☐₁₀₉ ☐₁₁₀ ☐₁₁₁ ☐₁₁₂ ☐₁₁₃ ☐₁₁₄ ☐₁₁₅ ☐₁₁₆ ☐₁₁₇ ☐₁₁₈

☐₁₁₉ ☐₁₂₀ Addresses 101 to 120 store the Service Terminal 1 Phone Number. *Valid entries are 0 - 9 and A - E. 'F' designates the end of the phone number.*

☐₁₂₁ ☐₁₂₂ Ring Count on Primary Phone Line. Enter number of rings prior to panel answering call. *Valid entries are 00 to 25 (00 = no answer). Factory default is 03.*

☐₁₂₃ FAX/Answer Machine, Primary Phone Line. Enter '0' for no sharing of phone line; '1' for sharing.

☐₁₂₄ ☐₁₂₅ ☐₁₂₆ ☐₁₂₇ ☐₁₂₈ ☐₁₂₉ ☐₁₃₀ ☐₁₃₁ ☐₁₃₂ ☐₁₃₃ ☐₁₃₄ ☐₁₃₅ ☐₁₃₆ ☐₁₃₇ ☐₁₃₈ ☐₁₃₉ ☐₁₄₀ ☐₁₄₁

☐₁₄₂ ☐₁₄₃ Addresses 124 to 143 store the Service Terminal 2 Phone Number. *Valid entries are 0-9 and A-E. 'F' designates the end of the phone number.*

☐₁₄₄ Upload/Download Backup Reporting. Enter '0' for Upload/Download reports to go to the Secondary Central Station Phone Number on backup only; '1' for Upload/Download reports to always go to the Secondary; '2' for Upload/Download reports to go to the first available Central Station phone number.

A.2 Digital Communicator Options Program Sheet (Factory Defaults)

To enter Programming Mode, press the **MODE** key, **7764**, and then the **[ENTER/STORE]** key.

F₀₀ **F**₀₁ **F**₀₂ **F**₀₃ **F**₀₄ **F**₀₅ **F**₀₆ **F**₀₇ **F**₀₈ **F**₀₉ **F**₁₀ **F**₁₁ **F**₁₂ **F**₁₃ **F**₁₄ **F**₁₅ **F**₁₆ **F**₁₇ **F**₁₈ **F**₁₉

Addresses 00 to 19 store the Primary Central Station phone number. *Enter 'F' to represent the end of number.*

E₂₀ Primary Central Station Communication Format: *'E' for Ademco Contact ID Format.*

0₂₁ **0**₂₂ **0**₂₃ **0**₂₄ Primary Central Station Account Code.

0₂₅ **0**₂₆ **0**₂₇ **0**₂₈ Primary Central Station 24-hour Test Time: *'0000' = 12:00 midnight.*

0₂₉ Primary Number Test Time Interval. *'0' for 24-hours.*

F₃₀ **F**₃₁ **F**₃₂ **F**₃₃ **F**₃₄ **F**₃₅ **F**₃₆ **F**₃₇ **F**₃₈ **F**₃₉ **F**₄₀ **F**₄₁ **F**₄₂ **F**₄₃ **F**₄₄ **F**₄₅ **F**₄₆ **F**₄₇ **F**₄₈ **F**₄₉

Addresses 30 to 49 store the Secondary Central Station phone number. *Enter 'F' to represent the end of number.*

E₅₀ Secondary Central Station Communication Format: *'E' for Ademco Contact ID Format..*

0₅₁ **0**₅₂ **0**₅₃ **0**₅₄ Secondary Central Station Account Code:

0₅₅ **0**₅₆ **0**₅₇ **0**₅₈ Secondary Central Station 24-hour Test Time: *'0000' = 12:00 midnight.*

0₅₉ Secondary Number Test Time Interval. *'0' for 24-hours.*

2₆₀ AC Loss Reporting Delay. *'2' for 2 hour delay.*

0₆₁ Backup Reporting. *'0' to report to Secondary phone number as backup only.*

0₆₂ Reserved for Future Use.

0₆₃ DACT Trouble Reminder. *'0' disables trouble reminder.*

0₆₄ Operational Mode Selection. *'0' enables stand-alone mode, disables communication to Central Station.*

0₆₅ Input Channel 1 Function Selection. *'0' for fire alarm.*

1₆₆ Input Channel 2 Function Selection. *'1' for pull station alarm.*

0₆₇ Input Channel 3 Function Selection. *'0' for fire alarm.*

1₆₈ Input Channel 4 Function Selection. *'1' for pull station alarm.*

0₆₉ **0**₇₀ **0**₇₁ Input Channel 1 Delay Timer. *'000' for no delay. Does not delay fire functions.*

0₇₂ **0**₇₃ **0**₇₄ Input Channel 2 Delay Timer. *'000' for no delay. Does not delay fire functions.*

0₇₅ **0**₇₆ **0**₇₇ Input Channel 3 Delay Timer. *'000' for no delay. Does not delay fire functions.*

0₇₈ **0**₇₉ **0**₈₀ Input Channel 4 Delay Timer. *'000' for no delay. Does not delay fire functions.*

0₈₁ Touchtone/Rotary Select for Primary Phone. *'0' for touchtone dialing.*

0₈₂ Make/Break Ratio for Primary Phone. *'0' for 67/33 ratio.*

0₈₃ Touchtone/Rotary Select for Secondary Phone. *'0' for touchtone dialing.*

0₈₄ Make/Break Ratio for Secondary Phone. *'0' for 67/33 ratio.*

0₈₅ Output Relay #1 enable. *'0' to disable relay.*

0₈₆ Output Relay #1 Function. *'0' for activation on fire alarm (2 or 4-wire smoke).*

0₈₇ Output Relay #2 enable. *'0' to disable relay.*

























































































2₈₈ Output Relay #2 Function. *'2' for activation on DACT trouble.*

- 0**₈₉ Reserved for future use. *Leave default setting of '0.'*
- 0**₉₀ Panel unlock. *'0' for password unlock.*
- 0**₉₁ Alarm verification. *'0' to disable.*
- 0**₉₂ Silence inhibit. *'0' to disable.*
- 0**₉₃ Autosilence. *'0' to disable.*
- 0**₉₄ Restoral method. *'0' for Typical restoral method.*
- 0**₉₅ Coding, Notification Appliance Circuit. *'0' for no coding (steady).*
- 0**₉₆ Trouble Call Limit - Dialer Runaway Prevention Feature. *'0' for disabled feature.*
- 0**₉₇ **0**₉₈ **0**₉₉ **0**₁₀₀ Panel Identification Number.
- F**₁₀₁ **F**₁₀₂ **F**₁₀₃ **F**₁₀₄ **F**₁₀₅ **F**₁₀₆ **F**₁₀₇ **F**₁₀₈ **F**₁₀₉ **F**₁₁₀ **F**₁₁₁ **F**₁₁₂ **F**₁₁₃ **F**₁₁₄ **F**₁₁₅ **F**₁₁₆ **F**₁₁₇ **F**₁₁₈
- F**₁₁₉ **F**₁₂₀ Addresses 101 to 120 store the Service Terminal 1 Phone Number. *Enter 'F' to represent the end of the phone number.*
- 0**₁₂₁ **3**₁₂₂ Ring Count on Primary Phone Line. *'03' for number of rings before answering call.*
- 0**₁₂₃ FAX/Answer Machine, Primary Phone Line. *'0' for no sharing of phone line.*
- F**₁₂₄ **F**₁₂₅ **F**₁₂₆ **F**₁₂₇ **F**₁₂₈ **F**₁₂₉ **F**₁₃₀ **F**₁₃₁ **F**₁₃₂ **F**₁₃₃ **F**₁₃₄ **F**₁₃₅ **F**₁₃₆ **F**₁₃₇ **F**₁₃₈ **F**₁₃₉ **F**₁₄₀ **F**₁₄₁
- F**₁₄₂ **F**₁₄₃ Addresses 124 to 143 store the Service Terminal 2 Phone Number. *Enter 'F' to represent the end of the phone number.*
- 0**₁₄₄ Upload/Download Backup Reporting. *'0' for Upload/Download reports to go to the Secondary Central Station Phone Number on backup only.*

























































































Appendix B: Event Codes/Transmission Format Programming Sheets

To enter Programming Mode, press the **MODE** key, **7764** and then the **[ENTER/STORE]** key.

B.1 4+2 Standard & 4+2 Express Formats Primary Central Station

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|
|  | 145 |  | 146 |  | 147 |  | 148 |  | 149 |  | 150 |  | 151 |  | 152 |  | 153 |  | 154 |  | 155 |  | 156 |  | 157 |  | 158 |  | 159 |  | 160 |
|  | 161 |  | 162 |  | 163 |  | 164 |  | 165 |  | 166 |  | 167 |  | 168 |  | 169 |  | 170 |  | 171 |  | 172 |  | 173 |  | 174 |  | 175 |  | 176 |
|  | 177 |  | 178 |  | 179 |  | 180 |  | 181 |  | 182 |  | 183 |  | 184 |  | 185 |  | 186 |  | 187 |  | 188 |  | 189 |  | 190 |  | 191 |  | 192 |
|  | 193 |  | 194 |  | 195 |  | 196 |  | 197 |  | 198 |  | 199 |  | 200 |  | 201 |  | 202 |  | 203 |  | 204 |  | 205 |  | 206 |  | 207 |  | 208 |
|  | 209 |  | 210 |  | 211 |  | 212 |  | 213 |  | 214 |  | 215 |  | 216 |  | 217 |  | 218 |  | 219 |  | 220 |  | 221 |  | 222 |  | 223 |  | 224 |
|  | 225 |  | 226 |  | 227 |  | 228 |  | 229 |  | 230 |  | 231 |  | 232 | | | | | | | | | | | | | | | | |

B.2 4+2 Standard & 4+2 Express Formats Secondary Central Station

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|
|  | 233 |  | 234 |  | 235 |  | 236 |  | 237 |  | 238 |  | 239 |  | 240 |  | 241 |  | 242 |  | 243 |  | 244 |  | 245 |  | 246 |  | 247 |  | 248 |
|  | 249 |  | 250 |  | 251 |  | 252 |  | 253 |  | 254 |  | 255 |  | 256 |  | 257 |  | 258 |  | 259 |  | 260 |  | 261 |  | 262 |  | 263 |  | 264 |
|  | 265 |  | 266 |  | 267 |  | 268 |  | 269 |  | 270 |  | 271 |  | 272 |  | 273 |  | 274 |  | 275 |  | 276 |  | 277 |  | 278 |  | 279 |  | 280 |
|  | 281 |  | 282 |  | 283 |  | 284 |  | 285 |  | 286 |  | 287 |  | 288 |  | 289 |  | 290 |  | 291 |  | 292 |  | 293 |  | 294 |  | 295 |  | 296 |
|  | 297 |  | 298 |  | 299 |  | 300 |  | 301 |  | 302 |  | 303 |  | 304 |  | 305 |  | 306 |  | 307 |  | 308 |  | 309 |  | 310 |  | 311 |  | 312 |
|  | 313 |  | 314 |  | 315 |  | 316 |  | 317 |  | 318 |  | 319 |  | 320 | | | | | | | | | | | | | | | | |

--To enter Programming Mode, press the **MODE** key, **7764** and then the **[ENTER/STORE]** key.

B.3 4+2 Standard & 4+2 Express Formats Primary Central Station

1₁₄₅ **1**₁₄₆ **1**₁₄₇ **2**₁₄₈ **1**₁₄₉ **3**₁₅₀ **1**₁₅₁ **4**₁₅₂ **F**₁₅₃ **1**₁₅₄ **F**₁₅₅ **2**₁₅₆ **F**₁₅₇ **3**₁₅₈ **F**₁₅₉ **4**₁₆₀
9₁₆₁ **2**₁₆₂ **6**₁₆₃ **1**₁₆₄ **6**₁₆₅ **2**₁₆₆ **6**₁₆₇ **3**₁₆₈ **6**₁₆₉ **4**₁₇₀ **6**₁₇₁ **5**₁₇₂ **6**₁₇₃ **6**₁₇₄ **4**₁₇₅ **7**₁₇₆
6₁₇₇ **A**₁₇₈ **6**₁₇₉ **B**₁₈₀ **6**₁₈₁ **F**₁₈₂ **E**₁₈₃ **1**₁₈₄ **E**₁₈₅ **2**₁₈₆ **E**₁₈₇ **3**₁₈₈ **E**₁₈₉ **4**₁₉₀ **D**₁₉₁ **1**₁₉₂
D₁₉₃ **2**₁₉₄ **D**₁₉₅ **3**₁₉₆ **D**₁₉₇ **4**₁₉₈ **9**₁₉₉ **3**₂₀₀ **A**₂₀₁ **1**₂₀₂ **A**₂₀₃ **2**₂₀₄ **A**₂₀₅ **3**₂₀₆ **A**₂₀₇ **4**₂₀₈
A₂₀₉ **5**₂₁₀ **A**₂₁₁ **6**₂₁₂ **5**₂₁₃ **7**₂₁₄ **A**₂₁₅ **A**₂₁₆ **A**₂₁₇ **B**₂₁₈ **A**₂₁₉ **F**₂₂₀ **9**₂₂₁ **9**₂₂₂ **9**₂₂₃ **1**₂₂₄
7₂₂₅ **1**₂₂₆ **7**₂₂₇ **2**₂₂₈ **7**₂₂₉ **3**₂₃₀ **7**₂₃₁ **4**₂₃₂

B.4 4+2 Standard & 4+2 Express Formats Secondary Central Station

1₂₃₃ **1**₂₃₄ **1**₂₃₅ **2**₂₃₆ **1**₂₃₇ **3**₂₃₈ **1**₂₃₉ **4**₂₄₀ **F**₂₄₁ **1**₂₄₂ **F**₂₄₃ **2**₂₄₄ **F**₂₄₅ **3**₂₄₆ **F**₂₄₇ **4**₂₄₈
9₂₄₉ **2**₂₅₀ **6**₂₅₁ **1**₂₅₂ **6**₂₅₃ **2**₂₅₄ **6**₂₅₅ **3**₂₅₆ **6**₂₅₇ **4**₂₅₈ **6**₂₅₉ **5**₂₆₀ **6**₂₆₁ **6**₂₆₂ **4**₂₆₃ **7**₂₆₄
6₂₆₅ **A**₂₆₆ **6**₂₆₇ **B**₂₆₈ **6**₂₆₉ **F**₂₇₀ **E**₂₇₁ **1**₂₇₂ **E**₂₇₃ **2**₂₇₄ **E**₂₇₅ **3**₂₇₆ **E**₂₇₇ **4**₂₇₈ **D**₂₇₉ **1**₂₈₀
D₂₈₁ **2**₂₈₂ **D**₂₈₃ **3**₂₈₄ **D**₂₈₅ **4**₂₈₆ **9**₂₈₇ **3**₂₈₈ **A**₂₈₉ **1**₂₉₀ **A**₂₉₁ **2**₂₉₂ **A**₂₉₃ **3**₂₉₄ **A**₂₉₅ **4**₂₉₆
A₂₉₇ **5**₂₉₈ **A**₂₉₉ **6**₃₀₀ **5**₃₀₁ **7**₃₀₂ **A**₃₀₃ **A**₃₀₄ **A**₃₀₅ **B**₃₀₆ **A**₃₀₇ **F**₃₀₈ **9**₃₀₉ **9**₃₁₀ **9**₃₁₁ **1**₃₁₂
7₃₁₃ **1**₃₁₄ **7**₃₁₅ **2**₃₁₆ **7**₃₁₇ **3**₃₁₈ **7**₃₁₉ **4**₃₂₀

To enter Programming Mode, press the **MODE** key, **7764** and then the **[ENTER/STORE]** key.

B.5 All 3+1, All 4+1 and 4+2 Expanded Formats for Primary Central Station

| | | | | | | | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 | 160 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 161 | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 177 | 178 | 179 | 180 | 181 | 182 | 183 | 184 | 185 | 186 | 187 | 188 | | | | |

B.6 All 3+1, All 4+1 and 4+2 Expanded Formats for Secondary Central Station

| | | | | | | | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 233 | 234 | 235 | 236 | 237 | 238 | 239 | 240 | 241 | 242 | 243 | 244 | 245 | 246 | 247 | 248 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 249 | 250 | 251 | 252 | 253 | 254 | 255 | 256 | 257 | 258 | 259 | 260 | 261 | 262 | 263 | 264 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 265 | 266 | 267 | 268 | 269 | 270 | 271 | 272 | 273 | 274 | 275 | 276 | | | | |

B.7 All 3+1, All 4+1 and 4+2 Expanded Formats for Primary Central Station (Factory Defaults)

| | | | | | | | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 1 | 1 | 1 | 1 | F | F | F | F | 9 | 6 | 6 | 6 | 6 | 6 | 6 | 4 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 161 | 6 | 6 | 6 | E | E | E | E | D | D | D | D | 9 | A | A | A |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 177 | A | A | 5 | A | A | A | 9 | F | 7 | 7 | 7 | 7 | 7 | 7 | 7 |

B.8 All 3+1, All 4+1 and 4+2 Expanded Formats for Secondary Central Station (Factory Defaults)

| | | | | | | | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 1 | 1 | 1 | 1 | F | F | F | F | 9 | 6 | 6 | 6 | 6 | 6 | 6 | 4 |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 249 | 6 | 6 | 6 | E | E | E | E | D | D | D | D | 9 | A | A | A |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 265 | A | A | 5 | A | A | A | 9 | F | 7 | 7 | 7 | 7 | 7 | 7 | 7 |

--To enter Programming Mode, press the **MODE** key, **7764** and then the **[ENTER/STORE]** key.

B.9 Ademco Contact ID Format Primary Central Station

| | | | | | | | | | | | | | | | |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <input type="text"/> 145 | <input type="text"/> 146 | <input type="text"/> 147 | <input type="text"/> 148 | <input type="text"/> 149 | <input type="text"/> 150 | <input type="text"/> 151 | <input type="text"/> 152 | <input type="text"/> 153 | <input type="text"/> 154 | <input type="text"/> 155 | <input type="text"/> 156 | <input type="text"/> 157 | <input type="text"/> 158 | <input type="text"/> 159 | <input type="text"/> 160 |
| <input type="text"/> 161 | <input type="text"/> 162 | <input type="text"/> 163 | <input type="text"/> 164 | <input type="text"/> 165 | <input type="text"/> 166 | <input type="text"/> 167 | <input type="text"/> 168 | <input type="text"/> 169 | <input type="text"/> 170 | <input type="text"/> 171 | <input type="text"/> 172 | <input type="text"/> 173 | <input type="text"/> 174 | <input type="text"/> 175 | <input type="text"/> 176 |
| <input type="text"/> 177 | <input type="text"/> 178 | <input type="text"/> 179 | <input type="text"/> 180 | <input type="text"/> 181 | <input type="text"/> 182 | <input type="text"/> 183 | <input type="text"/> 184 | <input type="text"/> 185 | <input type="text"/> 186 | <input type="text"/> 187 | <input type="text"/> 188 | <input type="text"/> 189 | <input type="text"/> 190 | <input type="text"/> 191 | <input type="text"/> 192 |
| <input type="text"/> 193 | <input type="text"/> 194 | <input type="text"/> 195 | <input type="text"/> 196 | <input type="text"/> 197 | <input type="text"/> 198 | <input type="text"/> 199 | <input type="text"/> 200 | <input type="text"/> 201 | <input type="text"/> 202 | <input type="text"/> 203 | <input type="text"/> 204 | <input type="text"/> 205 | <input type="text"/> 206 | <input type="text"/> 207 | <input type="text"/> 208 |
| <input type="text"/> 209 | <input type="text"/> 210 | <input type="text"/> 211 | <input type="text"/> 212 | <input type="text"/> 213 | <input type="text"/> 214 | <input type="text"/> 215 | <input type="text"/> 216 | <input type="text"/> 217 | <input type="text"/> 218 | <input type="text"/> 219 | | | | | |

B.10 Ademco Contact ID Format Secondary Central Station

| | | | | | | | | | | | | | | | |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <input type="text"/> 233 | <input type="text"/> 234 | <input type="text"/> 235 | <input type="text"/> 236 | <input type="text"/> 237 | <input type="text"/> 238 | <input type="text"/> 239 | <input type="text"/> 240 | <input type="text"/> 241 | <input type="text"/> 242 | <input type="text"/> 243 | <input type="text"/> 244 | <input type="text"/> 245 | <input type="text"/> 246 | <input type="text"/> 247 | <input type="text"/> 248 |
| <input type="text"/> 249 | <input type="text"/> 250 | <input type="text"/> 251 | <input type="text"/> 252 | <input type="text"/> 253 | <input type="text"/> 254 | <input type="text"/> 255 | <input type="text"/> 256 | <input type="text"/> 257 | <input type="text"/> 258 | <input type="text"/> 259 | <input type="text"/> 260 | <input type="text"/> 261 | <input type="text"/> 262 | <input type="text"/> 263 | <input type="text"/> 264 |
| <input type="text"/> 265 | <input type="text"/> 266 | <input type="text"/> 267 | <input type="text"/> 268 | <input type="text"/> 269 | <input type="text"/> 270 | <input type="text"/> 271 | <input type="text"/> 272 | <input type="text"/> 273 | <input type="text"/> 274 | <input type="text"/> 275 | <input type="text"/> 276 | <input type="text"/> 277 | <input type="text"/> 278 | <input type="text"/> 279 | <input type="text"/> 280 |
| <input type="text"/> 281 | <input type="text"/> 282 | <input type="text"/> 283 | <input type="text"/> 284 | <input type="text"/> 285 | <input type="text"/> 286 | <input type="text"/> 287 | <input type="text"/> 288 | <input type="text"/> 289 | <input type="text"/> 290 | <input type="text"/> 291 | <input type="text"/> 292 | <input type="text"/> 293 | <input type="text"/> 294 | <input type="text"/> 295 | <input type="text"/> 296 |
| <input type="text"/> 297 | <input type="text"/> 298 | <input type="text"/> 299 | <input type="text"/> 300 | <input type="text"/> 301 | <input type="text"/> 302 | <input type="text"/> 303 | <input type="text"/> 304 | <input type="text"/> 305 | <input type="text"/> 306 | <input type="text"/> 307 | | | | | |


B.11 Ademco Contact ID Format Primary Central Station (Factory Defaults)

1₁₄₅ **1**₁₄₆ **1**₁₄₇ **1**₁₄₈ **1**₁₄₉ **5**₁₅₀ **1**₁₅₁ **1**₁₅₂ **1**₁₅₃ **1**₁₅₄ **1**₁₅₅ **5**₁₅₆ **3**₁₅₇ **8**₁₅₈ **0**₁₅₉ **3**₁₆₀
8₁₆₁ **0**₁₆₂ **3**₁₆₃ **8**₁₆₄ **0**₁₆₅ **3**₁₆₆ **8**₁₆₇ **0**₁₆₈ **3**₁₆₉ **0**₁₇₀ **1**₁₇₁ **3**₁₇₂ **1**₁₇₃ **0**₁₇₄ **3**₁₇₅ **0**₁₇₆
2₁₇₇ **3**₁₇₈ **1**₁₇₉ **1**₁₈₀ **3**₁₈₁ **5**₁₈₂ **1**₁₈₃ **3**₁₈₄ **5**₁₈₅ **2**₁₈₆ **3**₁₈₇ **2**₁₈₈ **1**₁₈₉ **3**₁₉₀ **0**₁₉₁ **0**₁₉₂
3₁₉₃ **5**₁₉₄ **4**₁₉₅ **3**₁₉₆ **5**₁₉₇ **4**₁₉₈ **3**₁₉₉ **0**₂₀₀ **8**₂₀₁ **6**₂₀₂ **0**₂₀₃ **2**₂₀₄ **6**₂₀₅ **0**₂₀₆ **8**₂₀₇ **4**₂₀₈
1₂₀₉ **1**₂₁₀ **4**₂₁₁ **1**₂₁₂ **6**₂₁₃ **4**₂₁₄ **1**₂₁₅ **2**₂₁₆ **4**₂₁₇ **1**₂₁₈ **3**₂₁₉

B.12 Ademco Contact ID Format Secondary Central Station (Factory Defaults)

1₂₃₃ **1**₂₃₄ **1**₂₃₅ **1**₂₃₆ **1**₂₃₇ **5**₂₃₈ **1**₂₃₉ **1**₂₄₀ **1**₂₄₁ **1**₂₄₂ **1**₂₄₃ **5**₂₄₄ **3**₂₄₅ **8**₂₄₆ **0**₂₄₇ **3**₂₄₈
8₂₄₉ **0**₂₅₀ **3**₂₅₁ **8**₂₅₂ **0**₂₅₃ **3**₂₅₄ **8**₂₅₅ **0**₂₅₆ **3**₂₅₇ **0**₂₅₈ **1**₂₅₉ **3**₂₆₀ **1**₂₆₁ **0**₂₆₂ **3**₂₆₃ **0**₂₆₄
2₂₆₅ **3**₂₆₆ **1**₂₆₇ **1**₂₆₈ **3**₂₆₉ **5**₂₇₀ **1**₂₇₁ **3**₂₇₂ **5**₂₇₃ **2**₂₇₄ **3**₂₇₅ **2**₂₇₆ **1**₂₇₇ **3**₂₇₈ **0**₂₇₉ **0**₂₈₀
3₂₈₁ **5**₂₈₂ **4**₂₈₃ **3**₂₈₄ **5**₂₈₅ **4**₂₈₆ **3**₂₈₇ **0**₂₈₈ **8**₂₈₉ **6**₂₉₀ **0**₂₉₁ **2**₂₉₂ **6**₂₉₃ **0**₂₉₄ **8**₂₉₅ **4**₂₉₆
1₂₉₇ **1**₂₉₈ **4**₂₉₉ **1**₃₀₀ **6**₃₀₁ **4**₃₀₂ **1**₃₀₃ **2**₃₀₄ **4**₃₀₅ **1**₃₀₆ **3**₃₀₇

Appendix C: Ademco Contact ID Format Event Code Description

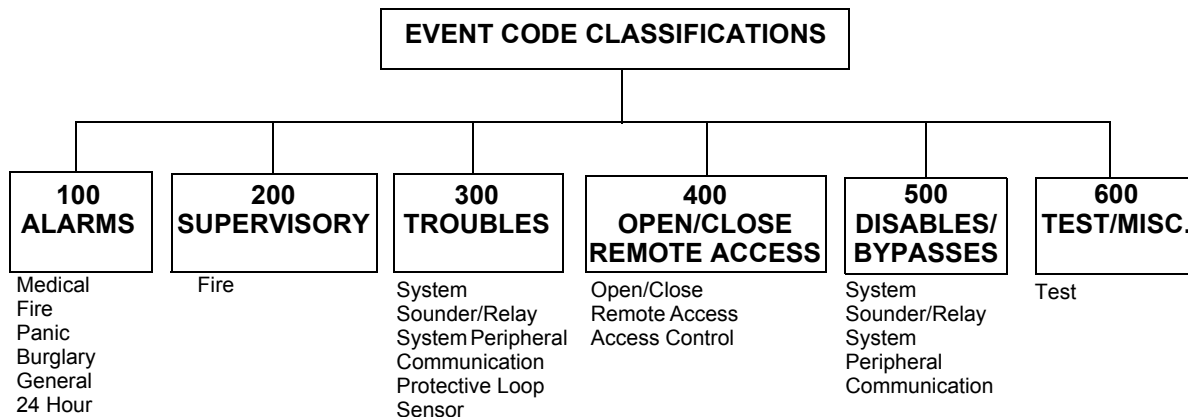

EVENT

MESSAGE

Medical Alarms - 100

| | |
|-------------------------|--------------------------------|
| 100 Medical | EMERG - Personal Emergency - # |
| 101 Pendant transmitter | EMERG - Personal Emergency - # |
| 102 Fail to report in | EMERG - Fail to Check-in - # |

Fire Alarms - 110

| | |
|------------------|---------------------------|
| 110 Fire Alarm | FIRE - Fire Alarm - # |
| 111 Smoke | FIRE - Smoke Detector - # |
| 112 Combustion | FIRE - Combustion - # |
| 113 Waterflow | FIRE - Waterflow - # |
| 114 Heat | FIRE - Heat Sensor - # |
| 115 Pull Station | FIRE - Pull Station - # |
| 116 Duct | FIRE - Duct Sensor - # |
| 117 Flame | FIRE - Flame Sensor - # |
| 118 Near Alarm | FIRE - Near Alarm - # |

Panic Alarms - 120

| | |
|-----------------|---------------------------|
| 120 Panic Alarm | PANIC - Panic - # |
| 121 Duress | PANIC - Duress - # |
| 122 Silent | PANIC - Silent Panic - # |
| 123 Audible | PANIC - Audible Panic - # |

Burglar Alarms - 130

| | |
|----------------|----------------------|
| 130 Burglary | BURG - Burglary - # |
| 131 Perimeter | BURG - Perimeter - # |
| 132 Interior | BURG - Interior - # |
| 133 24-Hour | BURG - 24-Hour - # |
| 134 Entry/Exit | BURG - Entry/Exit |
| 135 Day/Night | BURG - Day/Night |
| 136 Outdoor | BURG - Outdoor - # |

| EVENT | MESSAGE |
|---|--|
| 137 Tamper | BURG - Tamper - # |
| 138 Near Alarm | BURG - Near Alarm - # |
| <u>General Alarms - 140</u> | |
| 140 General Alarm | ALARM - General Alarm - # |
| 141 Polling loop open | ALARM - Polling Loop Open - # |
| 142 Polling loop short | ALARM - Polling Loop Short - # |
| 143 Expansion module failure | ALARM - Exp. Module Fail - # |
| 144 Sensor tamper | ALARM - Sensor Tamper - # |
| 145 Expansion module tamper | ALARM - Exp. Module Tamper - # |
| <u>24 Hour Non-Burglary - 150 and 160</u> | |
| 150 24-Hour Non-Burg | ALARM - 24-Hr. Non-Burg - # |
| 151 Gas detected | ALARM - Gas Detected - # |
| 152 Refrigeration | ALARM - Refrigeration - # |
| 153 Loss of heat | ALARM - Heating System - # |
| 154 Water leakage | ALARM - Water Leakage - # |
| 155 Foil break | ALARM - Foil Break - # |
| 156 Day trouble | ALARM - Day Zone - # |
| 157 Low bottled gas level | ALARM - Low Gas Level - # |
| 158 High temp | ALARM - High Temperature - # |
| 159 Low temp | ALARM - Low Temperature - # |
| 161 Loss of air flow | ALARM - Air Flow - # |
| <u>Fire Supervisory - 200 and 210</u> | |
| 200 Fire Supervisory | SUPER. - Fire Supervisory - # |
| 201 Low water pressure | SUPER. - Low Water Pressure - # |
| 202 Low CO2 | SUPER. - Low CO2 |
| 203 Gate valve sensor | SUPER. - Gate Valve - # |
| 204 Low water level | SUPER. - Low Water Level - # |
| 205 Pump activated | SUPER. - Pump Activation - # |
| 206 Pump failure | SUPER. - Pump Failure - # |
| <u>System Troubles - 300 and 310</u> | |
| 300 System trouble | TROUBLE - System Trouble |
| 301 AC loss | TROUBLE - AC Power |
| 302 Low system battery | TROUBLE - System Low Battery |
| 303 RAM checksum bad | TROUBLE - Bad RAM Checksum (Restore not applicable) |
| 304 ROM checksum bad | TROUBLE - Bad ROM Checksum (Restore not applicable) |
| 305 System reset | TROUBLE - System Reset (Restore not applicable) |
| 306 Panel program changed | TROUBLE - Programming Changed (Restore not applicable) |
| 307 Self-test failure | TROUBLE - Self Test Failure |
| 308 System shutdown | TROUBLE - System Shutdown |
| 309 Battery test failure | TROUBLE - Battery Test Failure |
| 310 Ground fault | TROUBLE - Ground Fault - # |
| 311 No battery | TROUBLE - No Battery |
| <u>Sounder/Relay Troubles - 320</u> | |
| 320 Sounder/Relay | TROUBLE - Sounder Relay - # |
| 321 Bell 1 | TROUBLE - Bell/Siren #1 |
| 322 Bell 2 | TROUBLE - Bell/Siren #2 |

| EVENT | MESSAGE | |
|---|--------------------------------------|------------------------|
| 323 Alarm relay | TROUBLE - Alarm Relay | |
| 324 Trouble relay | TROUBLE - Trouble Relay | |
| 325 Reversing | TROUBLE - Reversing Relay | |
| 326 Bell 3 | TROUBLE - Bell/Siren #3 | |
| 327 Bell 4 | TROUBLE - Bell/Siren #4 | |
| <u>System Peripheral Troubles - 330 and 340</u> | | |
| 330 System Peripheral | TROUBLE - Sys. Peripheral - # | |
| 331 Polling loop open | TROUBLE - Polling Loop Open | |
| 332 Polling loop short | TROUBLE - Polling Loop Short | |
| 333 Expansion module failure | TROUBLE - Exp. Module Fail - # | |
| 334 Repeater failure | TROUBLE - Repeater Failure - # | |
| 335 Local printer paper out | TROUBLE - Printer Paper Out | |
| 336 Local printer failure | TROUBLE - Local Printer | |
| <u>Communication Troubles - 350 and 360</u> | | |
| 350 Communication | TROUBLE - Communication Trouble | |
| 351 Telco 1 fault | TROUBLE - Phone Line #1 | |
| 352 Telco 2 fault | TROUBLE - Phone Line #2 | |
| 353 Long range radio xmitter fault | TROUBLE - Radio Transmitter | |
| 354 Fail to communicate | TROUBLE - Fail to Communicate | |
| 355 Loss of radio supervision | TROUBLE - Radio Supervision | |
| 356 Loss of central polling | TROUBLE - Central Radio Polling | |
| <u>Protection Loop Troubles - 370</u> | | |
| 370 Protection loop | TROUBLE - Protection Loop - # | |
| 371 Protection loop open | TROUBLE - Protection Loop Open - # | |
| 372 Protection loop short | TROUBLE - Protection Loop Short - # | |
| 373 Fire Trouble | TROUBLE - Fire Loop - # | |
| <u>Sensor Troubles - 380</u> | | |
| 380 Sensor trouble | TROUBLE - Sensor Trouble - # | |
| 381 Loss of Supervision - RF | TROUBLE - RF Sensor Supervision - # | |
| 382 Loss of Supervision - RPM | TROUBLE - RPM Sensor Supervision - # | |
| 383 Sensor tamper | TROUBLE - Sensor Tamper - # | |
| 384 RF transmitter low battery | TROUBLE - RF Sensor Batt. - # | |
| <u>Open/Close - 400</u> | | |
| 400 Open/Close | OPENING | CLOSING |
| 401 Open/Close by user | OPENING - User # | CLOSING - User # |
| 402 Group Open/Close | OPENING - Group User # | CLOSING - Group User # |
| 403 Automatic Open/Close | OPENING - Automatic | CLOSING - Automatic |
| 404 Late Open/Close | OPENING - Late | CLOSING - Late |
| 405 Deferred Open/Close | Opening not used | Closed not used |
| 406 Cancel | OPENING - Cancel | Closed not used |
| 407 Remote arm/disarm | OPENING - Remote | CLOSING - Remote |
| 408 Quick arm | Opening not applicable | CLOSING - Quick Arm |
| 409 Keyswitch Open/Close | OPENING - Keyswitch | CLOSING - Keyswitch |
| <u>Remote Access - 410</u> | | |
| 411 Callback request made | REMOTE - Callback Requested | Restore not applicable |

| EVENT | MESSAGE | |
|---|---------------------------------|------------------------|
| 412 Success - download/access | REMOTE - Successful Access | Restore not applicable |
| 413 Unsuccessful access | REMOTE - Unsuccessful Access | Restore not applicable |
| 414 System shutdown | REMOTE - System Shutdown | |
| 415 Dialer shutdown | REMOTE - Dialer Shutdown | |
| 416 Success - upload/access | REMOTE - Successful Access | Restore not applicable |
| <u>Access Control - 420</u> | | |
| 421 Access denied | ACCESS - Access Denied - User # | Restore not used |
| 422 Access report by user | ACCESS - Access Gained - User # | Restore not used |
| <u>System Disables - 500 and 510</u> | | |
| <u>Sounder/Relay Disables - 520</u> | | |
| 520 Sounder/Relay disable | DISABLE - Sounder/Relay - # | |
| 521 Bell 1 disable | DISABLE - Bell/Siren - #1 | |
| 522 Bell 2 disable | DISABLE - Bell/Siren - #2 | |
| 523 Alarm relay disable | DISABLE - Alarm Relay | |
| 524 Trouble relay disable | DISABLE - Trouble Relay | |
| 525 Reversing relay disable | DISABLE - Reversing Relay | |
| 526 Bell 3 disable | DISABLE - Bell/Siren - #3 | |
| 527 Bell 4 disable | DISABLE - Bell/Siren - #4 | |
| <u>System Peripheral Disables - 530 and 540</u> | | |
| <u>Communication Disables - 550 and 560</u> | | |
| 551 Dialer disabled | DISABLE - Dialer Disable | |
| 552 Radio transmitter disabled | DISABLE - Radio Disable | |
| <u>Bypasses - 570</u> | | |
| 570 Zone bypass | BYPASS - Zone Bypass - # | |
| 571 Fire bypass | BYPASS - Fire Bypass - # | |
| 572 24-Hour zone bypass | BYPASS - 24-Hour Bypass - # | |
| 573 Burglar bypass | BYPASS - Burg. Bypass - # | |
| 574 Group bypass | BYPASS - Group Bypass - # | |
| <u>Test Misc. - 600</u> | | |
| 601 Manual trigger test | TEST - Manually Triggered | Restore not applicable |
| 602 Periodic test report | TEST - Periodic | Restore not applicable |
| 603 Periodic RF transmission | TEST - Periodic Radio | Restore not applicable |
| 604 Fire test | TEST - Fire Test | Restore not used |
| 605 Status report to follow | STATUS - Status Follows | Restore not applicable |
| 606 Listen-in to follow | LISTEN - Listen-in Active | Restore not applicable |
| 607 Walk test mode | TEST - Walk Test Mode | |
| 608 System abnormal test | TEST - System Abnormal Test | |

Appendix D: Events and Default Event Codes

Note: The character 'x' in the following table refers to the input circuit number (1 - 4).

| 411UDAC Events | Format Group 1 | | Format Group 2 | | Ademco Contact ID | |
|------------------------------|----------------|---------|----------------|---------|--------------------|----------|
| Input Circuit Functions | Active | Restore | Active | Restore | Active and Restore | Sensor # |
| 2 or 4-wire Smoke | 1x | Ex | 1 | E | 111 | 00x |
| Pull Station | 1x | Ex | 1 | E | 115 | 00x |
| Contact Closure | 1x | Ex | 1 | E | 110 | 00x |
| Host Control Panel Trouble | FF | Ex | F | E | 373 | 00x |
| Latching Supervisory | 8x | Ex | 8 | E | 200 | 00x |
| Autoresettable Supervisory | 8x | Ex | 8 | E | 200 | 00x |
| Silenceable Waterflow | 1x | Ex | 1 | E | 113 | 00x |
| Nonsilenceable Waterflow | 1x | Ex | 1 | E | 113 | 00x |
| Other Events | Active | Restore | Active | Restore | Active and Restore | Sensor # |
| Input Circuit Fault | Fx | Dx | F | D | 380 | 00x |
| AC Fault | 92 | 93 | 9 | 9 | 301 | 000 |
| Earth Fault | 61 | A1 | 6 | A | 310 | 000 |
| Low Battery Fault | 62 | A2 | 6 | A | 302 | 000 |
| No Battery Fault | 63 | A3 | 6 | A | 311 | 000 |
| Phone Line 1 Fault | 64 | A4 | 6 | A | 351 | 000 |
| Phone Line 2 Fault | 65 | A5 | 6 | A | 352 | 000 |
| NAC Fault | 66 | A6 | 6 | A | 321 | 000 |
| Phone Number 1 Fault | 6A | AA | 6 | A | 354 | 001 |
| Phone Number 2 Fault | 6B | AB | 6 | A | 354 | 002 |
| System Off Normal Fault | 6F | AF | 6 | A | 308 | 000 |
| Special Events | Active | Restore | Active | Restore | Active and Restore | Sensor # |
| System Test Message | 99 | - | 9 | - | 602 | 000 |
| System Abnormal Test Message | 91 | - | F | - | 608 | 000 |
| Upload/Download Request | 71 | - | 7 | - | 411 | 000 |
| Upload Successful | 72 | - | 7 | - | 416 | 000 |
| Download Successful | 73 | - | 7 | - | 412 | 000 |
| Upload/Download Failed | 74 | - | 7 | - | 412 | 000 |

Group Definitions:

Format Group 1

| | |
|-----------------------------------|------------------|
| 4+2 Ademco Express Standard, DTMF | 1400/2300 Hz ACK |
| 4+1 Expanded 1800 Hz Carrier | 2300 Hz ACK |
| 4+1 Expanded 1900 Hz Carrier | 1400 Hz ACK |
| 4+2 Standard 1800 Hz Carrier | 2300 Hz ACK |
| 4+2 Expanded 1800 Hz Carrier | 2300 Hz ACK |
| 4+2 Standard 1900 Hz Carrier | 1400 Hz ACK |
| 4+2 Expanded 1900 Hz Carrier | 1400 Hz ACK |

Format Group 2

| | |
|-----------------------------------|------------------|
| 4+1 Ademco Express Standard, DTMF | 1400/2300 Hz ACK |
| 3+1 Expanded 1800 Hz Carrier | 2300 Hz ACK |
| 3+1 Expanded 1900 Hz Carrier | 1400 Hz ACK |
| 3+1 Standard 1800 Hz Carrier | 2300 Hz ACK |
| 3+1 Standard 1900 Hz Carrier | 1400 Hz ACK |
| 4+1 Standard 1800 Hz Carrier | 2300 Hz ACK |
| 4+1 Standard 1900 Hz Carrier | 1400 Hz ACK |

Note that although all Expanded Mode formats communicate two digits per event, only the first digit is programmable. The second digit cannot be changed.

Appendix E: Operational Modes

| CODE | ACTIVITY | NOTES |
|-------------|--|--|
| 6676 (NORM) | Returns to normal operation | Fire protection is on. |
| 2525 (CLCK) | Enters Real-Time Clock Mode | Program digital communicator time. Fire protection is off. |
| 7764 (PROG) | Enters Program Mode | Allows programming of digital communicator. Fire protection is off. |
| 3337 (DEFP) | Returns digital communicator to factory default program settings | Fire protection is off during Default Mode. |
| 8768 (TROU) | Allows display of status for all circuits | Fire protection is off during Troubleshoot Mode. |

Index

A

AC Loss Reporting Delay **45**
Acknowledge/System Silence **11**
Alarm Verification **10, 48**
Autosilence **10, 49**

B

Battery
 see also Secondary Power
board revision level **9**

C

Cabinet **15**
 Dimensions **19**
 Knockouts **19**
Channels/Inputs **12, 13**
 Alarm Current **12**
 End-of-Line Resistor **12**
 Loop Resistance **12**
 Operating Voltage **12**
 Operation **12**
 see also Input Channels
 Short Circuit Current **12**
Computer
 see Service Terminal
Connection **24**
Controls **14**

D

Default Mode **51**
Delay Timer **46**
Dialer Runaway **10, 11**
Digital Communicator **15**
Downloading **62**

E

Earth Ground **13**

F

Fire•Watch 411 **15**
Form-C Relays
 contact rating **12**
 operating voltage **12**
 programmable **13**
 See also Relays
Front Panel Indicator
 AC Power **14**
 Active **14**
 Battery Trouble **14**
 Communication Fail **14**

Earth Fault **14**
Supervisory **14**
System Trouble **14**
Front Panel Switch
 Acknowledge/System Silence **14**
 Reset **14**
Function Selections
 Channel **46**
 Relays **47**

I

Indicators **14**
Input Channels **10, 22**

M

Mounting **18**

N

Notification Appliance Circuit **10, 13, 25**
 Current **12**
 End-of-line resistor **12**
 Operating Voltage **12**
 Style Y **12**

O

Operating Power
 connections **21**
 Primary **20**
 Secondary **21**
 see also Battery
Operational Modes
 Default Mode **16, 51**
 Normal Mode **16, 30**
 Program Mode **16, 34**
 Real Time Clock Mode **16, 33**
 Troubleshoot Mode **16, 52**
Output Circuits **25**
 battery charger **13**
 resettable power **13**
 telephone circuits **13**
 see also Telephone Circuits

P

Panel Configuration
 Nonlatching Slave Panel Communicator
 16
 Test Mode **16**
Piezo Sounder **14**
PK-411 **11, 15**
Primary Power **12**

See also Operating Power - Primary
PRO-411. See also Fire•Watch 411 **15**
Product Features **10**

R

Receivers

UL Listed **59**

Resettable Power

current **12**

operating voltage **12**

Resistor, End-of-Line

Channels/Inputs **12**

Notification Appliance Circuit **12**

Restoral Methods **11, 49**

revision level **9**

S

Secondary Power

Battery Charging Circuit **12**

Charger Capacity **12**

See also 'Battery' and 'Operating Power -
Secondary'

Security Features **61**

Service Terminal **10, 51**

Signal Silence Inhibit **10, 49**

Simultaneous Data Transfers **63**

Stand-alone Fire Alarm Communicator **16**

T

Telephone Circuits **17, 27**

Transformer **15**

Transmittal Priorities **57**

trouble call limit **50**

Trouble Reminder **10, 45**

Trouble Resound **10**

U

UL Power-limited Wiring Requirements **29**

Uploading **62**

Manufacturer Warranties and Limitation of Liability

Manufacturer Warranties. Subject to the limitations set forth herein, Manufacturer warrants that the Products manufactured by it in its Northford, Connecticut facility and sold by it to its authorized Distributors shall be free, under normal use and service, from defects in material and workmanship for a period of thirty six months (36) months from the date of manufacture (effective Jan. 1, 2009). The Products manufactured and sold by Manufacturer are date stamped at the time of production. Manufacturer does not warrant Products that are not manufactured by it in its Northford, Connecticut facility but assigns to its Distributor, to the extent possible, any warranty offered by the manufacturer of such product. This warranty shall be void if a Product is altered, serviced or repaired by anyone other than Manufacturer or its authorized Distributors. This warranty shall also be void if there is a failure to maintain the Products and the systems in which they operate in proper working conditions.

MANUFACTURER MAKES NO FURTHER WARRANTIES, AND DISCLAIMS ANY AND ALL OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, TRADEMARKS, PROGRAMS AND SERVICES RENDERED BY MANUFACTURER INCLUDING WITHOUT LIMITATION, INFRINGEMENT, TITLE, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. MANUFACTURER SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USES OF ITS PRODUCTS.

This document constitutes the only warranty made by Manufacturer with respect to its products and replaces all previous warranties and is the only warranty made by Manufacturer. No increase or alteration, written or verbal, of the obligation of this warranty is authorized. Manufacturer does not represent that its products will prevent any loss by fire or otherwise.

Warranty Claims. Manufacturer shall replace or repair, at Manufacturer's discretion, each part returned by its authorized Distributor and acknowledged by Manufacturer to be defective, provided that such part shall have been returned to Manufacturer with all charges prepaid and the authorized Distributor has completed Manufacturer's Return Material Authorization form. The replacement part shall come from Manufacturer's stock and may be new or refurbished. THE FOREGOING IS DISTRIBUTOR'S SOLE AND EXCLUSIVE REMEDY IN THE EVENT OF A WARRANTY CLAIM.

Warn-HL-08-2009.fm

(THIS SURFACE DELIBERATELY LEFT BLANK)

**OIL-LESS COMPRESSOR INSTRUCTION SHEETS****NOTE**

This compressor is intended for installation indoors for use on dry sprinkler systems in accordance with the Standard for Installation of Sprinkler Systems, NFPA 13 and the National Electrical Code, NFPA 70. The compressor should be sized to restore and maintain the air pressure in the sprinkler system in accordance with the requirements in NFPA 13.

DANGER

This compressor is not equipped and should NOT be used "as is" to supply breathing quality air.

WARNING

Motors, electrical equipment and controls can cause electrical arcs that will ignite a flammable gas or vapor. Never operate or repair in or near a flammable gas or vapor. Never store flammable liquids or gases near the compressor.

WARNING

These compressors are suitable for pumping only atmospheric air. As defined in Compressed Gas Association Pamphlet G-7, page 3, atmospheric air is a mixture of elements and compounds where nitrogen and oxygen comprise more than 99% with all other trace gases comprising less than 1%. **DO NOT USE THIS COMPRESSOR IN CONTAMINATED ENVIRONMENTS OR FOR PUMPING MIXTURES OTHER THAN ATMOSPHERIC AIR**

WARNING

Compressed air contains liquid water and is saturated with water vapor, which can freeze. Do not connect compressor outlet to freezer rooms or systems exposed to temperatures below freezing. If system connects to a freezer room or area exposed to freezing temperatures, a Dry Air Pac™ should be used.

Receiving

Your compressor is inspected at the factory and packaged to protect against shipping damage. When the compressor is unpacked, inspect for damage or missing parts. All claims should be settled directly with the freight company.

WARNING: Do not operate this compressor if damaged during shipment, handling, or use. Damage may result in bursting and cause injury or property damage.

Location

NOTE: Do not connect compressor intake to freezer room. – CALL 1-800-345-8207.

Locate the compressor in a clean, well-ventilated area where the air is relatively cool, clean, and dry. A 110°F (35 C) maximum and 40°F (4.5 C) minimum temperature for surrounding and inlet air are recommended. Provide at least 12 to 18 inches from any wall or other obstruction that will interfere with airflow through the motor's fan built into the motor. Blocking airflow through the fan may cause the compressor to over heat. Do not place the compressor in an area of excessive heat, such as near a boiler.

Mounting

Riser mounted compressors may be mounted to a firm level floor, wall or system riser. A mounting bracket

and straps are provided. Tank mounted compressors should be bolted to the floor using the bolt holes provided in the tank legs. Always shim the unit level before bolting it to the floor. Vibration isolators (P/N KVP4X4) are recommended. When using isolator pads, do not draw bolts tight. Allow the pad to absorb vibrations. When isolators are used, a flexible hose (P/N P1202MP) should be installed between the compressor and service piping.

Lubrication

NOTE: This compressor is designed for non-lubricated service. Bearings are permanently lubricated. Do not lubricate any part of the compressor or motor.

Piping (reference "Installation Instructions" drawings)**WARNING**

Compressed air contains liquid water and is saturated with water vapor, which can freeze. Do not connect compressor outlet to freezer rooms or systems exposed to temperatures below freezing. If system connects to a freezer room or area exposed to freezing temperatures, a Dry Air Pac™ should be used.

Piping between the compressor, accessory items and the sprinkler system should be at least ½" internal

For Assistance Please Call 1-800 345-8207

Please keep these instructions for future reference.

GENERAL AIR PRODUCTS, INC.

diameter to minimize pressure drop from the compressor to system. Larger pipe size may be required by code and may be substituted with no adverse effects. Smaller line size must not be used and will restrict the compressor flow, lowering capacity and causing the compressor/motor to work harder, which shortens compressor/motor life. All piping connected to the compressor must be fully supported and not transfer any loads to the compressor.

All oil-less compressors include a relief valve. For riser mounted models, the relief valve is installed on the compressor outlet. For tank mounted models, an ASME Code relief valve is mounted on the compressor's tank. This valve will open at a preset value above the pressure switch setting to prevent excess tank pressure in the event of switch failure.

WARNING: Do not attempt to change the safety relief valve setting.

The compressor outlet piping should contain an accessible drain. As a minimum a manual drain may be used, but an automatic drain is recommended to remove excess water.

NOTE: Accumulation of condensed water in a system causes corrosion of components and reduces system capacity.

NOTICE: Warranty is void if a separate check valve is not installed to prevent water back flow.

Wiring (reference "Wiring Instructions" drawings)

WARNING

Have a qualified electrician wire the compressor to ensure that the supply line has the same characteristics (voltage, frequency and phasing) as the motor. Wiring must comply with all local and national codes.

CAUTION

Inadequate wiring size can cause insufficient voltage at the compressor during start-up. Overheating and damage to the motor and controls may result

The supply wire must be of adequate size and no other equipment should be connected to the same line. The table below lists the recommended wire size for each model, based on a 100' run. Consult factory for longer runs.

The motors supplied are multiple voltage motors. A label on the pressure switch cover indicates the voltage the motor is pre-wired for. If the supply voltage, on site, is different from the voltage indicated on this label, change the internal motor voltage connections to match the supply voltage. To change internal voltage connections, remove the cover plate located on the rear or side of the motor and reconnect the wire leads as shown on the motor's wiring diagram.

On all three phase and ½ Hp and ¾ Hp single phase models, an arrow on the motor indicates the direction of rotation of the compressor. If the compressor rotates in the opposite direction, reverse the rotation of the motor. On single phase units, reverse motor rotation by interchanging the red and black motor leads. Interchanging any two incoming supply wires reverses rotation of three phase motors.

NOTICE: Single-phase oil-less compressors can not be operated at 208V. Operating the compressor at 208V voids the warranty.

NOTICE: Single-phase motors include internal thermal overload protection, which has an automatic reset device.

WARNING: Disconnect electrical power before servicing to disable reset devices. Thermal protection can automatically start the motor when the protector resets.

On single phase models, the motor is pre-wired to the pressure switch provided, which controls starting (cut

GENERAL AIR PRODUCTS, INC.

in pressure) and stopping (cut out pressure) of the motor. The pressure switch is factory set. Standard models switch is set at 27 psig cut in and 40 psig cut out. Low pressure models (“-LP”) switch is set at 13 psig cut in and 18 psig cut out. Consult General Air Products before adjusting the pressure switch.

| |
|---|
| <p>NOTE: Failure to use the pressure switch may result in overpressure of the compressor or other components in the system. Overpressure of the compressor may result in blown head gaskets or other damage.</p> |
|---|

Maintenance Instructions

WARNING

| |
|--|
| <p>DISCONNECT, TAG AND LOCK OUT POWER SOURCE THEN RELEASE ALL PRESSURE FROM THE SYSTEM BEFORE ATTEMPTING TO INSTALL, SERVICE, RELOCATE OR PERFORM ANY SERVICE.</p> |
|--|

The following instructions are based on NORMAL operation. If the compressor is in an excessively dusty area, increase frequency of maintenance checks.

WEEKLY

- Drain condensate from receiver and traps.
- Check for unusual noise or vibration.
- Clean air filters. –

| |
|--|
| NOTE: Do not clean filters with petroleum based products. |
|--|
- Clean all external parts of the compressor and motor.

MONTHLY

- Manually test safety relief valve.
- Inspect air system for leaks and tighten nuts and cap screws as required.

QUARTERLY

- Change filters.

Limited Warranty

General Air Products, Inc. warrants its products to be free of defects in material and workmanship under normal use and service for 12 months from date of purchase. Our warranty applies only when such defective parts are returned to us, or our Authorized Service Depot, transportation prepaid, and subject to our inspection and approval. Liability is limited to repair or replacement of material found defective, free of charge, FOB our plant. Unauthorized repairs or replacements will not be subject to factory warranty. This warranty is in lieu of all other warranties, expressed or implied.

General Notes

- 1) Warranty can be voided if modifications or adjustments are made without consultation and approval; from factory personnel.
- 2) If there are any questions regarding installation or operation of this compressor, please call the 800 number listed below.

 **GENERAL AIR PRODUCTS, INC.**

For Assistance Please Call 1-800 345-8207
Please keep these instructions for future reference.

OILLESSINST
REV 080906

Trouble Shooting Guide

| Symptom | Possible Cause(s) | Corrective Action |
|--|--|---|
| Motor hums and runs slowly or not at all | <ol style="list-style-type: none"> 1. Low voltage or no voltage 2. Shorted or open motor winding 3. Defective check valve 4. Defective pressure switch – contacts will not close | <ol style="list-style-type: none"> 1. Check voltage during attempt to start. Voltage must be within +/-10% of nominal voltage to start motor. Increase wire size if necessary to lower voltage drop. 2. Replace motor 3. Replace check valve 4. Repair or replace pressure switch |
| Reset mechanism cuts out repeatedly or fuses blow repeatedly | <ol style="list-style-type: none"> 1. Insufficient voltage to motor 2. Pressure switch set too high 3. Wrong fuse size 4. Piping too restrictive 5. Defective motor | <ol style="list-style-type: none"> 1. Check voltage during attempt to start. Voltage must be within +/-10% of nominal voltage to start motor. Increase wire size if necessary to lower voltage drop. 2. Consult factory, adjust or replace 3. Be sure fuses and heaters are rated properly 4. Add receiver vessel or increase pipe volume after compressor. 5. Replace motor |
| Unit short cycles repeatedly | <ol style="list-style-type: none"> 1. Piping too restrictive 2. Leak in line before system check valve | <ol style="list-style-type: none"> 1. Add receiver vessel or increase pipe volume after compressor. 2. Repair leaks(s) |
| Compressor Overheating | <ol style="list-style-type: none"> 1. Dirty intake filter 2. Wrong motor rotation 3. Air flow to fan on flywheel blocked | <ol style="list-style-type: none"> 1. Clean intake filter 2. Correct rotation 3. Clear air flow to fan or relocate unit |
| Excessive noise in operation | <ol style="list-style-type: none"> 1. Damaged bearings 2. Worn piston rings or skirts 3. Broken valves 4. Loose blower wheel 5. Damaged Blower baffle | <ol style="list-style-type: none"> 1. Contact General Air Products, Inc. Service Department. 1-(800)345-8207 |
| System pressure builds slowly | <ol style="list-style-type: none"> 1. Compressor sized incorrectly 2. Leaks or restrictions in piping 3. Dirty intake filter 4. Blown head gasket | <ol style="list-style-type: none"> 1. Check system size and compressor sizing 2. Correct leaks and remove restrictions 3. Clean intake filter 4. Replace head gasket |

OIL-LESS COMPRESSOR SINGLE PHASE WIRING INSTRUCTIONS

NOTE: MOST MOTORS ARE MULTIPLE VOLTAGE. CHECK NAMEPLATE AND VERIFY CORRECT INTERNAL CONNECTIONS FOR VOLTAGE BEING SUPPLIED TO UNIT.

FEEDER WIRE SIZE MUST BE CAPABLE OF CARRYING CURRENT LOAD OF COMPRESSOR AT MAXIMUM PRESSURE.

LINE

FUSED
DISCONNECT

PRESSURE
SWITCH

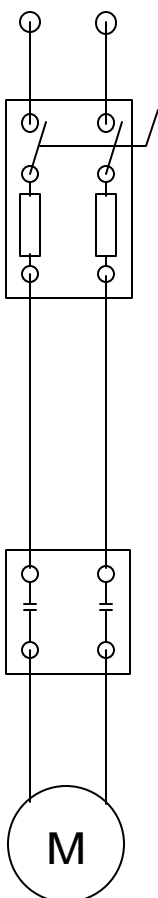


FIG 1

FIG 1

SINGLE PHASE
BUILT IN OVERLOAD
PROTECTION. (NOT
TO EXCEED 3/4 HP).

FOR 115V ELIMINATE
FUSE IN GROUND LEG.

PRESSURE SWITCH HP
RATING MUST NOT BE
EXCEEDED.

OTHER WIRING VARIATIONS
POSSIBLE DEPENDING ON
LOCAL CODES.

(THIS SURFACE DELIBERATELY LEFT BLANK)

(THIS SURFACE DELIBERATELY LEFT BLANK)



UNITED Fire Systems

Division of UNITED Fire Protection Corporation

1 Mark Road

Kenilworth, NJ USA 07033

908-688-0300

www.unitedfiresystems.net