



Follow instructions to safely remove **NITROGEN-PAC™ M-SERIES** from shipping pallet and retain all necessary components for installation.

Remove screws and wood blocks at top, left and right sides of **NITROGEN-PAC™ M-SERIES**.

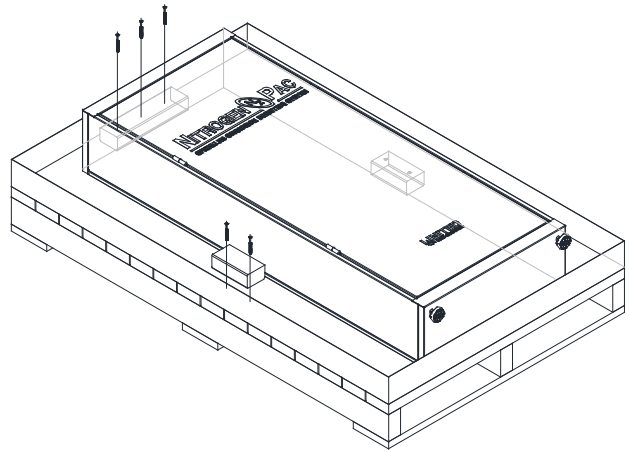

Slide unit upwards to disengage Z-brackets on rear.

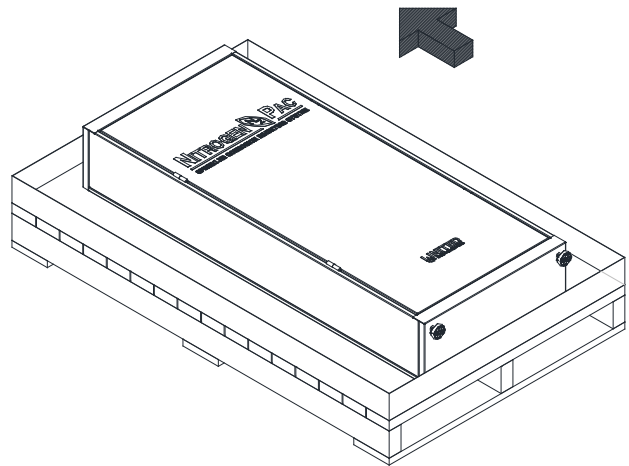

RETAIN Z BRACKETS MOUNTED TO PALLET FOR LATER INSTALLATION.

