



with Potter PFC-4410G3 Releasing Control Panel

INSTALLATION, OPERATION, AND MAINTENANCE MANUAL

Serial Number	
Date of Installation	_Date of Commissioning



UNITED Fire Systems

1 Mark Road Kenilworth, NJ USA 07033 908-688-0300 www.unitedfiresystems.com

Manual Part Number 10-500001-00G Version 1.00 June 2025

PREACTION-PAC™ with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

INDEX

Section	Description	Page
	Index	i
	List of Figures	ii
	List Of Tables	ii
	Hazard Identification	iii
	Foreword	iv
	Warranty	V
1	General	
1.1	Introduction	2
1.2	Features	2
1.3	Functional Description	6
1.4	Configurations	8
1.5	Options	8
1.6	Approvals	8
1.7	Applicable Standards	8
1.8	Applicable Manuals	8
1.9	FM Approved Assemblies	9
1.10	Installation	
1.10.1	Location	11
1.10.2	Unpacking, Placement, and Leveling	11
1.10.3	Serial Number	13
1.10.4	External Attachments	13
1.10.5	Prior To Placing In Service	
1.10.6	Placing In Service	
1.11	Operation	
1.11.1	Automatic	21
1.11.2	Manual	21
1.11.3	Restoring To Service	22
1.12	Inspection, Testing, and Maintenance	22
2	Victaulic Manual I-769N – Firelock NXT Preaction Valve	
3	General Air Products Manual OILLESSINST – Compressor	
4	United Fire Systems UFS-710 – NAMD-1 Nitrogen/Air Maintenance Device	
5	Potter Manual 5403751 - PFC-4410G3 Control Panel	

PREACTION-PAC™ with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

LIST OF FIGURES

Figure No.	Description	Page
1	Illustration - PREACTION-PAC™ Shown With Enclosure Doors Closed	1
2	Illustration - PREACTION-PAC™ Shown With Enclosure Doors Open	3
3a	Diagram - Functional Description (Compressor)	4
3b	Diagram - Functional Description (Pressure Maintenance Device)	5
4	Diagram – Overall Dimensions	11
5	Diagram - Location of Pallet Bolts and Leveling Feet	12
6	Diagram - Piping Attachment Details	14
7a	Diagram - Terminal Strip Wiring Detail (Compressor)	16
7b	Diagram - Terminal Strip Wiring Detail (Pressure Maintenance Device)	

LIST OF TABLES

Table No.	Description	Page
1.9	FM Approved Assemblies with Potter 4410G3 Releasing Control Panel	10

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

HAZARD IDENTIFICATION

Carefully read, understand, and follow instructions identified by these symbols.



The use of the word "DANGER" identifies an immediate hazard with a likelihood of death or serious personal injury if instructions, including recommended precautions, are not followed.



The use of the word "WARNING" identifies the presence of hazards or unsafe practices that could result in death, personal injury, or serious property damage if instructions, including recommended precautions, are not followed.



The use of the word "CAUTION" identifies possible hazards or unsafe practices that could result in personal injury or property damage if instructions, including recommended precautions, are not followed.



The use of the word "IMPORTANT" identifies special instructions, not related to hazards, that should be followed.

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

FOREWORD

This manual is written for those who install, operate and maintain **UNITED Fire Systems PREACTION- PAC™** sprinkler valve assemblies. The manual contains installation, operation, and maintenance information for these assemblies.



IMPORTANT

UNITED Fire Systems assumes no responsibility for the installation, operation, or maintenance of any systems other than those addressed in this manual. The data contained in this manual is for information purposes only. UNITED Fire Systems believes this data to be accurate at the time of publication, but the data is published and presented without any guarantee or warranty whatsoever. UNITED Fire Systems disclaims any liability for any use that may be made of the data and information contained in this manual by any and all parties.



IMPORTANT

The UNITED Fire Systems PREACTION-PAC™ sprinkler valve assembly is a vital part of the fire protection of any facility where these units are installed. Life safety and property protection depends on continuing proper operation of the assembly. The owner of the PREACTION-PAC™ is responsible for the condition of the assembly and its continued proper operation. UNITED Fire Systems strongly recommends that all owners of PREACTION-PAC™ engage the services of qualified, trained fire protection professionals to design the system containing the assembly, and to install and maintain the assembly.

UNITED Fire Systems PREACTION-PAC™ sprinkler valve assemblies are to be installed and maintained by qualified, trained personnel in accordance with:

- This Installation, Operation, and Maintenance Manual P/N 10-500001-00G.
- National Fire Protection Association No. 13, "Standard for the Installation of Sprinkler Systems."
- National Fire Protection Association No. 25, "Standard for the Inspection, Testing, and Maintenance of Water-Based Fire Protection Systems."
- National Fire Protection Association No. 70, "National Electrical Code®".
- National Fire Protection Association No. 72, "National Fire Alarm Code®."

Any questions on the information in this manual should be addressed to:

UNITED Fire Systems
1 Mark Road
Kenilworth, NJ USA 07033
908-688-0300

www.unitedfiresystems.com



LIMITED WARRANTY PREACTION-PAC™



What Does This Warranty Cover?

This Limited Warranty covers all manufacturing defects in material and workmanship in all equipment supplied by UNITED Fire Systems for new PREACTION-PAC™ sprinkler valve assemblies.

How Long Does The Coverage Last?

This Limited Warranty lasts for either eighteen (18) months from the date of shipment to the original purchaser or twelve (12) months from the date of commissioning by **UNITED Fire Systems** or a trained distributor, whichever comes first.

What Will UNITED Fire Systems Do?

UNITED Fire Systems will repair, replace, or refund the purchase price of, at its option, any defective **PREACTION-PAC™** equipment at no charge.

What Does This Warranty Not Cover?

- Equipment that is not supplied by UNITED Fire Systems is not covered.
- Equipment that has not been installed, commissioned, operated, and maintained per the instructions in the applicable **UNITED Fire Systems** instruction manual is not covered.
- Equipment that has been repaired, modified, or otherwise tampered with not in accordance with the applicable UNITED Fire Systems instruction manual is not covered.
- Any problem that is caused by abuse, misuse, or an act of God (such as a flood) is not covered.
- Transportation and shipping charges to return equipment to UNITED Fire Systems or for UNITED Fire Systems to return repaired or replacement equipment are not covered.
- Consequential and incidental damages are not covered. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion may not apply.

What Are The Customer's Responsibilities?

- Ensuring that the **UNITED Fire Systems** equipment is installed, commissioned, operated, and maintained per the instructions in the applicable **UNITED Fire Systems** instruction manual.
- Where applicable, ensuring that checklists supplied by UNITED Fire Systems are properly used and completed at the time of installation, commissioning, operation, and maintenance, and such checklists are retained as records of proper completion.
- Noting and recording the serial number(s) of UNITED Fire Systems equipment.
- Notifying UNITED Fire Systems or a trained distributor of the need for service under this Limited Warranty.

How Is Warranty Service Obtained?

If anything goes wrong with **UNITED Fire Systems** equipment, contact:

UNITED Fire Systems

Division of United Fire Protection Corporation 1 Mark Road Kenilworth, NJ 07033 USA Phone: 908-688-0300 Fax: 908-481-1131

www.unitedfiresystems.com

= OR = Your Trained Distributor

Be prepared to supply the serial number(s) of the equipment requiring service, and copies of the installation, commissioning, and maintenance checklists, as applicable.



LIMITED WARRANTY PREACTION-PAC™



Is This Limited Warranty Transferable?

If the PREACTION-PAC[™] equipment is moved from one to another installation during the time period of Limited Warranty coverage, the PREACTION-PAC[™] equipment must be re-commissioned by UNITED Fire Systems or a trained distributor to be eligible for continuing coverage. There will be a quoted charge for this re-commissioning.

Is This The Entire Warranty?

This Limited Warranty is the entire warranty given by **UNITED Fire Systems** to the purchaser of new **PREACTION-PAC™** equipment. Component warranties supplied by component manufacturers to **UNITED Fire Systems** that are valid for a longer period of time than the **UNITED Fire Systems** Limited Warranty may apply. Contact **UNITED Fire Systems** for more information. There are no other warranties expressed or implied, beyond those required by law.

How Do State and Federal Laws Apply?

This Limited Warranty grants specific legal rights per Federal law. There may also be other rights which vary from state to state.

UFS-113 Rev. 2.01 Nov 2020



Page 1 of 23

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1. GENERAL

- 1.1. Introduction. The UNITED Fire Systems PREACTION-PAC™ is a fully assembled and factory tested preaction fire suppression system, including preaction valve, trim, and control panel providing one complete zone of preaction water sprinkler fire protection. All components are contained in two steel enclosures assembled one above the other. The system pressure gauges and the required manual release handle are mounted on the front of the lower enclosure. The system detection and control panel are mounted behind a door in the upper enclosure with a clear polycarbonate window allowing visual access to the system indicators. Lockable latches on both doors permit authorized access to all system components. Both enclosures are finished in powder-coat red paint. Gasketing provides sealing of the enclosure doors. Knockouts permit easy attachment of external electrical conduits
- 1.1.1.Preaction Valve. The preaction valve installed in the PREACTION-PAC™ is a low-differential, latched clapper valve that uses a unique direct-acting diaphragm to separate the system water supply from the system piping. The positive latching system uses the supply water pressure to hold the clapper shut. When the water pressure in the diaphragm chamber is released, the latch retracts from the clapper and the valve actuates. The low differential and unique latch and actuator design of the valve allows the valve to be self-resetting.
- 1.1.2.Piping. Water inlet pipe connections are located on the lower left and lower right sides of the lower enclosure. The unused inlet is left plugged. Grooved pipe is used for the inlet connection. The water outlet pipe connection is located at the top center of the lower enclosure, behind the upper enclosure. The drain connection is accessible within the lower enclosure, and knockouts are provided allowing exit of the drain from either side. All pipe connections are done in the lower enclosure.
- 1.1.3.Control Panel. A Potter 4410G3 releasing control panel is factory-installed in the upper enclosure. Programming for a basic preaction system is factory programmed and tested. Additional programming may be necessary after installation to suit field conditions. This manual provides complete instructions for additional programming. All necessary internal wiring connections are factory-installed and tested.
- 1.1.4.Wiring. All wiring from the integral control panel to the valve solenoid and all switches is factory installed and tested. Where applicable, wiring for compressor power and control is also factory installed and tested. All field wiring for control panel power, compressor power, detection circuits, notification appliance circuits, and circuits requiring contact closure is connected to terminal strips in the upper enclosure. No access to the lower enclosure is necessary to complete the wiring installation.
- 1.1.5.Compressor. For assemblies equipped with a compressor for air pressurization of the preaction sprinkler piping, all wiring and adjustments are performed at the factory. Three sizes of compressor are available, depending on the volume of installed piping to be pressurized. The compressor is mounted using molded rubber mounts and bushings to minimize noise and vibration during motor operation. A compressor disconnect switch is located in the upper enclosure.
- **1.1.6.Pressure Maintenance Device.** Assemblies are equipped with a pressure maintenance device when the source of the supervisory gas is external of the **PREACTION-PAC™**, such as a tank-mounted air compressor or a nitrogen generator. A blank plate replaces the compressor disconnect switch.

1.2. Features

- 1.2.1.Attractive and rugged metal enclosure. The entire enclosure is manufactured from steel with continuous welded seams. The lower enclosure is 12 gauge, while the upper enclosure is 14 gauge. Both enclosures are coated with red powder-coat paint inside and out. Continuous pianostyle hinges attach the doors to the enclosures.
- **1.2.2.**Easy-to-see gauges on front of enclosure. Three pressure gauges are mounted on the front of the lower enclosure, and are visible at all times. These gauges monitor the air pressure in the system

- piping, the water supply pressure up to the preaction valve, and the water pressure keeping the valve clapper piston closed.
- 1.2.3. Easy access to manual release valve. The emergency manual release ball valve is located behind a small unlocked door on the front of the lower enclosure. Operation of this ball valve opens the preaction valve, filling the system piping with water. No power is necessary to accomplish this operation. The key for the lower enclosure main door does not have to be available to accomplish this operation.
- **1.2.4.** Water inlet connections. The water inlet piping may attach to the lower enclosure near the bottom on either side.
- **1.2.5.**Easy-to-follow instructions on enclosure front. System instructions, mounted behind clear plastic, are located on the front of the upper enclosure.
- **1.2.6.**Space for required spare sprinkler heads and wrench. As required by NFPA 13, a built-in storage location for spare sprinkler heads and a sprinkler wrench is behind the door of the upper enclosure.
- **1.2.7.**Separate mechanical and electrical enclosures. This allows mechanical and electrical trades to keep their work areas separate.

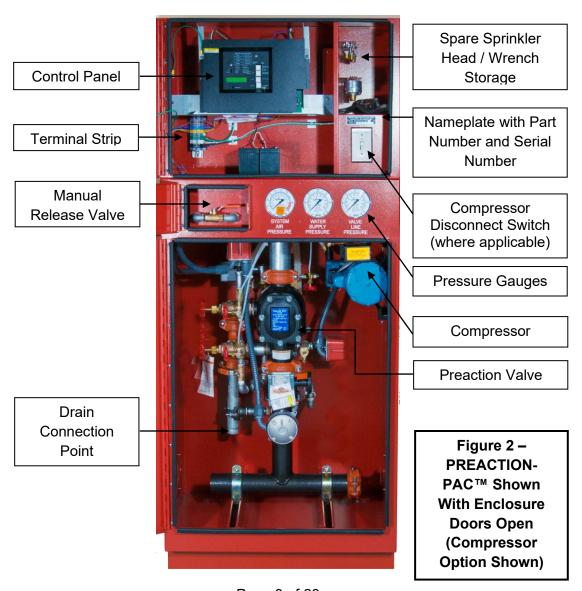


Figure 3a – Diagram - Functional Description with Compressor


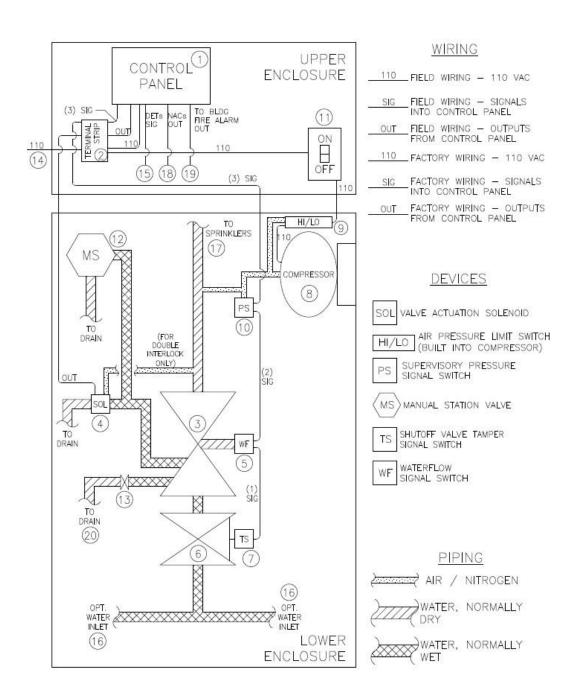


Figure 3b – Diagram - Functional Description with Pressure Maintenance Device

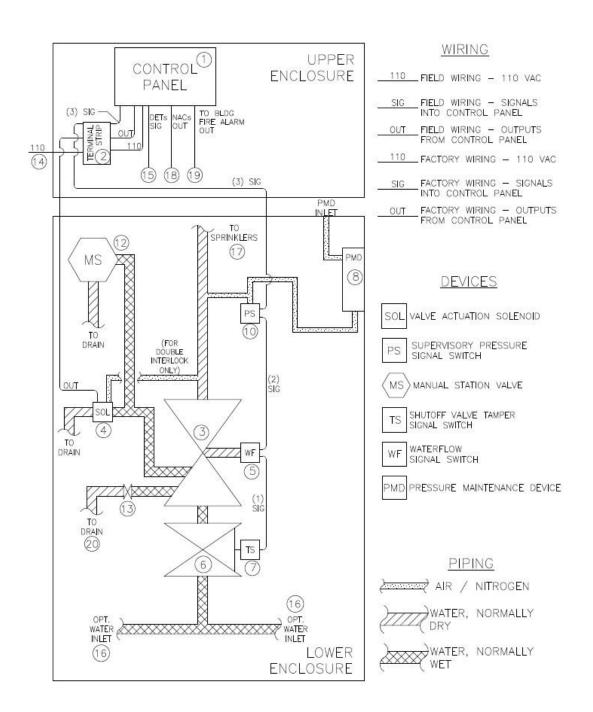

- 1.3. Functional Description. Refer to Figure 3a on page 4 and Figure 3b on page 5.
- 1.3.1.Control panel (1). The control panel receives signals from fire detectors located in the protected space, as well as signals from various switches within the assembly. The panel processes the input signals per a pre-determined sequence of operation, and operates outputs for external audible / visual devices and building fire alarm signaling, as well as the signal to open the preaction valve within the assembly. Refer to the control panel instruction manual in Section 5 for details on the panel and the sequence of operation.
- **1.3.2.Terminal strip (2).** The terminal strip provides a convenient point for landing some of the required field wiring, and also serves as the interface point between the control panel (1) and the various connections in the lower enclosure.
- 1.3.3.Preaction valve (3). The preaction valve is the heart of the assembly. The valve holds back the sprinkler water until the control panel (1) reacts to the signal from the fire detectors and sends a signal to the valve actuation solenoid (4). In single-interlock assemblies, actuation of the valve actuation solenoid (4) sends water into the sprinkler pipe. In double-interlock assemblies, fusing of a sprinkler head from heat is required, along with valve actuation solenoid (4) actuation, to send water into the sprinkler pipe. Refer to Manual I-769N in Section 2 for more detailed information on the preaction valve.
- **1.3.4.Valve actuation solenoid (4).** The valve actuation solenoid receives the signal from the control panel (1) and actuates the preaction valve (3). The solenoid is the Victaulic Series 753-E, and is rated at 24VDC, 0.364 amps, 8.7 watts, 66 ohms. The solenoid is FM Approved under Group I (as in India). Refer to Manual I-769N in Section 2 for more detailed information.
- **1.3.5.Waterflow signal switch (5).** The waterflow signal switch responds to waterflow in the pipe downstream of the preaction valve (3). The switch contains two SPDT (Form C) contacts, rated at 10A-125/250VAC, 2.5A-6/12/24VDC. Contacts transfer when waterflow begins after preaction valve opens. Contacts automatically restore when waterflow ceases. One contact is factory-wired to send a signal to the control panel (1). Refer to the control panel instruction manual in Section 5 for details on the response of the panel to the waterflow signal switch.
- **1.3.6.Manual shutoff valve (6).** The manual shutoff valve is used to shut off the flow of water after actuation of the preaction valve (3). The normal position of this valve when the system is in service is open. Refer to Manual I-769N in Section 2 for more detailed information on the use of this valve.
- 1.3.7.Shutoff valve tamper signal switch (7). The shutoff valve tamper signal switch sends a supervisory signal to the control panel (1) when the manual shutoff valve (6) is closed. The switch contains two SPDT (Form C) contacts, rated at 10A-125/250VAC, 0.5A-125VDC. Contacts transfer when valve begins to close. Contacts restore when valve is fully open. One contact is factorywired to send a signal to the control panel (1). Refer to the control panel instruction manual in Section 5 for details on the response of the panel to the shutoff valve tamper signal switch.
- **1.3.8.Compressor** (8). The compressor supplies supervisory air pressure to fill the sprinkler pipe downstream of the preaction valve (3). The sprinkler pipe is pressurized to 13 PSIG minimum and 18 PSIG maximum by the compressor (8). Loss of this pressure, from damage to the pipe or a sprinkler head, results in a supervisory signal at the control panel (1).
- **1.3.9.Pressure Maintenance Device (8).** The pressure maintenance device supplies supervisory gas pressure, from either a tank-mounted air compressor or nitrogen generator, to fill the sprinkler pipe downstream of the preaction valve (3). The sprinkler pipe is pressurized to 15 PSIG by the pressure maintenance device (8). Loss of this pressure, from damage to the pipe or a sprinkler head, results in a supervisory signal at the control panel (1).
- **1.3.10. High / low air pressure limit switch (9).** Where applicable, the high / low air pressure limit switch is built into the compressor (8). When pressure in the pipe falls below 13 PSIG, the switch turns the compressor (8) on. When pressure in the pipe rises to 18 PSIG, the switch turns the compressor (8) off.
- **1.3.11.Supervisory pressure signal switch (10).** The supervisory pressure signal switch sends the supervisory signal for low and high system pressure to the control panel (1). The switch contains two SPDT (Form C) contacts, rated at 10.1A-125/250VAC, 2.0A-30VDC. Low pressure contacts transfer when pressure in the piping falls below 10PSIG. High pressure contacts transfer when

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

pressure in the piping exceeds 25PSIG. Contacts automatically restore when system pressure is within normal range. Both contacts are factory-wired to send a signal to the control panel (1). Refer to the control panel instruction manual in Section 5 for details on the response of the panel to the supervisory pressure signal switch.

- **1.3.12. Compressor disconnect switch (11).** Where applicable, the compressor disconnect switch is used to manually interrupt the 110VAC power to the compressor motor, during inspection, maintenance, and resetting of the assembly. Only trained personnel should use this switch. The normal position of this switch when the system is in service is ON.
- **1.3.13. Manual station valve (12).** The manual station valve is located behind a separate door on the front of the lower enclosure. No key is needed to open this door. To manually open the preaction valve (3), open the door and pull the lever on the manual station valve forward. The preaction valve (3) will open, and the sprinkler pipe will fill with water. No power is needed to manually open the preaction valve (3) in this manner.



IMPORTANT

Fusing of a sprinkler head by heat is necessary for water to be discharged onto a fire, even after operation of the manual station valve.

- **1.3.14.Drain valve (13).** The drain valve is used to drain the sprinkler pipe after actuation of the preaction valve (3). This valve is used only during inspection, maintenance, and resetting of the assembly. Only trained personnel should use this valve. Refer to Manual I-769N in Section 2 for more detailed information on this valve. The normal position of this valve is closed.
- **1.3.15.Input connection for 110 VAC power (14).** 110VAC is required to power the assembly. This power shall come from a source in compliance with all applicable codes and standards. Internal wiring (factory assembled) takes this power to the control panel (1) and, if equipped, the compressor (8). If local codes require individual 110VAC power sources for the control panel (1) and the compressor (8), jumpers may be removed from the terminal strip (2) permitting this. Refer to Section 1.10 for additional information on this connection.
- **1.3.16.Input connection for automatic fire detectors (15).** Automatic fire detectors are required to provide the signal for opening the preaction valve (3). These detectors are field-connected to this connection. See Section 1.10, and refer to the control panel instruction manual in Section 5 for details on these detectors and this connection.



IMPORTANT

Fusing of a sprinkler head by heat is necessary for water to be discharged onto a fire, even after operation of automatic fire detectors.


- 1.3.17.Water inlet connection (16). The sprinkler water supply is field-connected to this connection. One of two optional water inlet connections may be chosen. The connection may be made on the lower right of the assembly, or by removing the cap, the connection may be made on the lower left of the assembly. Refer to Section 1.10 and Section 2 Victaulic manual I-769N for more detailed information on this connection.
- **1.3.18.Outlet connection to fire sprinklers (17).** The outlet connection from the assembly to the fire sprinklers is field-connected to this connection. The connection is located in the top center of the

- lower enclosure, behind the upper enclosure. Refer to Section 1.10 and Section 2 Victaulic manual I-769N for more detailed information on this connection.
- **1.3.19. Notification appliance output connection (18).** Notification appliances are required by code to alert occupants that a fire has been detected. These appliances are field-connected to this connection. Refer to the control panel instruction manual in Section 5 for details on this connection.
- **1.3.20. Output connection to building fire alarm system (19).** Most codes require a fire protection subsystem to signal the building fire alarm system. This signal is field-connected to this connection. Refer to the control panel instruction manual in Section 5 for details on this connection.
- **1.3.21.Drain connection (20).** Drain water from the assembly must be piped away to a drain. The drain piping may be connected to the assembly on the left or the right side. Refer to Section 1.10 and Section 2 Victaulic manual I-769N for more detailed information on this connection.
- 1.4. Configurations. UNITED Fire Systems PREACTION-PAC™ sprinkler valve assemblies are available in the following configurations:
- **1.4.1.Valve sizes:** 1-1/2" through 4".
- **1.4.2.Valve types:** Single-interlock and double-interlock available in all valve sizes.
- 1.4.3. Supervisory gas sources:
- **1.4.3.1.** For 1-1/2" and 2" valves: 1/6HP compressor and pressure maintenance device available.
- 1.4.3.2. For 2-1/2" valves: 1/6HP and 1/3HP compressors and pressure maintenance device available.
- **1.4.3.3.** For 3" and 4" valves: 1/6HP, 1/3HP, and 1/2HP compressors and pressure maintenance device available.
- **1.4.3.4.** Gas sources are capable of pressurizing piping systems up to the following limits:
- **1.4.3.4.1.** 1/6HP compressor: maximum system capacity is 290 gallons.
- **1.4.3.4.2.** 1/3HP compressor: maximum system capacity is 475 gallons.
- **1.4.3.4.3.** 1/2HP compressor: maximum system capacity is 780 gallons.
- 1.4.3.4.4. Pressure maintenance device: Refer to the manual of the external source.
- **1.4.4.Control panel:** A Potter 4410G3 conventional detection control panel is factory-installed in the upper enclosure.
- **1.5.** Options None at this time.
- 1.6. Approvals. UNITED Fire Systems PREACTION-PAC™ sprinkler valve assemblies, as listed in this Manual, are Approved by FM Approvals under the heading "Automatic Water Control Valves." See pages 9 and 10 for Approved assemblies. NOTE: Although most PREACTION-PAC™ assemblies are FM Approved, custom-built units are supplied from time to time upon request. Various components within these custom assemblies maintain their individual approvals, but these custom assemblies are not FM Approved as a unit.
- **1.7. Applicable Standards. UNITED Fire Systems PREACTION-PAC™** sprinkler valve assemblies are to be installed and maintained by qualified, trained personnel in accordance with:
- 1.7.1. National Fire Protection Association No. 13, "Standard for the Installation of Sprinkler Systems."
- **1.7.2.**National Fire Protection Association No. 25, "Standard for the Inspection, Testing, and Maintenance of Water-Based Fire Protection Systems."
- 1.7.3. National Fire Protection Association No. 70, "National Electrical Code®".
- 1.7.4. National Fire Protection Association No. 72, "National Fire Alarm Code®."
- **1.8. Applicable Manuals.** Manuals supplied by the manufacturers of components used in **UNITED Fire Systems PREACTION-PAC™** assemblies are included with this manual. In some cases, these manuals contain references that are **NOT APPLICABLE** to **PREACTION-PAC™** assemblies. Care should be taken to be clear on what is applicable and what is not when referring to these manuals for installation, operation, inspection, and maintenance instructions.

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1.9 FM Approved Assemblies

Part Number Coding:

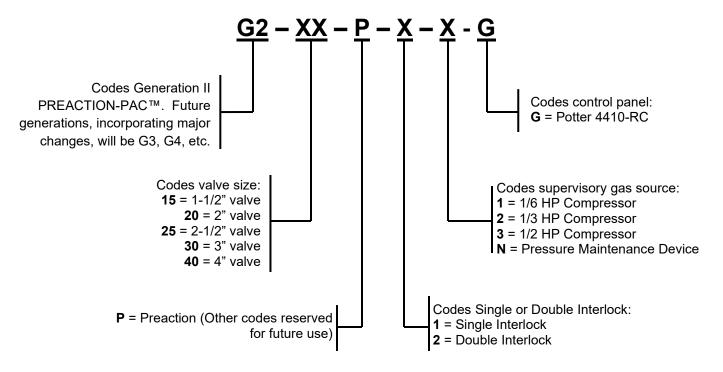

PREACTION-PAC™ assemblies with indicated part numbers are FM Approved. From time to time, custom-built units are supplied upon request. The components in these custom-built units retain their individual approvals, but these custom-built units are not FM Approved.

When the **PREACTION-PAC™** is installed where FM Global is an AHJ, follow the requirements of FM Approvals Class Numbers 1011, 1012, 1013 and FM Global Property Loss Prevention Data Sheet 5-40 dated 2007, especially:

- Alarm control panels for automatic release of preaction sprinkler systems are required to have 90 hours of secondary power followed by 10 minutes of release power and alarm operation.
- Include the installation of Class A (Style D or E) initiating device circuits. All FM Approved systems / installations must be configured as Class A for Deluge and Preaction Releasing Service.
- Do not include abort switches to abort the preaction sprinkler actuation function.


Table 1.9 – Approved PREACTION-PAC™ Assemblies with Potter 4410G3 Control Panel

Part Number	Valve Size, in.	Valve Type	Supervisory Gas Source	Control Panel
T dit (dilibo)	vaivo cizo, iri.	valvo Typo	Caparvicory Cae Course	Control 1 diloi
G215P11G	1-1/2"	Single Interlock	1/6 HP Compressor	Potter 4410G3
G215P1NG	1-1/2"	Single Interlock	Pressure Maintenance Device	Potter 4410G3
G215P21G	1-1/2"	Double Interlock	1/6 HP Compressor	Potter 4410G3
G215P2NG	1-1/2"	Double Interlock	Pressure Maintenance Device	Potter 4410G3
G220P11G	2"	Single Interlock	1/6 HP Compressor	Potter 4410G3
G220P1NG	2"	Single Interlock	Pressure Maintenance Device	Potter 4410G3
G220P21G	2"	Double Interlock	1/6 HP Compressor	Potter 4410G3
G220P2NG	2"	Double Interlock	Pressure Maintenance Device	Potter 4410G3
G225P11G	2-1/2"	Single Interlock	1/6 HP Compressor	Potter 4410G3
G225P12G	2-1/2"	Single Interlock	1/3 HP Compressor	Potter 4410G3
G225P1NG	2-1/2"	Single Interlock	Pressure Maintenance Device	Potter 4410G3
G225P21G	2-1/2"	Double Interlock	1/6 HP Compressor	Potter 4410G3
G225P22G	2-1/2"	Double Interlock	1/3 HP Compressor	Potter 4410G3
G225P2NG	2-1/2"	Double Interlock	Pressure Maintenance Device	Potter 4410G3
G230P11G	3"	Single Interlock	1/6 HP Compressor	Potter 4410G3
G230P12G	3"	Single Interlock	1/3 HP Compressor	Potter 4410G3
G230P13G	3"	Single Interlock	1/2 HP Compressor	Potter 4410G3
G230P1NG	3"	Single Interlock	Pressure Maintenance Device	Potter 4410G3
G230P21G	3"	Double Interlock	1/6 HP Compressor	Potter 4410G3
G230P22G	3"	Double Interlock	1/3 HP Compressor	Potter 4410G3
G230P23G	3"	Double Interlock	1/2 HP Compressor	Potter 4410G3
G230P2NG	3"	Double Interlock	Pressure Maintenance Device	Potter 4410G3
G240P11G	4"	Single Interlock	1/6 HP Compressor	Potter 4410G3
G240P12G	4"	Single Interlock	1/3 HP Compressor	Potter 4410G3
G240P13G	4"	Single Interlock	1/2 HP Compressor	Potter 4410G3
G240P1NG	4"	Single Interlock	Pressure Maintenance Device	Potter 4410G3
G240P21G	4"	Double Interlock	1/6 HP Compressor	Potter 4410G3
G240P22G	4"	Double Interlock	1/3 HP Compressor	Potter 4410G3
G240P23G	4"	Double Interlock	1/2 HP Compressor	Potter 4410G3
G240P2NG	4"	Double Interlock	Pressure Maintenance Device	Potter 4410G3

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1.10. Installation.

- **1.10.1.** Location. Locate the PREACTION-PAC[™] assembly as shown on the system shop drawings or design plans. The location should be dry, clean, and within the Approved temperature range of the assembly (+40 deg F to +110 deg F). Refer to Figure 4 for overall dimensions.
- 1.10.2. Unpacking, Placement & Leveling. Unpack the PREACTION-PAC™ as follows:
- **1.10.2.1.** Remove the outer carton and any other packing material surrounding the assembly.
- **1.10.2.2.** Open the lower enclosure door.
- **1.10.2.3.** Use a flat-bladed or Phillips screwdriver to remove the (4) bolts holding the assembly to the pallet. See Figure 5.
- **1.10.2.4.** Close the lower enclosure door. Remove the unit from the pallet, and place in the intended installation location.
- **1.10.2.5.** Level the unit:
- 1.10.2.5.1. Open the lower enclosure door.
- **1.10.2.5.2.** Using a flat-bladed screwdriver, adjust the (4) leveling feet from inside the enclosure until all feet are firmly in contact with the floor. See Figure 5.
- **1.10.2.5.3.** Using a spirit level, adjust the leveling feet until the assembly is level both front-to-back and side-to-side.

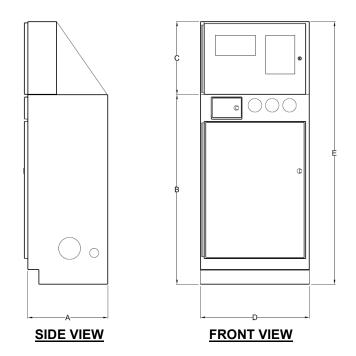

Dimension	Inches
Α	24.00
В	52.00
С	20.00
D	30.00
E	72.00

Figure 4 - Diagram - Overall Dimensions


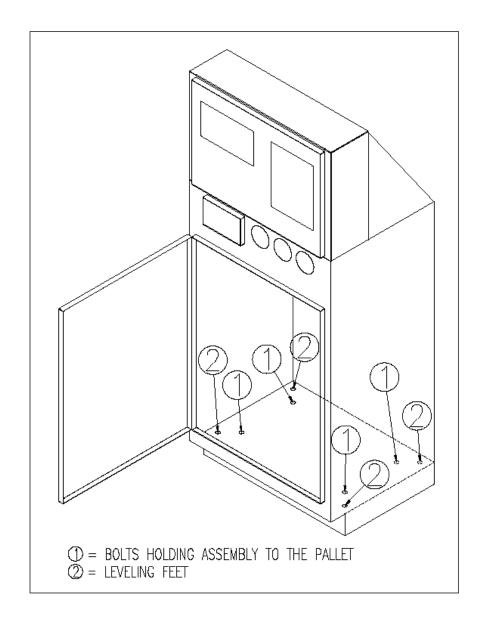


Figure 5 – Diagram - Location of Pallet Bolts and Leveling Feet

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1.10.3. Serial Number. The serial number of each assembly is located on a permanent metal nameplate, located behind the upper enclosure door above the compressor disconnect switch. The serial number is coded as follows:

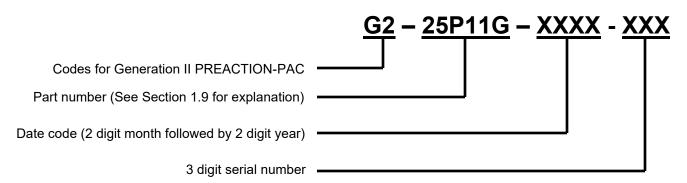

Note the serial number, date of installation, and date of commissioning on the front of this manual where indicated.

1.10.4. External Attachments.

- **1.10.4.1. Preaction Valve.** Use Section 2 Victaulic manual I-769N to guide the installation of inlet, outlet, and drain piping. See Figure 6 for details.
- **1.10.4.1.1. Inlet Piping.** Inlet piping may be attached to the **PREACTION-PAC™** in one of two locations:
- The standard connection is at the lower right center of the lower enclosure. The assembly is prepiped to accept inlet piping at this location. This location is labeled INLET. Remove the plastic protection cap from the inlet pipe, and use a field-supplied grooved coupling to make this connection.
- An optional connection at the lower left center of the lower enclosure. Remove the precut knockout from the lower left center of the lower enclosure. Remove the steel cap from the grooved coupling on the left side of the tee at the bottom of the enclosure. Attach the inlet piping to the left side of the tee using the grooved coupling. Remove the plastic protection cap from the lower right center inlet connection, and assemble the steel cap removed from the tee to the lower right connection using a field-supplied grooved coupling.




Failure to assemble the steel cap to the lower right center inlet will result in property damage due to water escaping from the lower right center inlet.

- **1.10.4.1.2. Outlet Piping.** Outlet piping is attached to the **PREACTION-PAC™** in one location; at the top center of the lower enclosure. This location is labeled OUTLET. Remove the plastic protection cap from the outlet pipe, and used a field-supplied grooved coupling to make this connection.
- **1.10.4.1.3. Drain Piping.** Drain piping is attached to the **PREACTION-PAC™** at a nipple located in the lower enclosure. The drain pipe may exit the enclosure on either the left or right side. Remove the precut knockout from the chosen side. Attach the drain pipe to the nipple with two field-supplied grooved couplings and a field-supplied grooved elbow.
- **1.10.4.1.4. External Supervisory Gas Inlet.** External supervisory gas inlet piping is attached to the **PREACTION-PAC™** in one location: the back center of the top surface of the lower enclosure. The connection point is a ½ NPT female bulkhead (through-wall) fitting. Make the field

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

connection by removing the red plastic plug and plumbing to the location with $\frac{1}{2}$ inch pipe, typically either steel or copper. PLEASE NOTE: This inlet option is only present on configurations with a pressure maintenance device.

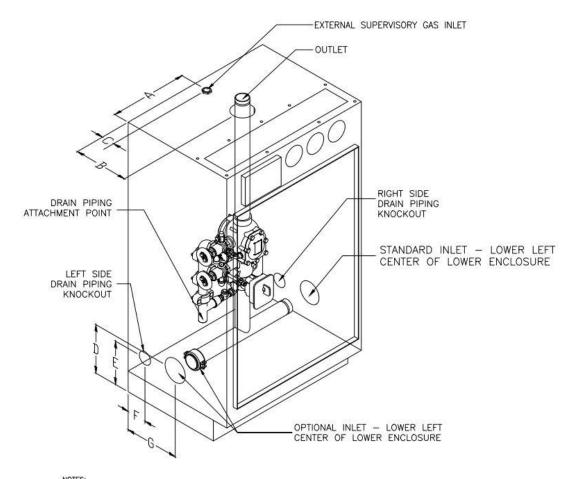

NOTES:
1. TRIM ELEMENTS AND UPPER ENCLOSURE REMOVED FOR CLARITY

Dimension	Inches
Α	15.00
В	12.50
С	9.86
D	8.86
E	5.75
F	12.50

Figure 6 – Diagram - Piping Attachment Details

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1.10.4.2. Terminal Strip and Control Panel. See Figure 7a and Figure 7b for information on connection to the terminal strip in the upper enclosure. Use Section 5 – Potter manual 5403751 to guide the installation of connections to the control panel. Terminals for 110VAC power accept qty. (1) 10 ga. max. conductor. NOTE: All conductors used for field wiring must comply with NFPA 70 – National Electrical Code, and control panel manufacturer's instructions (see Section 5). See Section 5 for information on power-limited conductor runs.



DO NOT drill or punch the upper enclosure to attach conduit. Use the knockouts supplied at the lower back of the upper enclosure. Failure to follow these instructions can result in damage to the control panel. **UNITED Fire Systems** will not be responsible for warranty adjustment of damaged control panels when these instructions are not followed.



This assembly contains static-sensitive components. ALWAYS ground yourself with a proper wrist strap before handling any electronic components or circuits. Failure to do so can lead to equipment damage from static electricity.

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

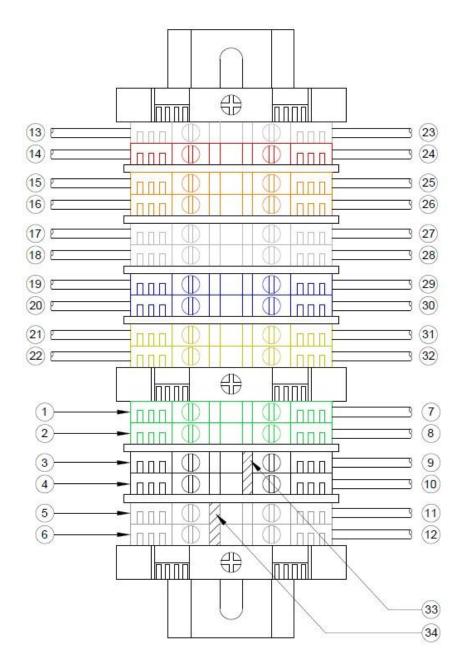


Figure 7a - Diagram -

Terminal Strip with Compressor Wiring Detail

		LEGEND	
		FIELD WIRING	
			COLOR OF TERMINAL BLOCK
1	DEDICATED 110 VAC GROUND FOR CONTROL PANEL (COMP TERMINAL)	RESSOR WILL ALSO BE GROUNDED THROUGH THIS	GREEN/YELLOW
2	DEDICATED 110 VAC GROUND FOR AIR COMPRESSOR (USE 0	ONLY IF REQUIRED BY AHJ)	GREEN/YELLOW
	WITH JUMPER 33 IN PLACE	WITH JUMPER 33 REMOVED	
3	110 VAC NEUTRAL FOR CONTROL PANEL & COMPRESSOR	110 VAC NEUTRAL FOR CONTROL PANEL ONLY	WHITE
4	DO NOT USE	110 VAC NEUTRAL FOR COMPRESSOR ONLY	WHITE
	WITH JUMPER 34 IN PLACE	WITH JUMPER 34 REMOVED	
5	110 VAC HOT FOR CONTROL PANEL & COMPRESSOR	110 VAC HOT FOR CONTROL PANEL ONLY	BLACK
6	DO NOT USE	110 VAC HOT FOR COMPRESSOR ONLY	BLACK
	!	FACTORY WIRING	
7	110 VAC GROUND TO CONTROL PANEL		GREEN/YELLOW
8	110 VAC GROUND TO AIR COMPRESSOR		GREEN/YELLOW
9	110 VAC NEUTRALTO CONTROL PANEL		WHITE
10	110 VAC NEUTRAL TO AIR COMPRESSOR		WHITE
11	110 VAC HOT TO CONTROL PANEL		BLACK
2	110 VAC HOT TO AIR COMPRESSOR		BLACK
L3	PREACTION SOLENOID WIRING (-) FROM LOWER ENCLOSUR	E	GRAY
L4	PREACTION SOLENOID WIRING (+) FROM LOWER ENCLOSUR	RE	RED
L5	HIGH AIR SIGNAL SWITCH WIRING (NO) FROM LOWER ENCL	OSURE	ORANGE
L6	HIGH AIR SIGNAL SWITCH WIRING (COM) FROM LOWER ENG	CLOSURE	ORANGE
L7	LOW AIR SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLO	OSURE	GRAY
18	LOW AIR SIGNAL SWITCH WIRING (COM) FROM LOWER ENC	CLOSURE	GRAY
19	WATERFLOW SIGNAL SWITCH WIRING (NO) FROM LOWER E	NCLOSURE	BLUE
20	WATERFLOW SIGNAL SWITCH WIRING (COM) FROM LOWER	ENCLOSURE	BLUE
21	TAMPER SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLO	OSURE	YELLOW
22	TAMPER SIGNAL SWITCH WIRING (COM) FROM LOWER ENC	CLOSURE	YELLOW
23	PREACTION SOLENOID WIRING (-) TO CONTROL PANEL		GRAY
24	PREACTION SOLENOID WIRING (+) TO CONTROL PANEL		RED
25	HIGH AIR SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL	-	ORANGE
26	HIGH AIR SIGNAL SWITCH WIRING (COM) TO CONTROL PAN	EL	ORANGE
27	LOW AIR SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL		GRAY
28	LOW AIR SIGNAL SWITCH WIRING (COM) TO CONTROL PANI	EL	GRAY
29	WATERFLOW SIGNAL SWITCH WIRING (NO) TO CONTROL PA	ANEL	BLUE
30	WATERFLOW SIGNAL SWITCH WIRING (COM) TO CONTROL	PANEL	BLUE
31	TAMPER SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL		YELLOW
32	TAMPER SIGNAL SWITCH WIRING (COM) TO CONTROL PANE	EL	YELLOW
33	JUMPER - CONNECTS CONTROL PANEL & COMPRESSOR 110	VAC NEUTRAL CONDUCTORS	REMOVE BOTH JUMPERS
34	JUMPER - CONNECTS CONTROL PANEL & COMPRESSOR 110	VAC HOT CONDUCTORS	TO SEPARATE CIRCUITS

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

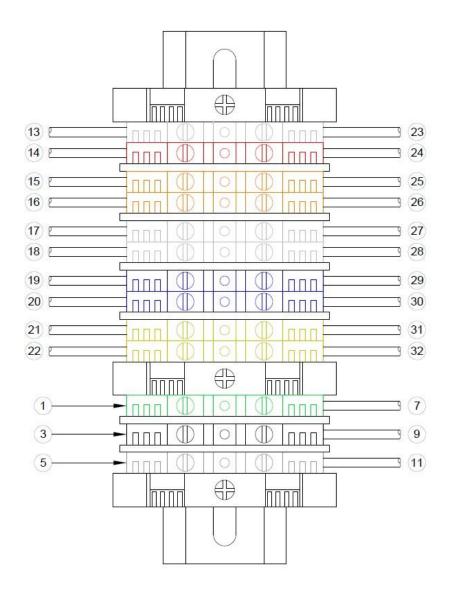


Figure 7b - Diagram -

Terminal Strip with Pressure Maintenance Device Wiring Detail

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

	LEGEND	
	FIELD WIRING	
		COLOR OF TERMINAL BLOCK
1	110 VAC GROUND FOR CONTROL PANEL	GREEN/YELLOW
3	110 VAC NEUTRAL FOR CONTROL PANEL	WHITE
5	110 VAC HOT FOR CONTROL PANEL	BLACK
	FACTORY WIRING	
7	110 VAC GROUND TO CONTROL PANEL	GREEN/YELLOW
9	110 VAC NEUTRALTO CONTROL PANEL	WHITE
11	110 VAC HOT TO CONTROL PANEL	BLACK
13	PREACTION SOLENOID WIRING (-) FROM LOWER ENCLOSURE	GRAY
14	PREACTION SOLENOID WIRING (+) FROM LOWER ENCLOSURE	RED
15	HIGH AIR SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLOSURE	ORANGE
16	HIGH AIR SIGNAL SWITCH WIRING (COM) FROM LOWER ENCLOSURE	ORANGE
17	LOW AIR SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLOSURE	GRAY
18	LOW AIR SIGNAL SWITCH WIRING (COM) FROM LOWER ENCLOSURE	GRAY
19	WATERFLOW SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLOSURE	BLUE
20	WATERFLOW SIGNAL SWITCH WIRING (COM) FROM LOWER ENCLOSURE	BLUE
21	TAMPER SIGNAL SWITCH WIRING (NO) FROM LOWER ENCLOSURE	YELLOW
22	TAMPER SIGNAL SWITCH WIRING (COM) FROM LOWER ENCLOSURE	YELLOW
23	PREACTION SOLENOID WIRING (-) TO CONTROL PANEL	GRAY
24	PREACTION SOLENOID WIRING (+) TO CONTROL PANEL	RED
25	HIGH AIR SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL	ORANGE
26	HIGH AIR SIGNAL SWITCH WIRING (COM) TO CONTROL PANEL	ORANGE
27	LOW AIR SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL	GRAY
28	LOW AIR SIGNAL SWITCH WIRING (COM) TO CONTROL PANEL	GRAY
29	WATERFLOW SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL	BLUE
30	WATERFLOW SIGNAL SWITCH WIRING (COM) TO CONTROL PANEL	BLUE
31	TAMPER SIGNAL SWITCH WIRING (NO) TO CONTROL PANEL	YELLOW
32	TAMPER SIGNAL SWITCH WIRING (COM) TO CONTROL PANEL	YELLOW

Legend for Figure 7b

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

1.10.4.2.1. Power. 110VAC, 3-wire, single-phase power is attached to the terminal strip in the upper enclosure. See Figure 7. Terminals for 110VAC power accept qty. (1) 10 ga. max. conductor. Current draw: With 1/6 HP compressor = 8.0 amps; with 1/3 HP compressor = 10.4 amps; with 1/2 HP compressor = 13.0 amps; with pressure maintenance device = 3.0 amps.



Only qualified electricians should connect incoming power to the assembly. Failure to follow this instruction could result in death or serious personal injury.

- A. Turn off circuit breaker at the main power distribution panel.
- B. Connect service ground conductor to terminal marked GROUND.
- C. Connect primary neutral conductor to terminal marked NEUTRAL.
- D. Connect primary hot conductor to terminal marked HOT.
- **1.10.4.2.2. Backup Batteries.** Calculate backup battery requirements, and connect backup batteries, per Section 5 Potter manual 5403751. The upper enclosure is capable of holding batteries up to 26 A-h. If larger batteries are needed, use an external battery enclosure per Section 5 Potter manual 5403751. The maximum battery capacity for this control panel is 55 A-h.
- 1.10.4.2.3. Fire Detectors (Initiating Devices). Fire detectors (initiating devices), located in the area protected by the sprinklers connected to the PREACTION-PAC™, are necessary to provide the signal to open the preaction valve. Refer to NFPA 72 for information on the number, type, and spacing of fire detectors. Install detectors, wiring, and panel connections per Section 5 − Potter manual 5403751. All FM Approved systems / installations must be configured as Class A for Deluge and Preaction Releasing Service. The Potter Class A Module is factory-installed on the control panel.
- 1.10.4.2.4. Audible / Visual Appliances (Indicating Devices). Audible / visual appliances (indicating devices), located in and around the area protected by the sprinklers connected to the PREACTION-PAC™, are necessary to warn occupants that a fire has been detected. Refer to NFPA 72 for information on the number, type, and spacing of audible / visual appliances. Install audible / visual devices, wiring, and panel connections per Section 5 Potter manual 5403751.
- **1.10.4.2.5. Building Fire Alarm Systems.** In buildings with fire alarm systems separate from the **PREACTION-PAC™** detection system, most national and local codes and authorities having jurisdiction require the **PREACTION-PAC™** to provide signals to the building fire alarm system. The Potter control panel installed in the **PREACTION-PAC™** contains dry contacts capable of providing the necessary signals. Install audible / visual devices, wiring, and panel connections per Section 5 Potter manual 5403751.
- **1.10.4.2.6. Other Connections.** From time to time, additional signals from the **PREACTION-PAC™** control panel may be required. Such signals can be associated with building management systems, equipment shutdown, or security notification. Additional dry contacts may be needed to satisfy all of these requirements.
- **1.10.4.3. Compressor.** Where applicable. See Figure 7a. 110VAC, 3-wire, single-phase power is attached to the terminal strip in the upper enclosure. The compressor power is factory-wired to the terminal strip in the upper enclosure. In the default configuration, the same 110VAC source used for the control panel serves for the compressor. If the local authority having jurisdiction requires separate power sources for the control panel and the compressor, jumpers can be removed from the terminal strip. The compressor pressure outlet is factory-attached to the system piping within the lower enclosure.

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

- **1.10.5. Prior To Placing In Service.** Before placing the **PREACTION-PAC™** in service, perform the following steps. Ensure that all discrepancies are corrected before proceeding to the next step.
- **1.10.5.1.** Ensure the entire system is installed per the latest revision of all applicable shop drawings.
- **1.10.5.2.** Ensure all testing has been performed on the sprinkler piping per the requirements of the authority having jurisdiction and NFPA 13.
- **1.10.5.3.** Use Section 5 Potter manual 5403751 to perform all preliminary tests on the control panel, field wiring, and field devices.
- **1.10.5.4.** Use Section 2 Victaulic manual I-769N to perform all preliminary tests on the preaction valve, trim, and sprinkler piping.
- **1.10.5.5.** Perform all tests required to be witnessed by the authority having jurisdiction. Obtain AHJ approval of the installation.

1.10.6. Placing In Service.

- **1.10.6.1.** Verify that the control panel is indicating POWER ON, with no alarm or trouble indicators illuminated, and no error messages on the display.
- **1.10.6.2.** Verify that the water supply is on.
- **1.10.6.3.** Using Section 2 Victaulic manual I-769N, verify that all valves are in the proper position for inservice status. Verify that the three pressure gauges on the front of the lower enclosure are indicating expected values within expected limits.
- **1.10.6.4.** Ensure that the owner of the system has received adequate introductory training.
- **1.10.6.5.** Turn over this manual and the enclosure door keys to the owner. The manual may be stored in the pocket on the inside of the lower enclosure door.

1.11. Operation.

1.11.1. Automatic. Fully automatic operation of the system will be conducted by the control panel. Power from 110VAC and / or batteries is required for the control panel to function in this way. No manual intervention is required for the control panel to perform its functions. Manual intervention to acknowledge and silence signals may be performed. Refer to Section 5 – Potter manual 5403751 for information on signals.



IMPORTANT

Fusing of a sprinkler head by heat is necessary for water to be discharged onto a fire, even after operation of automatic fire detectors.

1.11.2. Manual. Manual operation of the preaction valve is accomplished with the manual release valve. Open the door marked IN CASE OF FIRE OPEN DOOR AND PULL LEVER. No key is needed to open this door. Pull the lever. No power is needed to open the preaction valve in this manner. The door may not be closed until the lever is restored to its normal position.

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025



IMPORTANT

Fusing of a sprinkler head by heat is necessary for water to be discharged onto a fire, even after operation of the manual station valve.

- **1.11.3. Restoring To Service.** After automatic or manual system operation, follow instructions in Section 2 Victaulic manual I-769N and Section 5 Potter manual 5403751 to restore the individual parts of the **PREACTION-PAC™** to service.
- 1.12. Inspection, Testing, and Maintenance. Regular inspection, testing and maintenance of the PREACTION-PAC™ assembly is essential to the assembly's continued proper operation. Follow all instructions in the documents described in this section. Pay particular attention to the required minimum interval for each item of inspection, testing, and maintenance. The owner of the system (or their designated representative) is responsible for the overall condition of the system, and ensuring that all inspection, testing, and maintenance items are conducted as recommended.



IMPORTANT

The UNITED Fire Systems PREACTION-PAC™ sprinkler valve assembly is a vital part of the fire protection of any facility where these units are installed. Life safety and property protection depends on continuing proper operation of the assembly. The owner of the PREACTION-PAC™ is responsible for the condition of the assembly and its continued proper operation. UNITED Fire Systems strongly recommends that all owners of PREACTION-PAC™ engage the services of qualified, trained fire protection professionals to inspect, test, maintain, and repair the assembly.

- 1.12.1. Inspection. Inspection involves carrying out a set of procedures to discover and note any and all discrepancies that could render the system impaired, inoperative, or ineffective. The result of an inspection is a comprehensive list of these discrepancies. Inspection does not specifically include maintenance or repair; however, maintenance and repair can be and usually is conducted at the time of inspection.
- **1.12.2. Testing.** Testing involves carrying out procedures to discover if tested components function as intended. Testing is an integral part of performing inspection. Testing is also done after the performance of some maintenance procedures.
- **1.12.3. Maintenance.** Maintenance involves carrying out procedures to ensure that maintained components continue to function as intended. Maintenance is usually preventive in nature. Maintenance can be conducted during inspection.
- **1.12.4. Repair.** Repair involves carrying out procedures to correct the deficiencies found during inspection, or as a result of other events such as system actuation or control panel trouble / alarm signals.

- 1.12.5. Documents Relevant To Inspection, Testing, Maintenance, and Repair.
- 1.12.5.1. Victaulic Manual I-769N.
- **1.12.5.2.** General Air Products Manual OILLESSINST.
- 1.12.5.3. United Fire Systems Instruction Sheet UFS-710.
- 1.12.5.4. Potter Manual 5403751.
- **1.12.5.5.** National Fire Protection Association No. 25, "Standard for the Inspection, Testing, and Maintenance of Water-Based Fire Protection Systems."
- 1.12.5.6. National Fire Protection Association No. 72, "National Fire Alarm Code®"

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

SECTION 2

Victaulic Manual I-769N

Firelock NXT Preaction Valve

Victaulic® Series 769N FireLock NXT™ Actuated Valve with Preaction Trim

Non-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator

Non-Interlocked Pneumatic/Electric Release with Series 776 Low-Pressure Actuator and 24 VDC Normally-Closed Solenoid Valve


Single-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator

Single-Interlocked Electric Release with 24 VDC Normally-Closed Solenoid Valve

Double-Interlocked Electric (Electric-Pneumatic/Electric) Release with 24 VDC Normally-Closed Solenoid Valve

Electric Release with 24 VDC Normally-Closed Solenoid Valve and Redundant Solenoid Valve (LPCB)

KEEP THESE INSTRUCTIONS WITH THE INSTALLED VALVE FOR FUTURE REFERENCE

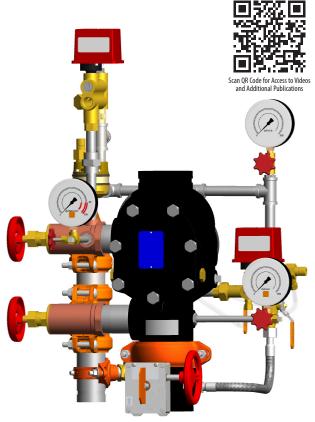

Single-Interlocked Pneumatic Release Trim Shown

WARNING



- Read and understand all instructions before attempting to install any Victaulic products.
- Always verify that the piping system has been completely depressurized and drained immediately prior to installation, removal, adjustment, or maintenance of any Victaulic products.
- Wear safety glasses, hardhat, and foot protection.

Failure to follow these instructions could result in death or serious personal injury and property damage.

- Series 769N FireLock NXT™ Actuated Valves with Preaction Trim shall be used only in fire protection systems that are designed and
 installed in accordance with current, applicable National Fire Protection Association (NFPA 13, 13D, 13R, etc.) standards, or equivalent
 standards, and in accordance with applicable building and fire codes. These standards and codes contain important information regarding
 protection of systems from freezing temperatures, corrosion, mechanical damage, etc.
- These installation instructions are intended for an experienced, trained installer. The installer shall understand the use of this product and why it was specified for the particular application.
- The installer shall understand common industry safety standards and potential consequences of improper product installation. Failure to follow installation requirements and local and national codes and standards could compromise system integrity or cause system failure, resulting in death or serious personal injury and property damage.



SERIES 769N FIRELOCK NXT™ ACTUATED VALVE WITH PREACTION TRIM

THIS QUICK REFERENCE SECTION IS FOR PLACING THE SYSTEM IN SERVICE AND FOR PERFORMING WATER FLOW ALARM TESTS.

AN EXPERIENCED, TRAINED INSTALLER SHALL READ AND UNDERSTAND THE FULL CONTENTS OF THIS MANUAL AND ALL WARNING MESSAGES BEFORE ATTEMPTING TO PLACE THE SYSTEM INTO SERVICE.

INITIAL SYSTEM SETUP

NOTICE

Before proceeding with initial system setup, verify that the following steps have been completed:

- . Verify that the system air feed piping is connected to the location indicated on the trim drawing.
- FOR TRIM EQUIPPED WITH A SOLENOID VALVE: Verify that an approved control panel is installed for proper system operation.

Step 1:

Confirm that all system drains are shut and that the system is free of leaks.

Step 2:

Confirm that the system has been depressurized. The gauges shall indicate zero pressure.

Step 2a: If a Series 746-LPA Dry Accelerator is installed, confirm that the isolation ball valve is closed.

Step 2b: If a Series 746-LPA Dry Accelerator is installed, open the 1/4-turn vent ball valve.

Step 3:

Confirm that the alarm test ball valve is closed.

Step 4:

For single-interlocked electric and double-interlocked electric (electric-pneumatic/electric) release trim, open the charge line ball valve. Allow water to flow through the auto drain tube, then proceed to step E5a. For trim equipped with a Series 776 Low-Pressure Actuator, proceed to step P5a.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Step P5a: Charge the system with air by turning on the compressor or by opening the fast-fill ball valve on the AMTA. Charge the system to 13 psi/90 kPa/0.9 Bar minimum.

Step P5b: When the system reaches approximately 10 psi/69 kPa/0.7 Bar, and no additional moisture is being released from the Auto Vent, pull up on the Auto Vent Sleeve of the Series 776 Low-Pressure Actuator. **NOTE:** The Auto Vent Screw shall seal and remain in the set ("UP") position

Step P5c: When system air pressure is established, close the fast-fill ball valve on the AMTA.

Step P5d: Open the slow-fill ball valve on the AMTA. NOTE: Failure to leave the slow-fill ball valve open may allow system pressure to drop, resulting in valve operation in the event of a system leak.

Step P5e: Open the charge line ball valve. Allow water to flow through the auto drain tube.

Step P5f: Pull up on the auto drain sleeve.

FOR TRIM EQUIPPED WITH A SOLENOID VALVE:

Step E5a: Confirm that the solenoid valve is closed (de-energized).

Step E5b: Confirm that water is not flowing through the solenoid valve.

Step 6:

Open the manual pull station valve to bleed off any air that is present, then close the manual pull station valve. Verify that the charge line pressure is equal to the supply pressure, and verify that the auto drain is set by pulling up on the auto drain sleeve.

Step 6a: If a Series 746-LPA Dry Accelerator is installed, close the ¼-turn vent ball valve.

Step 6b: If a Series 746-LPA Dry Accelerator is installed, open the isolation ball valve. This will set the accelerator.

Step 7:

Open the water supply main drain valve (lower drain valve).

Step 8:

Open the water supply main control valve slowly until water flows steadily from the open water supply main drain valve (lower drain valve).

Step 9

Close the water supply main drain valve (lower drain valve) when a steady flow of water occurs.

Step 10:

Open the water supply main control valve fully.


Step 11:

Confirm that all valves are in their normal operating positions (refer to the table below).

NORMAL OPERATING POSITIONS FOR VALVES

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed

Valve	Normal Operating Position
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
¼-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

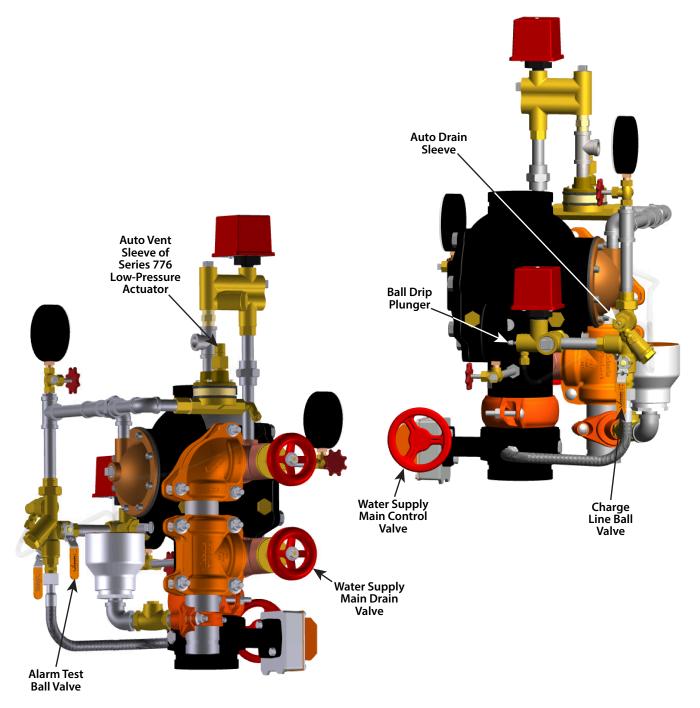

Single-Interlocked Pneumatic Release Trim Shown

REQUIRED WATER FLOW ALARM TEST

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform water flow alarm tests. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- 1. Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the water flow alarm test will be performed.
- 2. Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- 3. Close the water supply main drain valve (lower drain valve).
- 4. Open the alarm test ball valve. Confirm that mechanical and electrical alarms are activated and that remote monitoring stations, if provided, receive an alarm signal.
- 5. Close the alarm test ball valve after verifying proper operation of all alarms.
- **6.** Push in the ball drip plunger on the alarm manifold assembly to verify that there is no pressure in the alarm line.
- 7. Verify that all alarms stopped sounding, that the alarm line drained properly, and that remote station alarms reset properly.
- 8. Confirm that the ball drip on the alarm manifold assembly is not leaking water or air.
- **9.** Provide test results to the authority having jurisdiction, if required.

TABLE OF CONTENTO

IABLE OF CONTENTS	
Hazard Identification	
Installer Safety Information	
Important Installation Information	
Hydrostatic Testing	
Trim Dimensions	
Trim Components - Exploded View Drawing -	
Non-Interlocked Pneumatic Release Preaction Trim with	
Series 776 Low-Pressure Actuator	;
Trim Components - Exploded View Drawing -	
Non-Interlocked Pneumatic/Electric Release Preaction Trim	
with Series 776 Low-Pressure Actuator and	
24 VDC Normally-Closed Solenoid Valve	,
Trim Components - Exploded View Drawing -	
Single-Interlocked Pneumatic Release Preaction Trim with Series 776 Low-Pressure Actuator	,
Trim Components - Exploded View Drawing -)
Single-Interlocked Electric and Double-Interlocked Electric	
(Electric-Pneumatic/Electric) Release Preaction Trim with	
24 VDC Normally-Closed Solenoid Valve)
Trim Components - Exploded View Drawing -	
Electric Release Preaction Trim with 24 VDC Normally-Closed	
Solenoid Valve and Redundant Solenoid Valve 🗝)
Internal Valve Components - Section View and	
Exploded View Drawings	
Air Supply Requirements	
Base- or Riser-Mounted Air Compressors	
Compressor Requirements and Settings for a Series 769N	
FireLock NXT Actuated Valve Installed with a Series 746-LPA	
Dry Accelerator)
Settings for Air Supervisory Pressure Switches and Alarm	
Pressure Switches)
SECTION I	
Initial System Setup	ļ
SECTION II	
SECTION II Resetting the System18 SECTION III	3
SECTION II Resetting the System	3
SECTION II Resetting the System	3
SECTION II Resetting the System 18 SECTION III 20 Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20	3
Resetting the System. 18 SECTION III Daily/Weekly Inspection. 20 Monthly Inspection. 20 Quarterly Inspection. 20 Annual Inspection. 20	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24	3)))))))] 3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25	3 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26	33 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25	33 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 27 SECTION V	33
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 27	33
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 27 SECTION V Required Internal Inspection 30 SECTION VI	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test Period 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 27 SECTION V Required Internal Inspection 30	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 27 SECTION V Required Internal Inspection 30 SECTION VI	3
SECTION II Resetting the System 18 SECTION III Daily/Weekly Inspection 20 Monthly Inspection 20 Quarterly Inspection 20 Annual Inspection 20 3-Year Inspection 20 5-Year Inspection 20 SECTION IV Required Main Drain Test 22 Required Water Flow Alarm Test 23 Required Water Level and Low-Air Alarm Tests 24 Low Water Alarm Test 25 Required Partial Operational Trip Test 26 Required Full Operational Trip Test 26 RECTION V Required Internal Inspection 30 SECTION VI Removing and Replacing the Clapper Seal 32	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3
Resetting the System	33 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)
Resetting the System	33
Resetting the System	33 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)
Resetting the System	33
Resetting the System	33
Resetting the System	33
Resetting the System	33 33 33 33 33 33 33 33 33 33 33 33 33

HAZARD IDENTIFICATION



Definitions for identifying the various hazard levels are provided below. When you see this symbol, be alert to the possibility of personal injury. Carefully read and fully understand the message that follows.

A WARNING

The use of the word "WARNING" identifies the presence of hazards or unsafe practices that could result in death or serious personal injury and property damage if instructions are not followed.

A CAUTION

• The use of the word "CAUTION" identifies possible hazards or unsafe practices that could result in personal injury and product or property damage if instructions are not followed.

NOTICE

• The use of the word "NOTICE" identifies special instructions that are important but not related to hazards.

INSTALLER SAFETY INFORMATION





- . An experienced, trained installer shall install this product in accordance with all instructions. These instructions contain important information.
- . Always verify that the piping system has been completely depressurized and drained immediately prior to installation, removal, adjustment, or maintenance of any Victaulic products.

Failure to follow these instructions can cause product failure, resulting in death or serious personal injury and property damage.

- Read and understand all instructions and refer to the trim diagrams before installing, maintaining, or testing this Victaulic Series 769N FireLock NXT Actuated Valve with Preaction Trim. For proper operation and approval, the Series 769N FireLock NXT Actuated Valve and accessories shall be installed in accordance with the specific trim diagrams included with the shipment.
- 2. Use only recommended accessories. Accessories and equipment that are not approved for use with this actuated valve may cause improper system operation and property damage.
- Wear safety glasses, hardhat, foot protection, and hearing protection. Wear hearing protection if you are exposed to long periods of noisy jobsite operations.
- Prevent back injury. Valve assemblies require more than one person (or mechanical lifting equipment) to position and install the assembly. Always practice proper lifting techniques.
- Keep work areas clean. Keep the work area clean and well lit, and allow enough space to accommodate proper installation of the valve, trim, and accessories.
- Avoid pinch points. Due to the weight of the valve body, use caution around pinch points and spring-loaded components (i.e. clapper assembly) in order to prevent bodily injury.

I-769N.Preaction_1

IMPORTANT INSTALLATION INFORMATION

- Confirm that adequate space is available for valve, trim, and accessories. Refer to page 5 for dimensional information.
- Flush water supply piping. Before installing the Series 769N FireLock NXT Actuated Valve, flush the water supply piping thoroughly to remove all foreign material.
- 3. Protect system from freezing temperatures. Series 769N FireLock NXT Actuated Valves and supply piping SHALL NOT be located in an area where the valve can be exposed to freezing temperatures or mechanical damage.
- 4. Confirm material compatibility. It is the system designer's responsibility to confirm material compatibility of the Series 769N FireLock NXT Actuated Valve, trim, and associated accessories when a corrosive environment or contaminated water is present.
- 5. Supply air or nitrogen to the system. Air or nitrogen supply to the piping system shall be clean, dry, and oil-free and shall be regulated, restricted, and uninterrupted. Refer to the "Air Supply Requirements" section. Observe the system air pressure over a 24-hour period to confirm system integrity. If there is degradation in system air pressure, find and correct all leaks. NOTE: NFPA requires less than 1½-psi/10-kPa/0.1-Bar leakage in 24 hours.
- 6. Supply water to the system. Supply pressure to the charge line by providing an uninterrupted source of water from upstream of the main control valve. When an uninterrupted water flow alarm is required, Victaulic recommends the use of a low-pressure alarm installed on the charge line downstream of the priming manifold assembly.
- 7. Pitch the water supply piping. Per NFPA 13 requirements, piping shall be pitched so that systems can drain properly. For areas that are subject to high levels of condensation, or where piping is not properly pitched, an optional Series 75D Water Column Device kit is available to assist in automatically draining water out of the riser.
- 8. IF THE INLET WATER SUPPLY IS INTERRUPTED FOR ANY REASON, AND SYSTEM SUPPLY PRESSURE TO THE VALVE DECREASES, VERIFY THAT THE CHARGE LINE IS FULLY PRESSURIZED BEFORE PLACING THE SYSTEM BACK IN SERVICE.

HYDROSTATIC TESTING

WARNING



• If air testing is required, DO NOT exceed 50 psi/345 kPa/3.4 Bar air pressure.

Failure to follow this instruction could result in death or serious personal injury and property damage.

Maximum working pressure of valve:

300 psi/2065 kPa/20.7 Bar

Valve is factory tested to:

• 600 psi/4135 kPa/4.1 Bar (all sizes)

The valve can be hydrostatically tested against the clapper at:

 200 psi/1380 kPa/13.8 Bar or 50 psi/345 kPa/3.4 Bar above the normal water supply pressure (2-hour limited time period) for acceptance by the authority having jurisdiction

RECEIVING THE SHIPMENT

NOTICE

- Drawings and/or pictures in this manual may be exaggerated for clarity.
- This product and this installation, maintenance, and testing manual contain trademarks, copyrights, and/or patented features that are the exclusive property of Victaulic.

The components shaded in orange on the following two pages are shipped separate from the valve and shall be installed in accordance with the trim drawing provided. **NOTE:** The Vic-Quick Riser (VQR) assembly is shown.


- Verify that all components are included in the shipment and that all necessary tools are available for installation. Verify that the provided trim drawing matches the system's requirements.
- 2. Remove all plastic caps and foam spacers from the valve.

ACAUTION

- Verify that all protective shipping items are removed from the interior and exterior of the valve body before installation.
- Verify that no foreign material gets into the valve body, pipe nipples, or valve openings.
- If using any material other than PTFE thread sealant tape, use extra caution so that material does not enter the trim.

Failure to follow these instructions could cause improper valve operation, resulting in personal injury and property damage.

- Install the valve assembly into the riser with two Victaulic rigid couplings. Refer to the instructions, supplied with the coupling, for complete installation requirements. SERIES 769N FIRELOCK NXT ACTUATED VALVES SHALL BE INSTALLED ONLY IN THE VERTICAL POSITION WITH THE ARROW ON THE BODY POINTING UPWARD.
- 4. For components shipped separate from the valve, apply a small amount of pipe joint compound or PTFE thread sealant tape to the external threads of all threaded connections. DO NOT get any tape, compound, or other foreign material into the openings of the threaded connections.

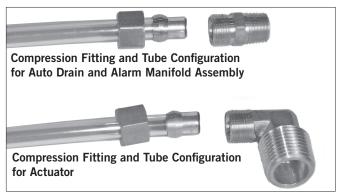


5. Compression fittings and tubes are provided for connection from the outlet of the auto drain, alarm manifold assembly, and actuator to the drip cup or drain. Install the compression fittings in accordance with the trim drawing provided. NEVER INSERT A PLUG INTO THE OUTLET OF THE AUTO DRAIN, ALARM MANIFOLD ASSEMBLY, OR ACTUATOR IN PLACE OF THE COMPRESSION FITTING/TUBE.


REV_B

The components shaded in orange below are shipped separate from the valve and shall be installed in accordance with the trim drawing provided. **NOTE:** The Vic-Quick Riser (VQR) assembly is shown.

Non-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator Non-Interlocked Pneumatic/Electric Release with Series 776 Low-Pressure Actuator and 24 VDC Normally-Closed Solenoid Valve

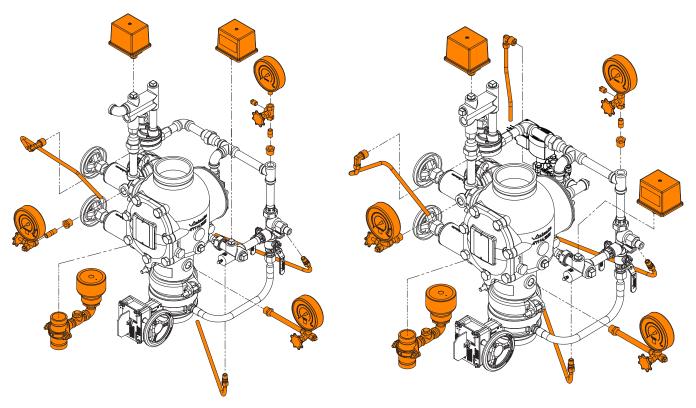


Single-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator

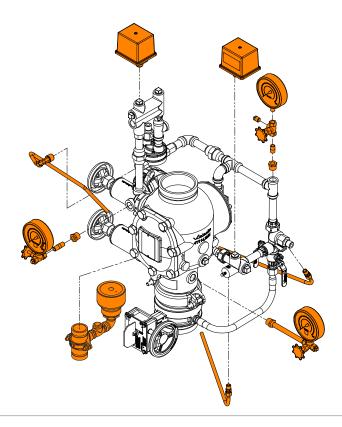


I-769N.Preaction_3 REV_B

The components shaded in orange below are shipped separate from the valve and shall be installed in accordance with the trim drawing provided. **NOTE:** The Vic-Quick Riser (VQR) assembly is shown.

Single-Interlocked Electric and Double-Interlocked Electric (Electric-Pneumatic/Electric) Release with 24 VDC Normally-Closed Solenoid Valve

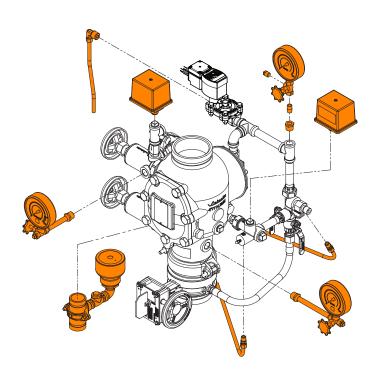


Electric Release with 24 VDC Normally-Closed Solenoid Valve and Redundant Solenoid Valve

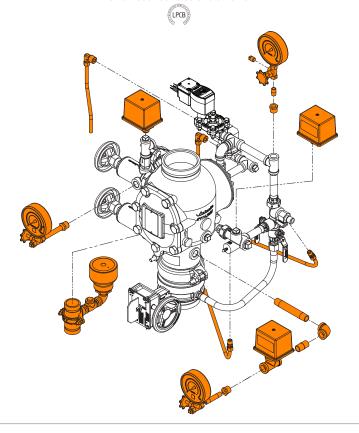

TRIM DIMENSIONS

A 4-INCH/114.3-MM VALVE WITH SINGLE-INTERLOCKED PNEUMATIC RELEASE PREACTION TRIM IS SHOWN BELOW $1\frac{1}{2}-2\text{-INCH}/48.3-60.3\text{-MM}$ CONFIGURATIONS CONTAIN $\frac{3}{4}$ -INCH/19-MM DRAIN VALVES $2\frac{1}{2}-3\text{-INCH}/73.0-88.9\text{-MM}$ CONFIGURATIONS CONTAIN $1\frac{1}{4}\text{-INCH}/31\text{-MM}$ DRAIN VALVES 4-8-INCH/114.3-219.1-MM CONFIGURATIONS CONTAIN 2-INCH/50-MM DRAIN VALVES

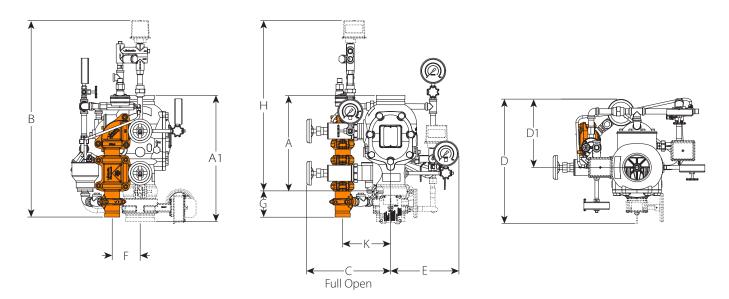

NOTES:

The drawings shown above reflect the single-interlocked pneumatic release trim with Series 776 Low-Pressure Actuator. In addition, these dimensions can be applied to all other trim configurations featured within this manual.

The "A" dimension is the actual takeout dimension of the valve body.

The "A1" dimension is the actual takeout dimension of the valve body with water supply main control valve.

For systems with the optional Series 746-LPA Dry Accelerator, add 16.50 inches/419 mm to the "B" dimension to account for the additional height.

The "D" and "D1" dimensions are not fixed measurements. The drip cup can be rotated to provide more clearance at the back of the trim.


Components shown as dotted lines denote optional equipment.

The recommended drain connection kit (shaded in orange) is for reference and takeout dimensions. This drain connection comes standard when the VQR assembly is ordered.

Nominal Size	Differsions - fricties/filli							Approx Weight Each lbs/kg					
inches or mm	А	A1	В	С	D	D1	E	F	G	н	K	Without Trim	With Trim
1 ½	9.00	16.37	32.75	9.25	15.00	10.00	9.25	3.25	10.25	23.00	6.00	16.7	43.0
	228.60	415.80	832	235	381	254	235	83	260	584	152	7.6	19.5
2	9.00	13.83	32.75	9.25	16.25	10.00	9.25	3.25	10.25	23.00	6.00	17.0	43.0
	228.60	351.28	832	235	413	254	235	83	260	584	152	7.7	19.5
2 1/2	12.61	16.51	31.00	11.25	17.75	10.25	9.50	4.00	6.25	25.25	6.50	41.0	65.0
	320.29	419.35	787	286	451	260	241	102	159	641	165	18.7	29.5
76.1 mm	12.61	16.51	31.00	11.25	17.75	10.25	9.50	4.00	6.25	25.25	6.50	41.0	65.0
	320.29	419.35	787	286	451	260	241	102	159	641	165	18.7	29.5
3	12.61	16.51	31.00	11.25	17.75	10.25	9.50	4.00	6.25	25.25	6.50	41.0	65.0
	320.29	419.35	787	286	451	260	241	102	159	641	165	18.7	29.5
4	15.03	19.85	31.25	13.50	20.00	11.25	11.00	4.75	4.50	27.25	8.00	59.0	95.0
	381.76	504.19	794	343	508	286	279	121	114	692	203	26.7	43.0
165.1 mm	16.00	22.13	32.25	14.00	23.25	11.75	11.00	4.50	4.25	28.25	8.25	80.0	116.0
	406.40	562.10	819	356	591	298	279	114	108	718	210	36.2	52.6
6	16.00	22.13	32.25	14.00	23.25	11.75	11.00	4.50	4.25	28.25	8.25	80.0	116.0
	406.40	562.10	819	356	591	298	279	114	108	718	210	36.2	52.6
8	17.50	23.02	34.25	14.75	25.75	12.50	12.25	4.75	4.25	30.25	9.25	122.0	158.0
	444.50	584.71	870	375	654	318	311	121	108	768	235	55.3	71.6

I-769N.Preaction_5 REV_B


Series 769N FireLock NXT Actuated Valve - Non-Interlocked Pneumatic Release Preaction Trim with Series 776 Low-Pressure Actuator

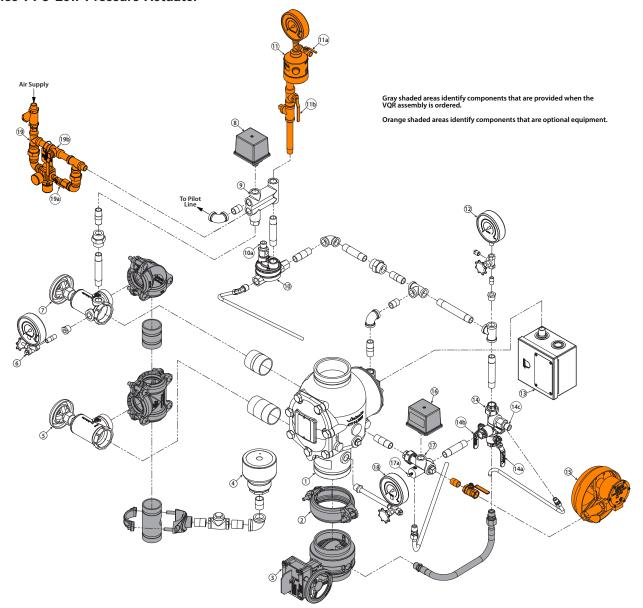

Item	Description
1	Series 769N FireLock NXT Actuated Valve
2	FireLock Rigid Coupling
3	Water Supply Main Control Valve
4	Drip Cup
5	Water Supply Main Drain Valve (Lower Drain Valve) – Flow Test
6	System Pressure Gauge/Gauge Valve Assembly
7	System Main Drain Valve (Upper Drain Valve)
8	Air Supervisory Pressure Switch
9	Air Manifold
10	Series 776 Low-Pressure Actuator
10a	Auto Vent Sleeve of Series 776 Low-Pressure Actuator
11	Series 746-LPA Dry Accelerator
11a	Series 746-LPA Dry Accelerator ¼-Turn Vent Ball Valve
11b	Series 746-LPA Dry Accelerator Isolation Ball Valve

Item	Description
12	Charge Line Pressure Gauge/Gauge Valve Assembly
13	Series 755 Manual Pull Station
14	Priming Manifold Assembly
14a	Charge Line Ball Valve
14b	Alarm Test Ball Valve
14c	Auto Drain Sleeve
15	Series 760 Water Motor Alarm Assembly and Shut-Off Valve
16	Alarm Pressure Switch
17	Alarm Manifold Assembly
17a	Ball Drip Plunger
18	Water Supply Pressure Gauge/Gauge Valve Assembly
19	Victaulic Air Maintenance Trim Assembly (AMTA)
19a	Slow-Fill Ball Valve of the Victaulic AMTA
19b	Fast-Fill Ball Valve of the Victaulic AMTA

Series 769N FireLock NXT Actuated Valve - Non-Interlocked Pneumatic/Electric Release Preaction Trim with Series 776 Low-Pressure Actuator and 24 VDC Normally-Closed Solenoid Valve

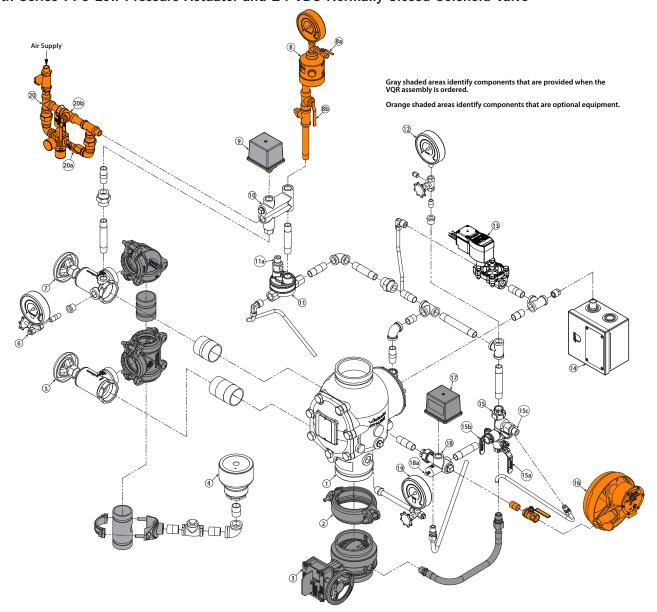


Item	Description
1	Series 769N FireLock NXT Actuated Valve
2	FireLock Rigid Coupling
3	Water Supply Main Control Valve
4	Drip Cup
5	Water Supply Main Drain Valve (Lower Drain Valve) – Flow Test
6	System Pressure Gauge/Gauge Valve Assembly
7	System Main Drain Valve (Upper Drain Valve)
8	Series 746-LPA Dry Accelerator
8a	Series 746-LPA Dry Accelerator ¼-Turn Vent Ball Valve
8b	Series 746-LPA Dry Accelerator Isolation Ball Valve
9	Air Supervisory Pressure Switch
10	Air Manifold
11	Series 776 Low-Pressure Actuator
11a	Auto Vent Sleeve of Series 776 Low-Pressure Actuator

Item	Description
12	Charge Line Pressure Gauge/Gauge Valve Assembly
13	Solenoid Valve with Supervised Coil
14	Series 755 Manual Pull Station
15	Priming Manifold Assembly
15a	Charge Line Ball Valve
15b	Alarm Test Ball Valve
15c	Auto Drain Sleeve
16	Series 760 Water Motor Alarm Assembly and Shut-Off Valve
17	Alarm Pressure Switch
18	Alarm Manifold Assembly
18a	Ball Drip Plunger
19	Water Supply Pressure Gauge/Gauge Valve Assembly
20	Victaulic Air Maintenance Trim Assembly (AMTA)
20a	Slow-Fill Ball Valve of the Victaulic AMTA
20b	Fast-Fill Ball Valve of the Victaulic AMTA

I-769N.Preaction_7 REV_B


Series 769N FireLock NXT Actuated Valve - Single-Interlocked Pneumatic Release Preaction Trim with Series 776 Low-Pressure Actuator

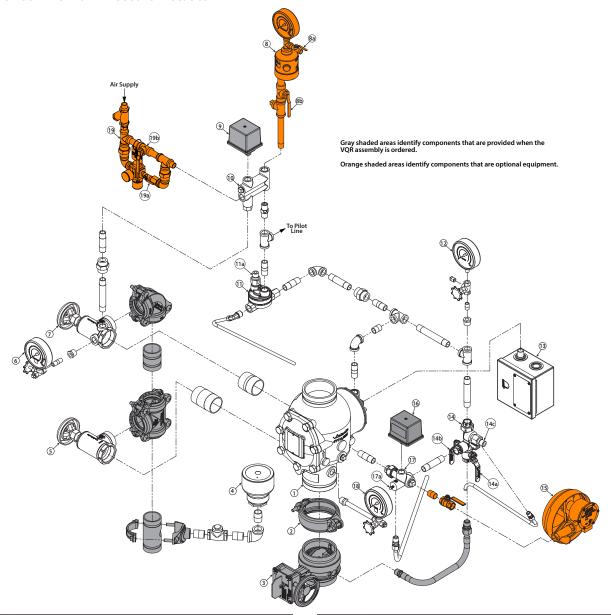

Item	Description
1	Series 769N FireLock NXT Actuated Valve
2	FireLock Rigid Coupling
3	Water Supply Main Control Valve
4	Drip Cup
5	Water Supply Main Drain Valve (Lower Drain Valve) – Flow Test
6	System Pressure Gauge/Gauge Valve Assembly
7	System Main Drain Valve (Upper Drain Valve)
8	Series 746-LPA Dry Accelerator
8a	Series 746-LPA Dry Accelerator 1/4-Turn Vent Ball Valve
8b	Series 746-LPA Dry Accelerator Isolation Ball Valve
9	Air Supervisory Pressure Switch
10	Air Manifold
11	Series 776 Low-Pressure Actuator
11a	Auto Vent Sleeve of Series 776 Low-Pressure Actuator

Item	Description
12	Charge Line Pressure Gauge/Gauge Valve Assembly
13	Series 755 Manual Pull Station
14	Priming Manifold Assembly
14a	Charge Line Ball Valve
14b	Alarm Test Ball Valve
14c	Auto Drain Sleeve
15	Series 760 Water Motor Alarm Assembly and Shut-Off Valve
16	Alarm Pressure Switch
17	Alarm Manifold Assembly
17a	Ball Drip Plunger
18	Water Supply Pressure Gauge/Gauge Valve Assembly
19	Victaulic Air Maintenance Trim Assembly (AMTA)
19a	Slow-Fill Ball Valve of the Victaulic AMTA
19b	Fast-Fill Ball Valve of the Victaulic AMTA

Series 769N FireLock NXT Actuated Valve - Single-Interlocked Electric and Double-Interlocked Electric (Electric-Pneumatic/Electric) Release Preaction Trim with 24 VDC Normally-Closed Solenoid Valve

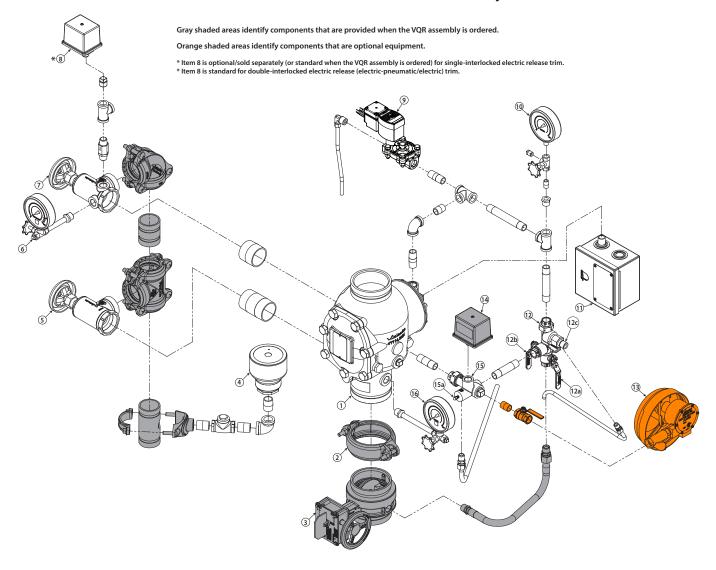


Item	Description
1	Series 769N FireLock NXT Actuated Valve
2	FireLock Rigid Coupling
3	Water Supply Main Control Valve
4	Drip Cup
5	Water Supply Main Drain Valve (Lower Drain Valve) – Flow Test
6	System Pressure Gauge/Gauge Valve Assembly
7	System Main Drain Valve (Upper Drain Valve)
8	Air Supervisory Pressure Switch (See Notes Above)
9	Solenoid Valve with Supervised Coil
10	Charge Line Pressure Gauge/Gauge Valve Assembly

Item	Description
11	Series 755 Manual Pull Station
12	Priming Manifold Assembly
12a	Charge Line Ball Valve
12b	Alarm Test Ball Valve
12c	Auto Drain Sleeve
13	Series 760 Water Motor Alarm Assembly and Shut-Off Valve
14	Alarm Pressure Switch
15	Alarm Manifold Assembly
15a	Ball Drip Plunger
16	Water Supply Pressure Gauge/Gauge Valve Assembly

TRIM COMPONENTS – EXPLODED VIEW DRAWING Series 769N FireLock NXT Actuated Valve - Electric Release Preaction Trim with 24 VDC Normally-Closed Solenoid Valve and Redundant Solenoid Valve




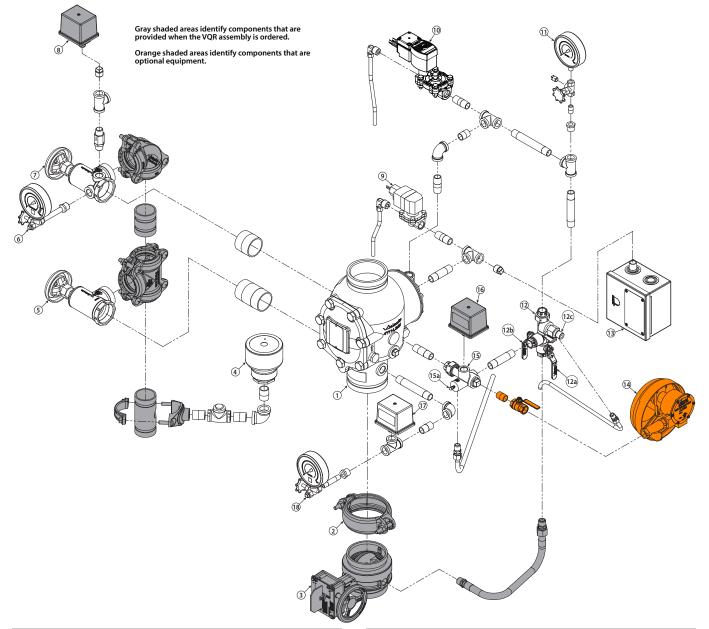

Item	Description
1	Series 769N FireLock NXT Actuated Valve
2	FireLock Rigid Coupling
3	Water Supply Main Control Valve
4	Drip Cup
5	Water Supply Main Drain Valve (Lower Drain Valve) – Flow Test
6	System Pressure Gauge/Gauge Valve Assembly
7	System Main Drain Valve (Upper Drain Valve)
8	Air Supervisory Pressure Switch
9	Redundant Solenoid Valve
10	Solenoid Valve with Supervised Coil
11	Charge Line Pressure Gauge/Gauge Valve Assembly

Description
Priming Manifold Assembly
Charge Line Ball Valve
Alarm Test Ball Valve
Auto Drain Sleeve
Series 755 Manual Pull Station
Series 760 Water Motor Alarm Assembly and Shut-Off Valve
Alarm Manifold Assembly
Ball Drip Plunger
Alarm Pressure Switch
Low Water Pressure Switch
Water Supply Pressure Gauge/Gauge Valve Assembly

INTERNAL VALVE COMPONENTS - SECTION VIEW AND EXPLODED VIEW DRAWINGS

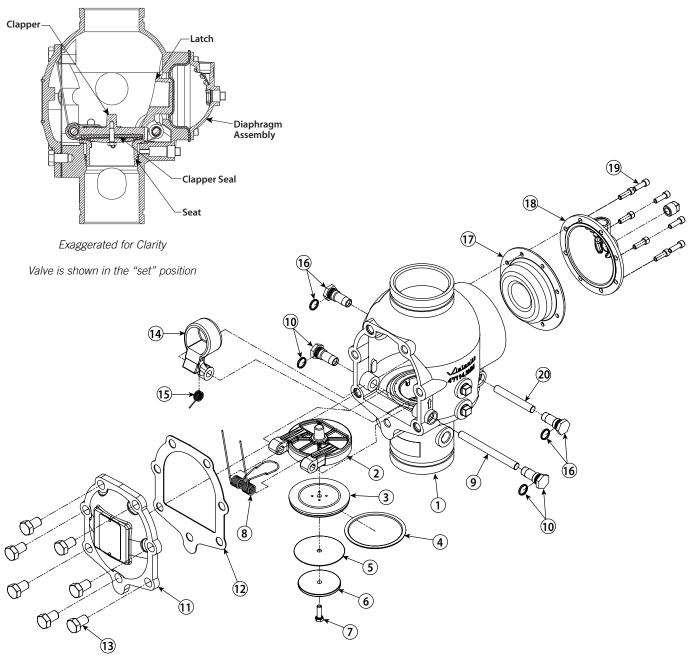

The 1½-inch/48.3-mm and 2-inch/60.3-mm valve sizes contain washers under the heads of the cover plate bolts.

Item	Description
1	Valve Body
2	Clapper
3	Clapper Seal
4	Seal Ring
5	Seal Washer*
6	Seal Retaining Ring
7	Seal Assembly Bolt
8	Clapper Spring
9	Clapper Shaft
10	Clapper Shaft Bushing and O-Ring (Qty. 2)

Item	Description
11	Cover Plate
12	Cover Plate Gasket
13	Cover Plate Bolts
14	Latch
15	Latch Spring
16	Latch Spring Bushing and O-Ring (Qty. 2)
17	Diaphragm
18	Diaphragm Cover
19	Diaphragm Cover Cap Screws (Qty. 8)
20	Latch Shaft

^{*} Item 5 (Seal Washer) is not used in 1½-inch/48.3-mm and 2-inch/60.3-mm valve sizes.

I-769N.Preaction_11 REV_B

AIR SUPPLY REQUIREMENTS

The required air pressure for Series 769N FireLock NXT Actuated Valves with pneumatic release preaction trim is 13psi/90kPa/0.9Bar minimum, regardless of the system supply water pressure. Normal air pressure shall not exceed 20psi/138kPa/1.4Bar. Failure to maintain air pressure within the 13psi/90kPa/0.9Bar to 18psi/124kPa/1.2Bar range may delay system operation response time.

The Series 746-LPA Dry Accelerator shall be used only on systems operating below 20 psi/138 kPa/1.4 Bar of air. If air pressure is higher than 20 psi/138 kPa/1.4 Bar, the Series 746 Dry Accelerator shall be used.

If multiple Series 769N FireLock NXT Actuated Valves with pneumatic release preaction trim are installed with a common air supply, isolate the systems with a Victaulic spring-loaded, soft-seated ball check valve to ensure air integrity for each system. Good practice is to include a ball valve for isolation and service of each individual system.

The engineer/system designer is responsible for sizing the compressor so that the entire system is charged to the required air pressure within 30 minutes. DO NOT oversize the compressor to provide more airflow. An oversized compressor will slow down or possibly prevent valve operation.

If the compressor fills the system too fast, it may be necessary to restrict the air supply. Restricting the air supply will ensure that air being exhausted from an open sprinkler or manual release valve is not replaced by the air supply system as fast as it is being exhausted.

BASE- OR RISER-MOUNTED AIR COMPRESSORS

For base- or riser-mounted air compressors, the recommended air pressure of 13 psi/90 kPa/0.9 Bar is the "on" or "low" pressure setting for the compressor. The "off" or "high" pressure setting shall be 18 psi/124 kPa/1.2 Bar.

When a base- or riser-mounted air compressor supplies air to a Series 769N FireLock NXT Actuated Valve, it is not necessary to install the Victaulic Series 757 Regulated Air Maintenance Trim Assembly (AMTA). In this case, the air line of the compressor connects to the trim at the fitting where the Series 757 Regulated AMTA is normally installed (refer to the applicable trim drawing). Verify that the compressor is installed with the correct pressure switch range, or use the Series 7C7 Air Compressor Assembly with integrated Series 757P Air Maintenance Trim Assembly.

NOTICE

 Victaulic recommends only one Series 769N FireLock NXT Actuated Valve per Series 757 Regulated AMTA or Series 7C7 Air Compressor Assembly with integrated Series 757P Air Maintenance Trim Assembly.

SHOP AIR OR TANK-MOUNTED AIR COMPRESSORS

In the event a compressor becomes inoperative, a properly sized tank-mounted air compressor provides the greatest protection for systems.

When shop air or a tank-mounted air compressor is used, the Series 757 Regulated AMTA shall be installed. The Series 757 Regulated AMTA provides proper air regulation from the air reservoir to the sprinkler system.

For tank-mounted air compressors, the recommended air pressure of 13 psi/90 kPa/0.9 Bar shall be used as the set point for the air regulator. The "on" pressure of the compressor shall be at least 5 psi/34 kPa/0.3 Bar above the set point of the air regulator.

COMPRESSOR REQUIREMENTS AND SETTINGS FOR A SERIES 769N FIRELOCK NXT ACTUATED VALVE INSTALLED WITH A SERIES 746-LPA DRY ACCELERATOR

Set the air regulator of the Series 757 Regulated AMTA to a minimum of 13 psi/90 kPa/0.9 Bar.

The Series 7C7 Air Compressor Assembly with integrated Series 757P Air Maintenance Trim Assembly SHALL NOT be used on a Series 769N FireLock NXT Actuated Valve installed with a Series 746-LPA Dry Accelerator, unless a tank and air regulator are added.

In the event a compressor becomes inoperative, a properly sized tank-mounted air compressor provides the greatest protection for systems installed with a Series 746-LPA Dry Accelerator. In this situation, air can be supplied continuously to the sprinkler system for an extended time period.

NOTE: The Series 757 Regulated AMTA shall be used with a tank-mounted air compressor to supply air to a Series 769N FireLock NXT Actuated Valve when the Series 746-LPA Dry Accelerator is used. The use of an air regulator with a base- or riser-mounted air compressor could cause short cycling, resulting in premature wear of the compressor.

The air regulator of the Series 757 Regulated AMTA is a relief-type design. Any pressure in the system that is above the set point of the air regulator will be released. Therefore, charging the air regulator above the set point could cause premature operation of a valve installed with a Series 746-LPA Dry Accelerator.

SETTINGS FOR AIR SUPERVISORY PRESSURE SWITCHES AND ALARM PRESSURE SWITCHES

- 1. Air supervisory pressure switches are required for preaction systems and shall be set according to the following notes. **NOTE:** Switches for VQR assemblies are pre-set at the factory.
 - **1a.** Wire the air supervisory pressure switches to activate a low-pressure alarm signal. **NOTE:** In addition, the local authority having jurisdiction may require a high-pressure alarm. Contact the local authority having jurisdiction for this requirement.
 - **1b.** Set the air supervisory pressure switches to activate at 2 4 psi/14 28 kPa/0.1 0.3 Bar below the minimum air pressure required (but not lower than 10 psi/69 kPa/0.7 Bar).
 - 1c. Wire the alarm pressure switch to activate a water flow alarm.
 - **1d.** Set the alarm pressure switch to activate on a pressure rise of 4 8 psi/28 55 kPa/0.3 0.6 Bar.

SECTION I

• Initial System Setup

INITIAL SYSTEM SETUP

NOTICE

Before proceeding with initial system setup, verify that the following steps have been completed:

- Verify that the system air feed piping is connected to the location indicated on the trim drawing.
- FOR TRIM EQUIPPED WITH A SOLENOID VALVE: Verify that an approved control panel is installed for proper system operation.

Step 1:

Confirm that all system drains are shut and that the system is free of leaks

Step 2:

Confirm that the system has been depressurized. The gauges shall indicate zero pressure.


Step 2a: If a Series 746-LPA Dry Accelerator is installed, confirm that the isolation ball valve is closed.

Step 2b: If a Series 746-LPA Dry Accelerator is installed, open the ¼-turn vent ball valve.

Step 3

Confirm that the alarm test ball valve is closed.

Single-Interlocked Pneumatic Release Trim Shown

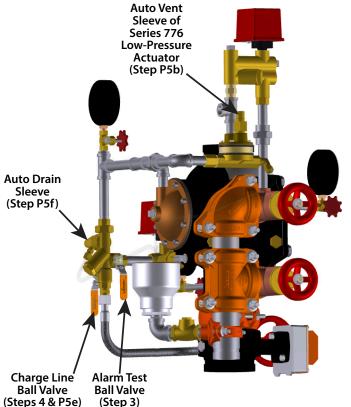

Step 4:

For single-interlocked electric and double-interlocked electric (electric-pneumatic/electric) release trim, open the charge line ball valve. Allow water to flow through the auto drain tube, then proceed to step E5a. For trim equipped with a Series 776 Low-Pressure Actuator, proceed to step P5a.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Step P5a: Charge the system with air by turning on the compressor or by opening the fast-fill ball valve on the AMTA. Charge the system to 13 psi/90 kPa/0.9 Bar minimum. Refer to the "Air Supply Requirements" section.

Step P5b: When the system reaches approximately 10 psi/69 kPa/ 0.7 Bar, and no additional moisture is being released from the Auto Vent, pull up on the Auto Vent Sleeve of the Series 776 Low-Pressure Actuator. **NOTE:** The Auto Vent Screw shall seal and remain in the set ("UP") position.

Step P5c: When system air pressure is established, close the fast-fill ball valve on the AMTA.

Step P5d: Open the slow-fill ball valve on the AMTA. **NOTE:** Failure to leave the slow-fill ball valve open may allow system pressure to drop, resulting in valve operation in the event of a system leak.

Step P5e: Open the charge line ball valve. Allow water to flow through the auto drain tube.

Step P5f: Pull up on the auto drain sleeve.

FOR TRIM EQUIPPED WITH A SOLENOID VALVE:

Step E5a: Confirm that the solenoid valve is closed (de-energized).

Step E5b: Confirm that water is not flowing through the solenoid valve.

Step 6:

Open the manual pull station valve to bleed off any air that is present, then close the manual pull station valve. Verify that the charge line pressure is equal to the supply pressure, and verify that the auto drain is set by pulling up on the auto drain sleeve.

Step 6a: If a Series 746-LPA Dry Accelerator is installed, close the $\frac{1}{4}$ -turn vent ball valve.

Step 6b: If a Series 746-LPA Dry Accelerator is installed, open the isolation ball valve. This will set the accelerator.

INITIAL SYSTEM SETUP (CONTINUED)

Step 7:

Open the water supply main drain valve (lower drain valve).

Step 8:

Open the water supply main control valve slowly until water flows steadily from the open water supply main drain valve (lower drain valve).

Step 9:

Close the water supply main drain valve (lower drain valve) when a steady flow of water occurs.

Step 10:

Open the water supply main control valve fully.

Confirm that all valves are in their normal operating positions (refer to the table to the right).

Valve


(Steps 7 & 9)

Step 12:

Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the system is in service.

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
¼-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

Single-Interlocked Pneumatic Release Trim Shown

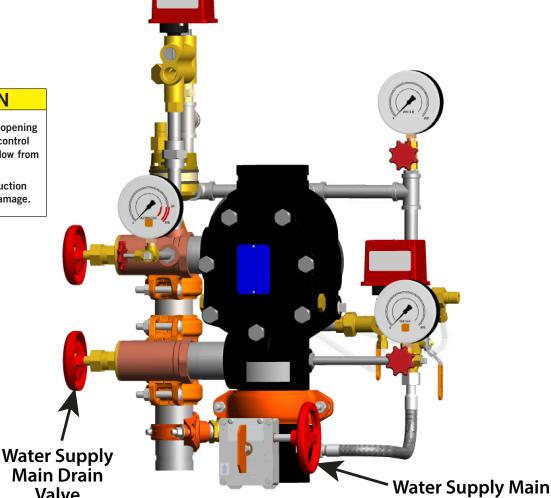

ACAUTION

• Take precautions when opening the water supply main control valve, since water will flow from all open system valves.

Failure to follow this instruction could result in property damage.

Control Valve

(Steps 8 & 10)

I-769N.Preaction_15 REV_B

This page intentionally left blank



SECTION II

• Resetting the System

RESETTING THE SYSTEM

Step 1

Isolate the charge line ball valve by placing it in the closed position.

Step 2:

Close the water supply main control valve.

Step 2a: Isolate the air supply to the system.

Step 3

Open the system main drain valve (upper drain valve). Confirm that the system is drained.

Step 3a: Push in the ball drip plunger to release pressure.

Step 4:

Close the system main drain valve (upper drain valve).

Step 5:

Confirm that all system drains are shut and that the system is free from leaks.

Step 6:


Confirm that the system has been depressurized. The gauges shall indicate zero pressure.

Step 7:

Confirm that the alarm test ball valve is closed.

Step 8:

Follow steps 4 - 12 of the "Initial System Setup" section.

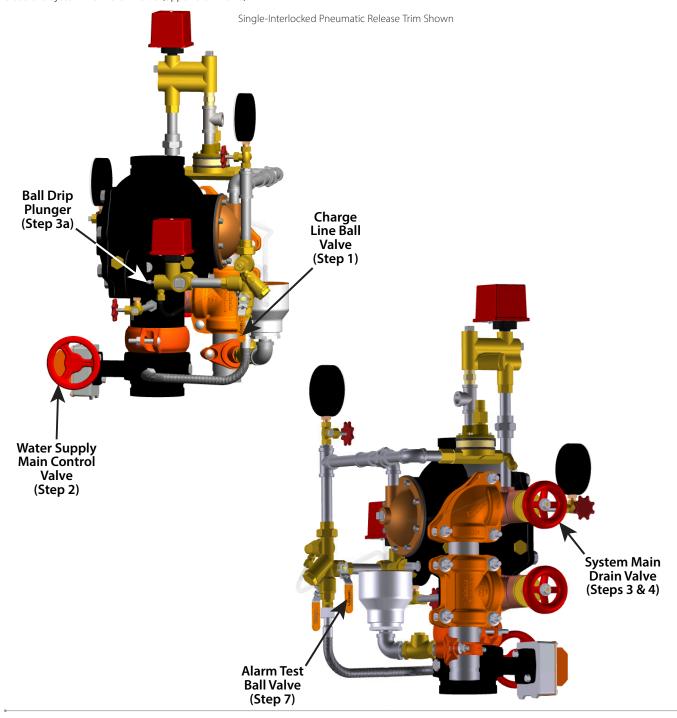

SECTION III

Inspection/Testing Requirements

WARNING

- The building owner or their representative is responsible for maintaining the fire protection system in proper operating condition.
- To ensure proper system operation, refer to NFPA 25, FM Datasheets, LPCB/ EN guidelines, or any other applicable local and national requirements for valve inspection requirements. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area, and always refer to the instructions in this manual for additional inspection and testing requirements.
- The frequency of inspections shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres.

Failure to follow these instructions could cause system failure, resulting in death or serious personal injury and property damage.



I-769N.Preaction_19 REV_B

DAILY/WEEKLY INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform daily/weekly inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- During cold weather conditions, verify on a daily basis that the enclosure temperature is maintained above 40° F/4° C.
- Inspect the valve and trim for mechanical damage and corrosion. Replace any damaged or corroded parts.


NOTICE

 If the preaction system is equipped with a low-pressure alarm, monthly inspections may be sufficient. Contact the local authority having jurisdiction for specific requirements.

MONTHLY INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform monthly inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

Record the system air pressure and water supply pressure.
 Confirm that the water supply pressure is within the range of normal pressures observed in the area. Significant loss of water supply pressure could indicate an adverse condition in the water supply. Any variations outside of the normal pressures shall be investigated.

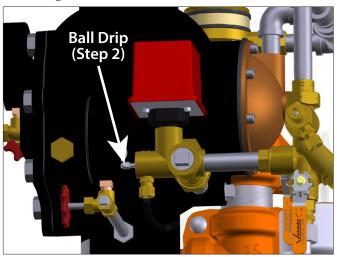

- Confirm that there is no leakage from the intermediate valve chamber. The ball drip on the alarm manifold assembly shall not be leaking water or air.
- Inspect the valve and trim for mechanical damage and corrosion. Replace any damaged or corroded parts.

Confirm that all valves are in their normal operating positions (refer to the table below).

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
1/4-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

QUARTERLY INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform quarterly inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

Perform the required water level (NFPA 25 priming water level)
and low air alarm tests, in accordance with Section IV of this
manual. If a high water level condition is noted during two
consecutive quarterly tests, increase the frequency of the required
water level test to monthly.

ANNUAL INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform annual inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- Perform the required partial operational trip test in accordance with Section IV of this manual.
- Perform an internal inspection of the actuated valve in accordance with Section V of this manual.

3-YEAR INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform 3-year inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

 Perform the required full operational trip test in accordance with Section IV of this manual.

5-YEAR INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform 5-year inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

 Inspect all strainers, filters, restricted orifices, and diaphragm chambers. Replace any affected components.

victaulic

REV_B

SECTION IV

- Required Main Drain Test
- Required Water Flow Alarm Test
- Required Water Level and Low-Air Alarm Tests
- Required Partial Operational Trip Test
- Required Full Operational Trip Test

▲ WARNING

- The building owner or their representative is responsible for maintaining the fire protection system in proper operating condition.
- To ensure proper system operation, refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements for valve inspection requirements. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area, and always refer to the instructions in this manual for additional inspection and testing requirements.
- The frequency of inspections shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres.
- Any activities that require taking the valve out of service may eliminate the fire protection provided. A fire patrol is strongly recommended for the affected areas.
- Before servicing or testing the system, notify the authority having jurisdiction.

Failure to follow these instructions could cause system failure, resulting in death or serious personal injury and property damage.

NOTICE

- When the valve is reset after an operational test (or after any system operation), the main drain valve and any low-point drain valves shall be partially opened and then closed to drain water that might be present in the riser. Continue this procedure until all water is released.
- The optional Series 75D Water Column Kit can be installed to automate this step.

<u>ictaulic</u>

I-769N.Preaction_21 REV_B

REQUIRED MAIN DRAIN TEST

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform main drain tests. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the main drain test will be performed.
- 2. Confirm that sufficient drainage is available.
- 3. Record the water supply pressure and system air pressure.
- 4. Confirm that there is no leakage from the intermediate valve chamber. The ball drip on the alarm manifold assembly shall not be leaking water or air.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Verify that the system is at the proper air pressure for the local water supply pressure.

ACAUTION

- Use caution to prevent opening the system main drain valve (upper drain valve) accidentally.
- Opening the system main drain valve (upper drain valve) will cause the valve to operate.

Failure to pipe the system main drain valve (upper drain valve) to a proper wastewater drain will result in property damage.


- **5.** Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- **6.** While the water supply main drain valve (lower drain valve) is fully open, record the water supply pressure (from the water supply gauge) as the residual pressure.

- 7. Close the water supply main drain valve (lower drain valve) slowly.
- 8. Record the water pressure established after closing the water supply main drain valve (lower drain valve).
- Compare the residual pressure reading to the residual pressure readings taken in previous main drain tests. If there is degradation in the residual water supply reading, restore the proper water supply pressure.
- Confirm that all valves are in their normal operating positions (refer to the table below).

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
1/4-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

- **11.** Confirm that there is no leakage from the intermediate valve chamber. The ball drip on the alarm manifold assembly shall not be leaking water or air.
- 12. Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the valve is back in service. Provide test results to the authority having jurisdiction, if required.

Single-Interlocked Pneumatic Release Trim Shown

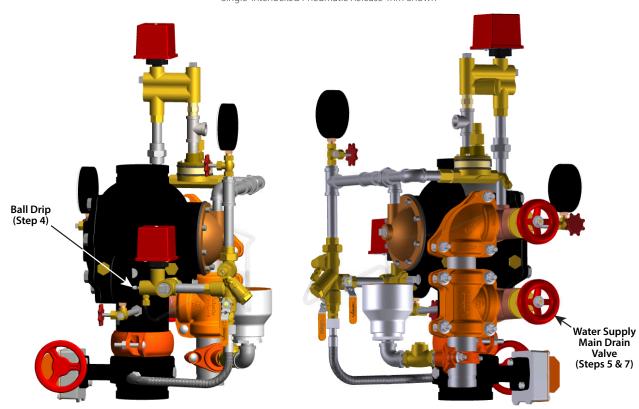



REV_B

REQUIRED WATER FLOW ALARM TEST

Refer to NFPA 25, FM Datasheets, or any applicable local requirements to perform water flow alarm tests. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.


 Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the water flow alarm test will be performed.

A CAUTION

- Use caution to prevent opening the system main drain valve (upper drain valve) accidentally.
- Opening the system main drain valve (upper drain valve) will cause the valve to operate.

Failure to pipe the system main drain valve (upper drain valve) to a proper wastewater drain will result in property damage.

- 2. Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- 3. Close the water supply main drain valve (lower drain valve).
- **4.** Open the alarm test ball valve. Confirm that mechanical and electrical alarms are activated and that remote monitoring stations, if provided, receive an alarm signal.
- Close the alarm test ball valve after verifying proper operation of all alarms.
- **6.** Push in the ball drip plunger on the alarm manifold assembly to verify that there is no pressure in the alarm line.
- Verify that all alarms stopped sounding, that the alarm line drained properly, and that remote station alarms reset properly.
- 8. Confirm that the ball drip on the alarm manifold assembly is not leaking water or air.
- **9.** Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the valve is back in service. Provide test results to the authority having jurisdiction, if required.

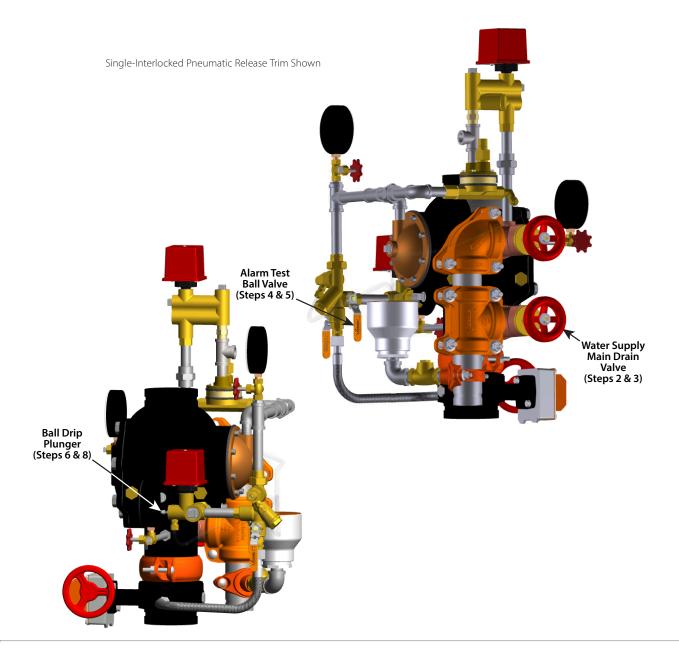

REQUIRED WATER LEVEL AND LOW AIR ALARM TESTS

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform water level and low air alarm tests. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

NOTICE

- If a Series 746-LPA Dry Accelerator is installed, verify that the authority having jurisdiction is notified that the water level and low air alarm tests are in progress. Failure to close the isolation ball valve of the Series 746-LPA Dry Accelerator may cause the valve to trip, resulting in a false alarm.
- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the water level and low air alarm tests will be performed.
- If a Series 746-LPA Dry Accelerator is installed, close the isolation ball valve.
- **3.** Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- 4. Close the water supply main drain valve (lower drain valve).
- 5. Close the water supply main control valve.
- 6. Partially open the system main drain valve (upper drain valve) slowly. Confirm that water is not flowing from the drain. NOTE: If water is flowing from the drain, the system may not have drained properly. In this case, follow all steps in the "Resetting the System" section.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Record the system air pressure at which the low air alarm activates.

7. Close the system main drain valve (upper drain valve).

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Close the slow-fill ball valve on the AMTA.

Open the fast-fill ball valve on the AMTA. Bring the pressure back up to the normal system pressure.

When the normal system air pressure is reached, close the fast-fill ball valve on the AMTA.



8. Open the water supply main drain valve (lower drain valve).

ACAUTION


 Take precautions when opening the water supply main control valve, since water will flow from all open system valves.

Failure to follow this instruction could result in property damage.

- Open the water supply main control valve slowly until water flows steadily from the open water supply main drain valve (lower drain valve)
- **10.** Close the water supply main drain valve (lower drain valve) when a steady flow of water occurs.
- 11. Open the water supply main control valve fully.
- Confirm that all valves are in their normal operating positions (refer to the table below).

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
14-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

12. Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the valve is back in service. Provide test results to the authority having jurisdiction, if required.

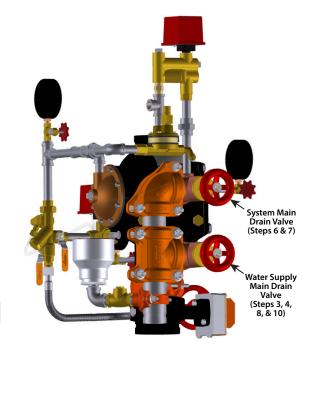

LOW WATER ALARM TEST



Perform the low water alarm test on a frequency required by current LPCB/EN requirements. The authority having jurisdiction in the area may require these tests on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.


- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the low water alarm test will be performed.
- 2. Close the water supply main control valve.
- 2a. Verify that the water pressure is above 1.4 Bar/20 psi.
- 3. Partially open the water supply main drain valve (lower drain valve) slowly. Record the pressure at which the low water alarm activates. NOTE: The low water alarm will sound only if it is connected properly to the Fire Alarm Control Panel (FACP). The low water alarm should clear automatically when the valve is reset.
- **4.** Close the water supply main drain valve (lower drain valve).
- 5. Open the water supply main control valve fully.

6. Confirm that all valves are in their normal operating positions (refer to the table below).

Valve	Normal Operating Position
Water Supply Main Control Valve	Open
Water Supply Main Drain Valve (Lower Drain Valve)	Closed
System Main Drain Valve (Upper Drain Valve)	Closed
Charge Line Ball Valve of the Priming Manifold Assembly	Open
Alarm Test Ball Valve of the Priming Manifold Assembly	Closed
Slow-Fill Ball Valve of the Victaulic AMTA (if applicable)	Open
Fast-Fill Ball Valve of the Victaulic AMTA (if applicable)	Closed
Isolation Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Open
¼-Turn Vent Ball Valve for Series 746-LPA Dry Accelerator (if applicable)	Closed

- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the valve is back in service.
- **8.** Provide test results to the authority having jurisdiction, if required.

Single-Interlocked Pneumatic Release Trim Shown

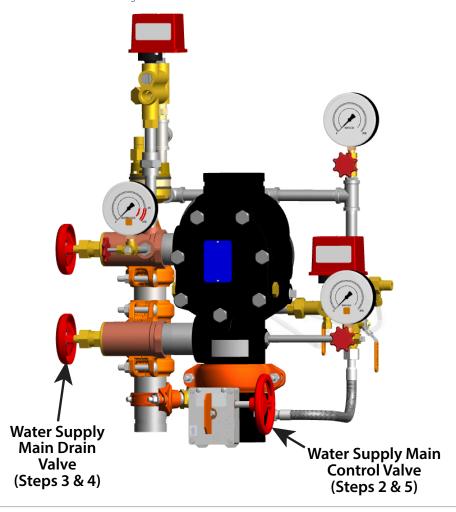

REQUIRED PARTIAL OPERATIONAL TRIP TEST

Partial operational (trip) tests are required to confirm proper valve operation; however, this test does not confirm full system operation. Victaulic recommends performing the partial operational (trip) test annually (at minimum). **NOTE:** The frequency of the partial operational (trip) test shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres. In addition, the authority having jurisdiction in the area may require partial operational (trip) tests on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the partial operational (trip) test will be performed.
- 2. Record the water supply pressure and system air pressure.
- **3.** Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- 4. Close the water supply main control valve to the point where additional closure will not provide flow through the water supply main drain valve (lower drain valve).
- Open the water supply main control valve slowly until a small amount of water flows through the water supply main drain valve (lower drain valve).


- **6.** Close the water supply main drain valve (lower drain valve).
- 7. Trip the valve by doing one of the following:
 - a. Open (energize) the solenoid valve
 - b. Relieve pressure from the pilot line
 - c. Open the manual pull station valve
- **8.** Confirm that the charge line's pressure drops to zero and that water is flowing through the auto drain to the drip cup.
- **9.** Close the water supply main control valve fully.
- Close the remote system test valve (inspector's test connection) or the system main drain valve (upper drain valve).

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Shut off the air supply.

- 11. Close the charge line ball valve.
- 12. Perform all steps in the "Resetting the System" section.

Single-Interlocked Pneumatic Release Trim Shown

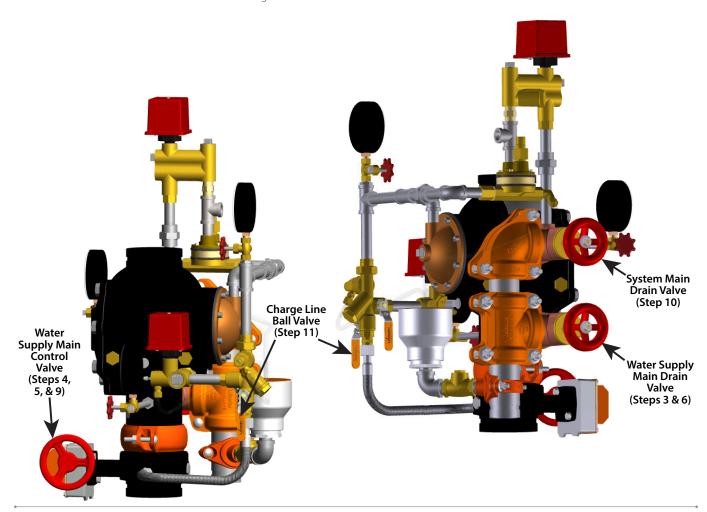

REQUIRED FULL OPERATIONAL TRIP TEST

Victaulic recommends the full operational (trip) test every 3 years (at minimum). **NOTE:** The frequency of the full operational (trip) test shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres. This test allows a full flow of water into the sprinkler system; therefore, this test shall be performed when there is no chance for freezing conditions. In addition, the authority having jurisdiction in the area may require full operational (trip) tests on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the full operational (trip) test will be performed.
- 2. Record the water supply pressure and system air pressure.
- **3.** Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- **4.** Close the water supply main drain valve (lower drain valve).
- 5. Trip the valve by doing one of the following:
 - a. Open (energize) the solenoid valve
 - **b.** Relieve pressure from the pilot line
 - c. Open the manual pull station valve

- **6.** Record the following:
 - **6a.** The time between opening the remote system test valve (inspector's test connection) and operation of the actuated valve with preaction trim
 - 6b. FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:


System air pressure when the actuated valve with preaction trim operated

- **6c.** The time between opening the remote system test valve (inspector's test connection) to when water flows from the test connection's outlet
- **6d.** All information required by the authority having jurisdiction
- 7. Confirm that all alarms operate properly.
- 8. Continue to run water until it is clear.
- 9. Close the water supply main control valve.
- 10. Close the charge line ball valve.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR:

Shut off the air supply.

- 11. Open the water supply main drain valve (lower drain valve).
- **12.** Close the water supply main drain valve (lower drain valve) until water stops flowing.
- Open the system main drain valve (upper drain valve) to drain the system.
- **14.** After the system is drained completely, close the remote system test valve (inspector's test connection).
- 15. Close the system main drain valve (upper drain valve).
- **16.** Perform all steps in the "Resetting the System" section.

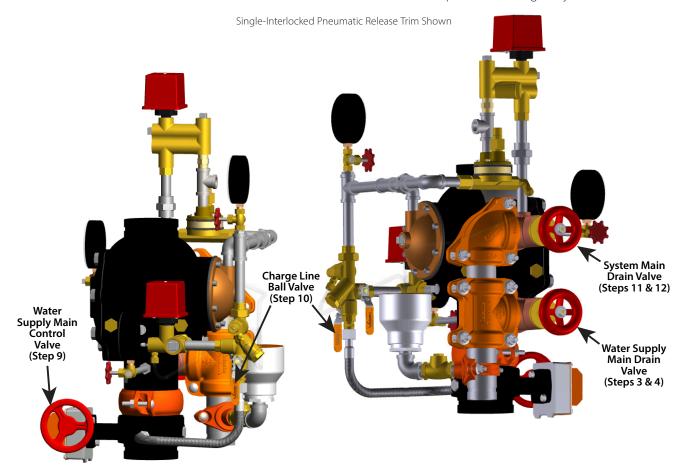

This page intentionally left blank

SECTION V

Required Internal Inspection



- Depressurize and drain the piping system before attempting to remove the cover plate from the valve.
- The building owner or their representative is responsible for maintaining the fire protection system in proper operating condition.
- To ensure proper system operation, refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements for valve inspection requirements. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area, and always refer to the instructions in this manual for additional inspection and testing requirements.
- The frequency of inspections shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres.
- Any activities that require taking the valve out of service may eliminate the fire protection provided. A fire patrol is strongly recommended for the affected areas.
- Before servicing or testing the system, notify the authority having jurisdiction.

Failure to follow these instructions could cause system failure, resulting in death or serious personal injury and property damage.

_ictaulic

REQUIRED INTERNAL INSPECTION

Refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements to perform internal inspections. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area.

- Notify the authority having jurisdiction, remote station alarm monitors, and those in the affected area that the system is being taken out of service.
- 2. Open the water supply main drain valve (lower drain valve) fully to flush the water supply of any contaminants.
- 3. Close the water supply main drain valve (lower drain valve).
- Close the water supply main control valve to take the system out of service.
- 5. Open the water supply main drain valve (lower drain valve).
- **6.** Confirm that water is not flowing from the water supply main drain valve (lower drain valve).
- 7. Close the charge line ball valve.
- 8. Open the system main drain valve (upper drain valve) to drain any water that has accumulated and to release system air pressure.

NOTE: If the system has operated, open the remote system test valve (inspector's test connection) and any auxiliary drain valves.

FOR TRIM EQUIPPED WITH A SERIES 776 LOW-PRESSURE ACTUATOR: Close the slow-fill ball valve on the AMTA.

- 9. Open the manual pull station valve.
- 10. PUSH DOWN ON THE AUTO DRAIN SCREW TO REMOVE PRESSURE IN THE CHARGE LINE. VERIFY THAT THERE IS NO PRESSURE ON THE GAUGES.


A WARNING

 Verify that the valve is depressurized and drained completely before the cover plate bolts are removed.

Failure to follow this instruction could result in death or serious personal injury and property damage.



- After all pressure is released from the system, loosen the cover plate bolts slowly. NOTE: DO NOT remove any cover plate bolts until all cover plate bolts are loosened.
- 12. Remove all cover plate bolts, along with the cover plate and cover plate gasket. NOTE: The 1½-inch/48.3-mm and 2-inch/60.3-mm valve sizes contain washers under the heads of the cover plate bolts. Keep these washers for re-installation.

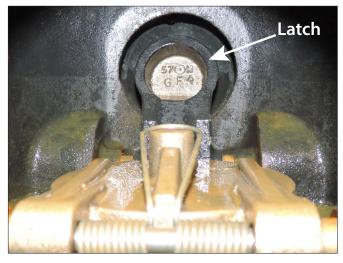

13. Push the latch back (toward the diaphragm).

CAUTION

 DO NOT use solvents or abrasives on or near the valve body seat ring.

Failure to follow this instruction could prevent the clapper from sealing, resulting in valve leakage.



- 14. Rotate the clapper out of the valve body. Inspect the clapper seal and seal-retaining ring. Wipe away any contaminants, dirt, and mineral deposits. Clean out any holes that are plugged in the valve-body seat ring. DO NOT USE SOLVENTS OR ABRASIVES.
- 15. While the clapper is rotated out of the valve body, pull the latch forward to inspect the diaphragm. If the diaphragm shows any signs of wear or damage, replace it with a new, Victaulic-supplied diaphragm. Refer to the "Removing and Replacing the Diaphragm" section.
- **16.** Inspect the clapper for freedom of movement and physical damage. Replace any damaged or worn parts by following the applicable instructions in Section VI.
- 17. Re-install the cover plate by following the "Installing the Cover Plate Gasket and Cover Plate" section.
- **18.** Place the system back in service by following the "Resetting the System" section.



SECTION

- Removing and Replacing the **Clapper Seal**
- Removing and Replacing the **Clapper Assembly**
- **Installing the Cover Plate Gasket and Cover Plate**
- Removing and Replacing the **Diaphragm**
- Cleaning the Cartridge in the Air and Priming Manifold **Assemblies**
- Replacing the Filter in Series 776 Low-Pressure Actuators

▲ WARNING

- . Before servicing or testing the system, notify the authority having jurisdiction.
- . Depressurize and drain the piping system before attempting to remove the cover plate from the valve.
- The building owner or their representative is responsible for maintaining the fire protection system in proper operating condition.
- . To ensure proper system operation, refer to NFPA 25, FM Datasheets, LPCB/EN guidelines, or any other applicable local and national requirements for valve inspection requirements. The authority having jurisdiction in the area may require these inspections on a more frequent basis. Verify these requirements by contacting the authority having jurisdiction in the affected area, and always refer to the instructions in this manual for additional inspection and testing requirements.
- . The frequency of inspections shall be increased in the presence of contaminated water supplies, corrosive/scaling water supplies, and corrosive atmospheres.
- . Any activities that require taking the valve out of service may eliminate the fire protection provided. A fire patrol is strongly recommended for the affected areas.

Failure to follow these instructions could cause system failure, resulting in death or serious personal injury and property damage.



REMOVING AND REPLACING THE CLAPPER SEAL

1. Perform steps 1 - 13 of the "Required Internal Inspection" section.



2. Remove the seal assembly bolt/bolt seal from the clapper seal.



Remove the seal-retaining ring. Save the seal-retaining ring for re-installation.

ACAUTION

 DO NOT pry the seal washer out of the clapper seal from the inner hole.

Failure to follow this instruction could damage the seal washer, resulting in improper clapper sealing and valve leakage.



- Pry the edge of the seal washer from inside the clapper seal, as shown above. DO NOT PRY THE SEAL WASHER OUT FROM THE INNER HOLE.
- Remove the seal washer from the clapper seal. Dry up any moisture under the seal washer or on the clapper seal.


ACAUTION

• Use only Victaulic-supplied replacement parts.

Failure to follow this instruction could cause improper valve operation, resulting in property damage.



5. Pry the clapper seal, along with the seal ring, out of the clapper. Inspect the clapper seal. If the clapper seal is torn or worn, replace it with a new, Victaulic-supplied clapper seal. If replacing the clapper seal assembly with a new assembly, skip to step 7.

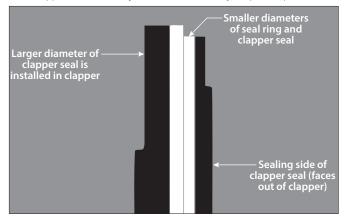

6a. If using the same clapper seal assembly and the seal ring was removed from the clapper seal in the previous step: Re-insert the seal ring carefully underneath the outer lip of the clapper seal. Verify that the smaller diameter of the seal ring is toward the sealing surface of the clapper seal.



- Insert the seal washer carefully underneath the sealing lip of the gasket.
- **8.** Remove any debris from the clapper. Inspect the clapper for damage that may affect the sealing capabilities of the new clapper seal. Contact Victaulic if the clapper requires replacement.





9. Install the clapper seal into the clapper carefully. Verify that the seal ring snaps into the clapper completely.



 Place the seal-retaining ring onto the seal washer of the clapper seal. Install the seal assembly bolt/bolt seal through the sealretaining ring and clapper.



11. Tighten the seal assembly bolt/bolt seal to the torque value listed in the table on this page to ensure a proper seal.

REQUIRED SEAL ASSEMBLY BOLT/BOLT SEAL TORQUES

Nominal Size inches or mm	Required Torque inch-lbs/N•m
1½	40 5
2	40 5
21/2	90 10
76.1 mm	90 10
3	90 10
4	110 12
165.1 mm	160 18
6	160 18
8	160 18


- **12.** Replace the cover plate by following the "Installing the Cover Plate Gasket and Cover Plate" section.
- **13.** Place the system back in service by following the "Resetting the System" section.

REMOVING AND REPLACING THE CLAPPER ASSEMBLY

1. Perform steps 1 - 13 of the "Required Internal Inspection" section.



Remove the clapper shaft bushings with o-rings from the valve body.

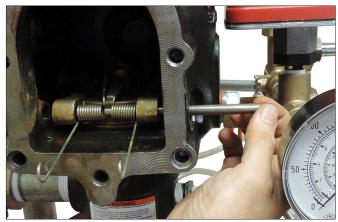

Remove the clapper shaft. NOTE: As the shaft is being removed, the clapper spring will drop out of position. Save the clapper spring for re-installation.

ictaulic



4. Remove the clapper assembly from the valve body seat ring. Clean the valve body seat ring.


ACAUTION

. Use only Victaulic-supplied replacement parts.


Failure to follow this instruction could cause improper valve operation, resulting in property damage.



Place the new clapper assembly onto the valve body seat ring. Verify that the holes in the clapper arms align with the holes in the valve body.

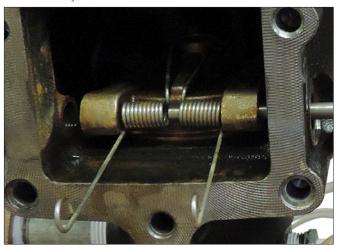

- 6. Insert the clapper shaft halfway into the valve body.
- 7. Install the clapper spring onto the clapper shaft. Verify that the loop of the clapper spring is facing the clapper, as shown above.
- **8.** Finish inserting the clapper shaft through the clapper arm and valve body.

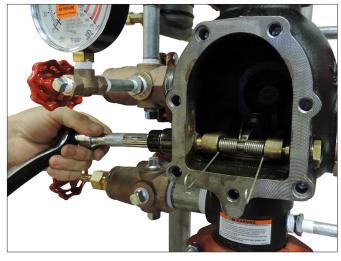

- **9.** Verify that a clapper shaft bushing o-ring is installed on each clapper shaft bushing.
- **9a.** Apply thread sealant to each clapper shaft bushing. Install the clapper shaft bushings into the valve body until hand-tight.
- **9b.** Tighten the clapper shaft bushings until metal-to-metal contact occurs with the valve body. DO NOT exceed 10 ft-lbs/14 N•m of torque on the clapper shaft bushings.
- **9c.** Check the clapper for freedom of movement.
- 10. Replace the cover plate by following the "Installing the Cover Plate Gasket and Cover Plate" section.
- 11. Place the system back in service by following the "Resetting the System" section.

INSTALLING THE COVER PLATE GASKET AND COVER PLATE

ACAUTION

· Use only Victaulic-supplied replacement parts.

Failure to follow this instruction could cause improper valve operation, resulting in property damage.

 Verify that the cover plate gasket is in good condition. If the gasket is torn or worn, replace it with a new, Victaulic-supplied gasket.






- Align the holes of the cover plate gasket with the holes in the cover plate.
- 3. Insert one cover plate bolt through the cover plate and cover plate gasket to ease alignment. **NOTE:** For 1½-inch/48.3-mm and 2-inch/60.3-mm valve sizes, a washer shall be re-installed under the head of each cover plate bolt.

A CAUTION

. DO NOT over-tighten the cover plate bolts.

Failure to follow this instruction could cause damage to the cover plate gasket, resulting in valve leakage.

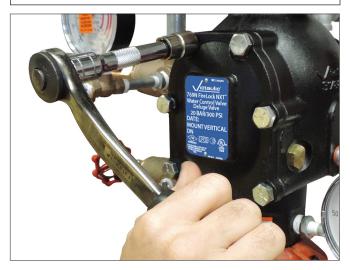

- 4. Align the cover plate/cover plate gasket to the valve. Verify that the clapper spring's arms are rotated to their installed position. Tighten all cover plate bolts into the cover plate/valve body.
- Torque all cover plate bolts in an even, crossing pattern. Refer to the "Required Cover Plate Bolt Torques" table below for the required torque values. DO NOT over-tighten the cover plate bolts.


REQUIRED COVER PLATE BOLT TORQUES

Nominal Size inches or mm	Required Torque ft-lbs/N•m
1 1/2	30 41
2	30 41
21/2	60 81
76.1 mm	60 81
3	60 81
4	100 136
165.1 mm	115 156
6	115 156
8	100 136

Place the system back in service by following the "Resetting the System" section.

REMOVING AND REPLACING THE DIAPHRAGM

- Remove the system from service by following steps 1 10 of the "Required Internal Inspection" section.
- 2. Break the unions that connect the trim to the diaphragm cover. Refer to the applicable trim drawing for details.

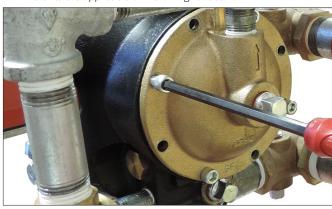

3. Remove the cap screws from the diaphragm cover, and pull the diaphragm cover/trim off the valve.



4. Remove the diaphragm from the valve body. Discard the diaphragm.





- 5. Clean the back of the valve body to remove any debris that may interfere with proper diaphragm seating.
- **5a.** Clean the inside of the diaphragm cover.

ACAUTION

 Use caution when installing a new diaphragm into the valve body.


Failure to follow this instruction could cause damage to the diaphragm, resulting in improper valve operation and valve leakage.

ictaulic

- 6. Replace the diaphragm with a new, Victaulic-supplied diaphragm. Align the holes in the diaphragm with the holes in the valve body. Use caution to prevent damage to the diaphragm during installation.
- 7. Align the holes of the diaphragm cover with the holes in the diaphragm/valve body. Tighten all cap screws into the diaphragm cover/valve body in an even, crossing pattern to a torque of 10 ft-lbs/14 N•m. Repeat this tightening sequence to verify that all cap screws have been torqued to 10 ft-lbs/14 N•m.
- 8. Re-attach the trim at the unions that were loosened in step 2. Refer to the applicable trim drawing for details. VERIFY THAT ALL UNIONS THAT WERE LOOSENED TO PERMIT ACCESS TO THE DIAPHRAGM COVER HAVE BEEN RE-TIGHTENED BEFORE ATTEMPTING TO PLACE THE SYSTEM BACK IN SERVICE.
- 9. Place the system back in service by following the "Resetting the System" section. Inspect all trim components to confirm that there are no leaks. Any leaks shall be corrected immediately by depressurizing the system and tightening any affected components.

CLEANING THE CARTRIDGE IN THE AIR AND PRIMING MANIFOLD ASSEMBLIES


 Remove the system from service by following steps 1 – 10 of the "Required Internal Inspection" section.

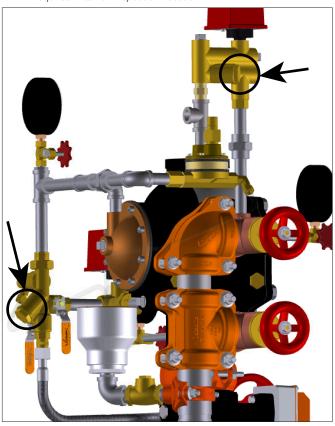

- Remove the existing cartridge from the air manifold and priming manifold assemblies, shown above. Rinse the cartridges to remove any deposits.
- 3. Install the corresponding cartridge into the air manifold and priming manifold assemblies. NOTE: The face of the air manifold cartridge is stamped "AM" and the face of the priming manifold cartridge is stamped "PM." These cartridges are designed so that they cannot be interchanged.
- Place the system back in service by following the "Resetting the System" section.

REPLACING THE FILTER IN SERIES 776 LOW-PRESSURE ACTUATORS

1. Remove the system from service by following steps 1-10 of the "Required Internal Inspection" section.

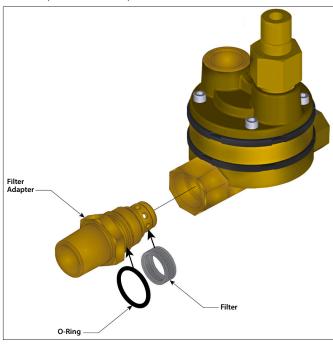

- Remove the Series 776 Low-Pressure Actuator from the trim. Refer to the applicable trim drawing for details.
- 3. Remove and discard the filter.

ACAUTION

 DO NOT re-use filters. After removal, the old filter shall be replaced with a new, Victaulic-supplied filter.

Failure to follow this instruction could cause improper valve operation, resulting in property damage.

- 4. Use only a new, Victaulic-supplied filter. Install the new filter onto the filter adapter, as shown above. Verify that the o-ring is positioned on the filter adapter, as shown above.
- Carefully re-install the filter adapter into the actuator. Use caution to prevent damage to the o-ring.
- **6.** Re-install the actuator into the trim. Refer to the applicable trim drawing for details.

SECTION VII

- Troubleshooting
- System Sensor* PDRP-2001 or NOTIFIER* RP-2001 Field Wiring Diagrams
- Sample Program for System Sensor* PDRP-2001 or NOTIFIER* RP-2001 Panel

victaulic

I-769N.Preaction_37 REV_B

 $^{^{\}ast}$ System Sensor and NOTIFIER are registered trademarks of Honeywell International, Inc.

TROUBLESHOOTING - SYSTEM


Problem	Possible Cause	Solution
The valve operates without sprinkler activation.	There is a loss of air pressure in the system or trim.	Check for any leaks in the system and trim. Confirm that the AMTA is operating properly. Consider installing a low-air supervisory switch.
	The pressure switch on the air compressor is set too low, or the compressor is not operating properly.	Increase the "ON" setting of the air compressor's pressure switch, and check the air compressor for proper operation.
Water is leaking from the ball drip on the alarm manifold assembly.	Water is getting past the clapper seal and into the intermediate chamber of the valve.	Check the clapper seal and valve body seat ring for physical damage and foreign material.
	Water is under the clapper seal.	Inspect the clapper seal to verify that no water is under the seal. If water is present, remove and replace the seal. Refer to the "Removing and Replacing the Clapper Seal" section.
Air is leaking from the ball drip on the alarm manifold assembly.	Air is getting past the clapper seal and into the intermediate chamber of the valve.	Check the clapper seal and valve body seat ring for physical damage and foreign material.
	Water is under the clapper seal.	Inspect the clapper seal to verify that no water is under the seal. If water is present, remove and replace the seal. Refer to the "Removing and Replacing the Clapper Seal" section.
The latch will not maintain the clapper in the closed position.	There is no water pressure on the diaphragm.	Check the water pressure in the charge line. Verify that the restrictor in the charge line is clean.
	The auto drain is not set.	Set the auto drain by pulling up on the auto drain sleeve.
Water is leaking from the diaphragm assembly.	The diaphragm is damaged.	Contact Victaulic.
Air is leaking from the diaphragm assembly.	The diaphragm is damaged.	Contact Victaulic.

TROUBLESHOOTING - SERIES 776 LOW-PRESSURE ACTUATOR

Problem	Possible Cause	Solution
When air in the system is released, the Series 776 Low-Pressure Actuator does not trip.	There is a restriction in the piping between the air manifold and the auto vent of the Series 776 Low-Pressure Actuator.	Remove the air feed nipple and remove any debris. Clean the restrictor and strainer in the air manifold. Verify that no debris has built up in the air manifold ports that could be restricting airflow.
When the Auto Vent Sleeve of the Series 776 Low-Pressure Actuator is pulled up, the screw does not stay set in the "UP"	The Series 776 Low-Pressure Actuator is not receiving enough air.	Increase the air pressure going into the Series 776 Low-Pressure Actuator.
position.	The Series 776 Low-Pressure Actuator has a broken seal.	If the above procedure does not work, contact Victaulic.
Water is leaking through the Series 776 Low-Pressure Actuator.	The air chamber of the Series 776 Low-Pressure Actuator is not set.	Verify that the vent seal of the Series 776 Low-Pressure Actuator is in the set position and the air chamber is pressurized.
	The strainer on the Series 776 Low-Pressure Actuator is clogged.	Replace the strainer screen of the Series 776 Low-Pressure Actuator. Refer to the "Replacing the Filter in Series 776 Low-Pressure Actuators (Dry Pilot Release Systems)" section.
	The Series 776 Low-Pressure Actuator has a ripped diaphragm.	If water still leaks through the Series 776 after performing the above procedures, contact Victaulic.
No water is passing through the Series 776 Low-Pressure Actuator.	The strainer in the priming manifold is clogged.	Disassemble and clean the priming manifold strainer. Refer to the "Cleaning the Cartridge in the Air and Priming Manifold Assemblies" section.


TROUBLESHOOTING - SOLENOID VALVE

Problem	Possible Cause	Solution
No water is passing through the solenoid valve.	The cartridge in the priming manifold is clogged.	Disassemble and clean the priming manifold cartridge. Refer to the "Cleaning the Cartridge in the Air and Priming Manifold Assemblies" section.
The solenoid valve does not open.	Power is not being supplied to the solenoid valve.	Check all electrical connections to verify power is being supplied to the solenoid valve. If there are still issues with power being supplied to the solenoid valve, a qualified fire alarm control specialist shall verify that the fire alarm control panel is configured correctly.
	Solenoid coil has been removed from the valve.	Reinstall the coil to the solenoid valve.

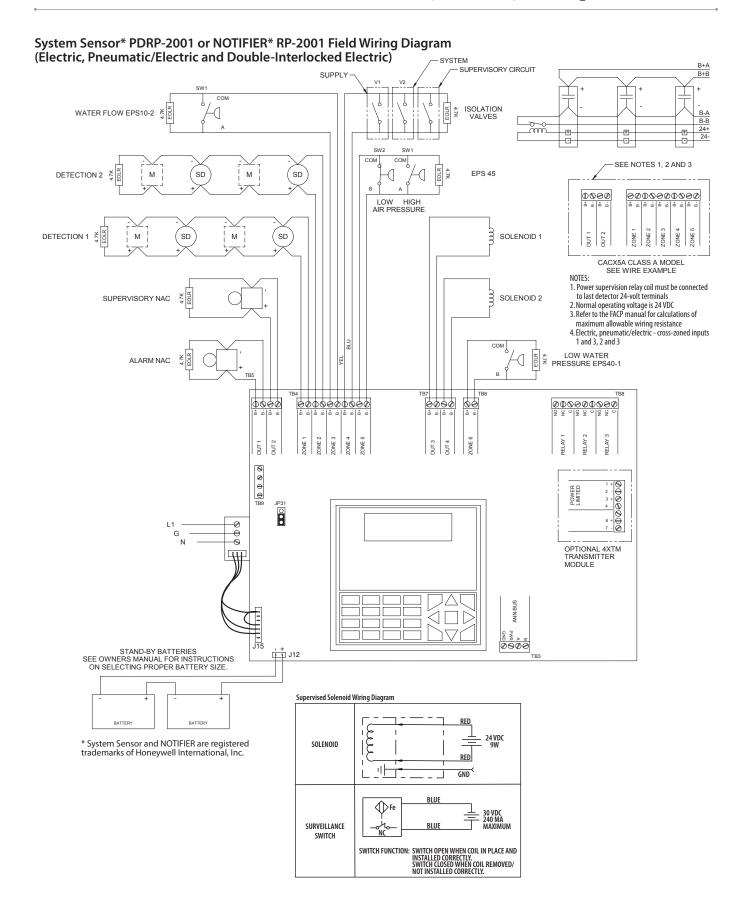

I-769N.Preaction_39

System Sensor* PDRP-2001 or NOTIFIER* RP-2001 Field Wiring Diagram (Double-Interlocked Electric-Pneumatic/Electric, Cross-Zoned with Low-Air Switch)

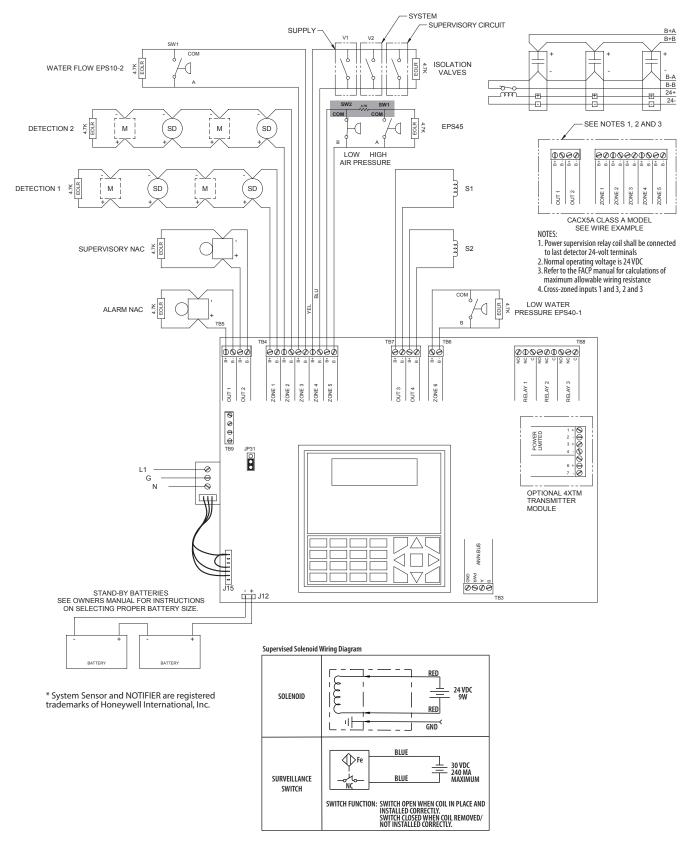

SAMPLE PROGRAM FOR SYSTEM SENSOR* PDRP-2001 OR NOTIFIER* RP-2001 PANEL (DUAL OR SINGLE HAZARD)

SYSTEM SETUP

NOTE: Pull All IDC Connections at Panel to Enter Program Mode

Select Template 9

- 1. Press "MODE"
- 2. 2=PROGRAMMING MODE
- 3. Enter Password "00000"
- 4. 1=FACP CONFIGURATION
- 5. Press √ x 3
- 6. 3=TEMPLATE 9
- 7. 1=YES
- 8. Panel Resets Automatically

Make the Following Changes

Edit Zone 4

- 1. Press "MODE"
- 2. 2=PROGRAMMING MODE
- 3. Enter Password "00000"
- 4. Press

 to 3= SYSTEM SETUP
- 5. Select 2=TIMERS
- 6. Select 1=SOAK 1
- 7. Select 1=ALWAYS ON
- 8. Return To Main Programming Menu
- 9. Press 2=INPUT ZONES
- 10. Press ↓ x 1
- 11. 1=ZONE 4
- 12. Press ↓ x 1 to Edit
- 13. 2=TYPE
- 14. Press ↓ x 8
- 15. 1=SUPERVISORY AR
- 16. Press "ESC"
- 17. Press ↓ x 2
- 18. 2=DESCRIPTION
- 19. Enter "ISOLATION VALVE"
- 20. Press "ENTER"
- 21. Press "ESC"

Edit Zone 5

- 1. Press 2=INPUT ZONES
- 2. Press ↓ x 1
- 3. 2=ZONE 5
- 4. Press ↓ x 1 To Edit
- 5. 2=TYPE
- 6. Press ↓ x 8
- 7. Select COMBO SUPERVISORY AR
- 3. For Double Knock

TYPE=COMBO SUPERVISORY AR

1.2K Ohm Resistor Shall be Placed

- 1. Press "ESC"
- 2. Press ↓ x 2
- 3. 2=DESCRIPTION
- 4. Enter "HIGH/LOW AIR"
- 5. Press "ENTER"
- 6. Press "ESC"

Edit Zone 6

- 1. Press 2=INPUT ZONES
- 2. Press ↓ X 1
- 3. Press 3=ZONE 6
- Press ↓ x 1 to Edit
- 5. 2=TYPE
- 6. Press ↓ x 8
- 7. 1=SUPERVISORY AR
- 8. Press "ESC"
- 9. Press ↓ x 1
- 10. 2=DESCRIPTION
- 11. Enter "LOW WATER PRESSURE"
- 12. Press "ENTER"
- 13. Press "ESC" Several Times Until Program Saves

DOUBLE KNOCK/CROSS ZONE- DETECTION Z1+Z2=RELEASE

- 1. Press "MODE"
- 2. 2=PROGRAMMING MODE
- 3. Enter Password "00000"
- 4. Press ↓ x 1
- 5. Press 1=CROSS INPUT ZONES
- 6. Press 1=RELEASE 1 GROUP
- 7. Press 1=NONE

Zone Selection

- 1. Press 1=ZONE 1 YES
- 2. Press 2=ZONE 2 YES
- 3. Press "ESC" Several Times Until Program Saves

ictaulic

I-769N.Preaction_41 REV_B

^{*} System Sensor and NOTIFIER are registered trademarks of Honeywell International, Inc.

DOUBLE KNOCK/CROSS ZONE DETECTION AND LOW AIR PRESSURE

- 1. Press "MODE"
- 2. 2=PROGRAMMING MODE
- 3. Enter Password "00000"
- 4. Press √ x 1
- 5. Press 1=CROSS INPUT ZONES
- 6. Press 1=RELEASE 1 GROUP
- 7. Press 1=NONE

Zone Selection-Z1+Z5=RELEASE

- 1. Press 1=ZONE 1 Yes
- 2. Press ↓ x 1
- 3. Press 2=ZONE 5 Yes
- 4. Press "ESC" Twice

Zone Selection-Z2+Z5=RELEASE

- 1. Press 1=RELEASE 1 GROUP
- 2. Press 2=NONE
- 3. Press 2=ZONE 2 Yes
- 4. Press ↓ x 1
- 5. Press 2=ZONE 5 Yes
- 6. Press "ESC" Several Times Until Program Saves

INPUT/OUTPUT DIAGRAMS

DUAL OR SINGLE HAZARD

	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4
INPUT 1	x		х	x
INPUT 2	х		Х	Х
INPUT 3	х			
INPUT 4		х		
INPUT 5		х		
INPUT 6		Х		

ELECTRIC-PNEUMATIC/ELECTRIC

	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4
INPUT 1 & 5	x		х	x
INPUT 2 & 5	х		х	х
INPUT 3	х			
INPUT 4		х		
INPUT 6		Х		

CROSS ZONE/DOUBLE KNOCK SINGLE HAZARD

	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4
INPUT 1 & 2	x		х	х
INPUT 3	х			
INPUT 4		х		
INPUT 5		х		
INPUT 6		Х		

Victaulic® Series 769N FireLock NXT™ Actuated Valve with Preaction Trim

Non-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator

Non-Interlocked Pneumatic/Electric Release with Series 776 Low-Pressure Actuator and 24 VDC Normally-Closed Solenoid Valve

Single-Interlocked Pneumatic Release with Series 776 Low-Pressure Actuator

Single-Interlocked Electric Release with 24 VDC Normally-Closed Solenoid Valve

Double-Interlocked Electric (Electric-Pneumatic/Electric) Release with 24 VDC Normally-Closed Solenoid Valve

Electric Release with 24 VDC Normally-Closed Solenoid Valve and Redundant Solenoid Valve



PREACTION-PAC™

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.0 – JUNE 2025

SECTION 3

General Air Products Manual

Riser and Tank Mounted
Oilless Air Compressors
Installation, Operation and
Maintenance Manual



OL Plus & OLT Plus Series

Riser and Tank Mounted Oilless Air Compressors

Installation, Operation and Maintenance Manual



Call **1-800-345-8207**

or visit our web site for our complete product listing

www.GeneralAirProducts.com

Table of Contents

Section 1 - Safety & Warnings

- 1.1 Safety Guidelines
- 1.2 General Information
- 1.3 General Safety Information
- 1.4 Safety Notes

Section 2 - Receiving

Section 3 - Installation Location

Section 4 - Mounting

Section 5 - Lubrication

Section 6 - Piping

- 6.1 Piping Instructions
- 6.2 OL Plus Series Riser Mounted Oilless Air Compressor Installation Drawing
- 6.3 OLT Plus Series Tank Mounted Oilless Air Compressor Installation Drawing

Section 7 - Wiring

- 7.1 Wiring Instructions
- 7.2 Oilless Air Compressor Single & 3 Phase Wiring Drawing

Section 8 - Maintenance Instructions

Section 9 - Troubleshooting Guide

Section 10 - Warranty Policy

If there are any questions regarding installation, operation, or maintenance of this compressor, please call 800-345-8207

IMPORTANT: ALL INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE.

Consult factory for the most up to date version of this manual - 1-800-345-8207.



<u>Section 1 - Safety & Warnings</u>

1.1 Safety Guidelines

This manual contains information that is very important to know and understand. This information is provided for SAFETY and to PREVENT EQUIPMENT PROBLEMS. To help recognize this information, observe the following symbols.



- Danger indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.



- Warning indicates a potentially hazardous situation which, if not avoided COULD result in death or serious injury.



- Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.



- Notice indicates important information, that if not followed may cause damage to equipment.


1.2 General Information

This compressor is intended for installation indoors for use on dry sprinkler systems in accordance with the Standard for Installation of Sprinkler Systems, NFPA 13 and the National Electrical Code, NFPA 70. The compressor should be sized to restore and maintain the air pressure in the sprinkler system in accordance with the requirements in NFPA 13.

1.3 General Safety Information

- 1. Read all manuals included with this product carefully. Be thoroughly familiar with the controls and the proper use of the equipment.
- 2. Follow all local electrical and safety codes as well as National Electrical Codes (NEC), Occupational Safety and Health Act (OSHA), and National Fire Protection Association (NFPA).
- 3. Only persons familiar with these rules of safe operation should be allowed to use the equipment.
- 4. Keep visitors away and NEVER allow children in the work area.
- 5. Wear safety glasses and use hearing protection when operating the unit.
- 6. Do not stand on or use the unit as a handhold.
- 7. **Periodic inspection and test of this equipment is required.** Consult your installer and local codes to meet all requirements.
- 8. Check all fasteners at frequent intervals for proper tightness.

1.4 Safety Notes

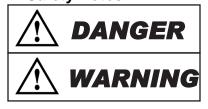

- This compressor is not equipped and should NOT be used "as is" to supply breathing quality air.
- Motors, electrical equipment and controls can cause electrical arcs that will ignite flammable gas or vapor. Never operate or repair in or near flammable gas or vapor. Never store flammable liquids or gasses near the compressor.



- These compressors are suitable for pumping only atmospheric air. As defined in Compressed Gas Association Pamphlet G-7, page 3, atmospheric air is a mixture of elements and compounds where nitrogen and oxygen comprise more than 99% with all other trace gasses comprising less than 1%. **Do not use this compressor in contaminated environments or for pumping mixtures other than atmospheric air**.



- Compressed air contains liquid water and is saturated with water vapor, which can freeze when surrounding temperatures are lower than 32°F (0°C). Component selection to minimize the effects of water vapor must be considered.



<u> Section 2 - Receiving</u>

Your compressor is inspected at the factory and packaged to protect against shipping damage. When the compressor is unpacked, inspect for damage or missing parts. All claims should be settled directly with the freight company.



- Do not operate this compressor if damaged during shipment, handling or use. Any damage may result in failure and cause injury or property damage.

Section 3 - Installation Location

Locate the compressor in a clean, well ventilated area where air is relatively cool, clean and dry. A 110°F (43°C) maximum and 40°F (4.5°C) minimum temperature for surrounding and inlet air are recommended. Provide at least 12 to 18 inches of clearance from any wall or other obstruction that will interfere with airflow over and through the compressor. Blocking airflow through the fan may cause the compressor to overheat. Do not place the compressor in an area of excessive heat, such as near a boiler.

Section 4 - Mounting

OL Plus Series (Riser mounted units) may be mounted to a firm level floor, wall or system riser. A mounting bracket and straps are provided. Tank mounted units must be leveled and anchored to the floor; the vibration isolators (P/N KVP4X4) supplied with the unit must be used. Both tank and riser mounted units are shipped with a flex hose and union. The flex hose (P/N P3002MP) is recommended to be installed between the compressor or tank outlet and service piping.

Section 5 - Lubrication



- This compressor is designed for non-lubricated service. Bearings are permanently lubricated. **Do not lubricate any part of the compressor or motor**.



Section 6 - Piping

6.1 Piping Instructions



- Compressed air contains liquid water and is saturated with water vapor, which can freeze when surrounding temperatures are lower than 32°F (0°C). Component selection to minimize the effects of water vapor must be considered.

Piping between the compressor, accessory items and the sprinkler system must be at least ½" internal diameter to minimize pressure drop from the compressor to system. Larger pipe size may be required by code and may be substituted with no adverse effects.



- Smaller line size must not be used and will restrict the compressor flow, lowering capacity and causing the compressor/motor to work harder, which shortens compressor/motor life. All piping connected to the compressor must be fully supported and not transfer any loads to the compressor.

If an AMD-1 is used, allow sufficient distance between the compressor and AMD-1 to ensure that the maximum temperature at the AMD-1 is 200°F or less.



- When an AMD is used with riser mounted units, a riser mounted tank kit (P/N OLR-TK) is recommended to prevent short cycling the compressor.

All oilless compressors include a relief valve. For riser mounted models, the relief valve is installed on the compressor. For tank mounted models, an ASME Code relief valve is mounted on the compressor tank. This valve will open at a preset value above the pressure switch setting to prevent excess tank pressure in the event of a switch failure.



- Do not attempt to change the safety relief valve setting.

A manual drain is provided on the bottom of each tank mounted compressor. Moisture accumulated in the tank must be drained weekly. An automatic drain, P/N DVA-2T, is recommended in areas of high humidity.

The compressor outlet piping should contain an accessible drain. As a minimum a manual drain may be used, but an automatic drain is recommended to remove excess water.




- Accumulation of condensed water in the system can cause corrosion of components and reduction of system capacity.



- Warranty is void if a separate check valve is not installed to prevent water backflow to compressor.


Section 6 - Piping

6.2 OL Plus Series Riser Mounted Oilless Air Compressor Installation Drawing

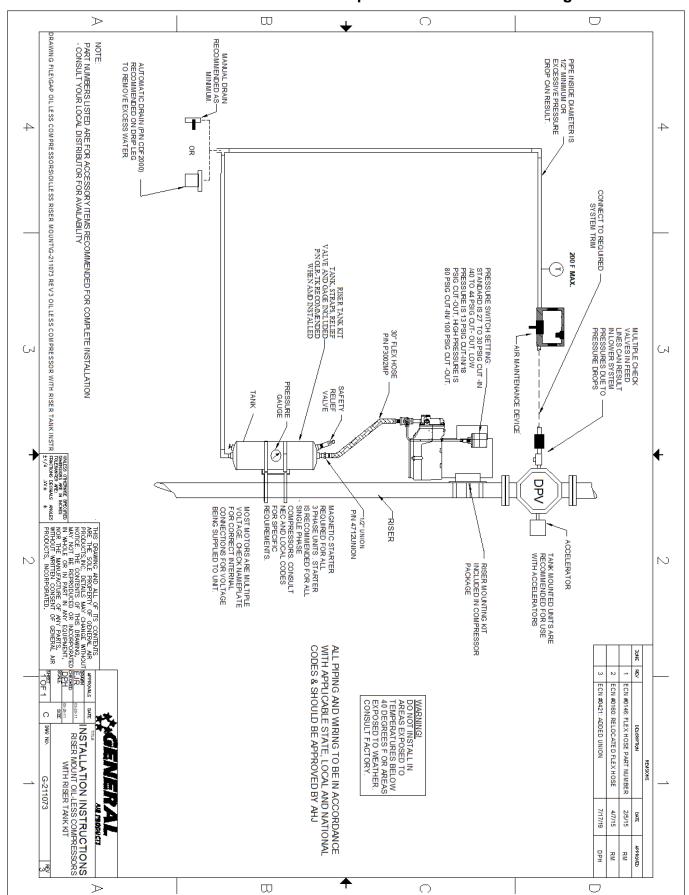

Section 6 - Piping

6.3 OLT Plus Series Tank Mounted Oilless Air Compressor Installation Drawing

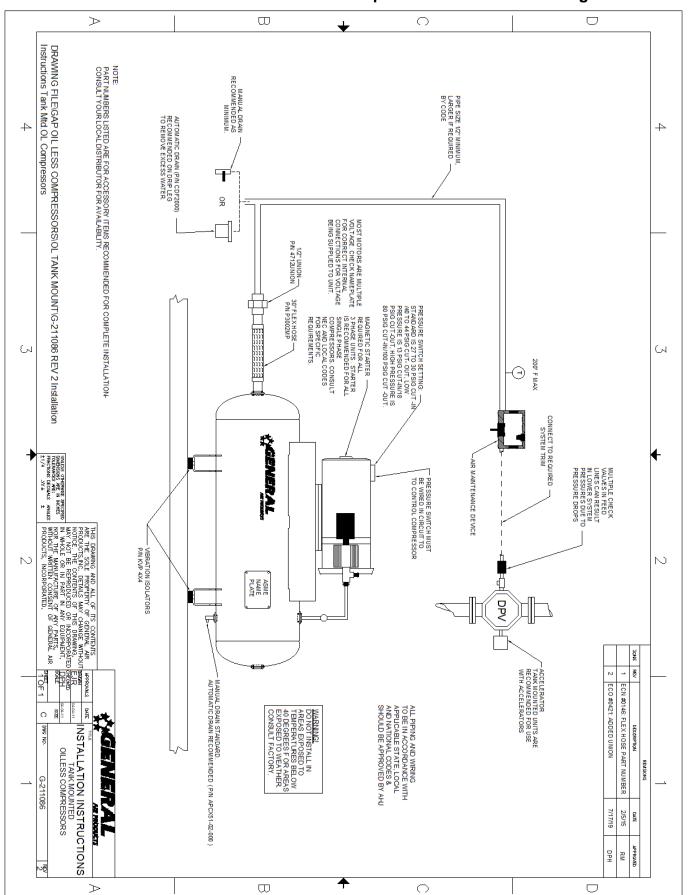

Section 7 - Wiring

7.1 Wiring Instructions









- Wiring should be in accordance with the national electrical code and any local codes or regulations. Have a licensed and competent electrician ensure that the voltage supplied matches the compressor voltage.
- Inadequate wiring size can cause insufficient voltage at the compressor during start-up. Overheating and damage can result to the motor and controls.
- Failure to use the pressure switch may result in overpressure of the compressor or other components in the system. Overpressure of the compressor can result in blown head gaskets or other damage.
- Grounding Instructions: This product must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding terminal or lead on the product.

The supply wire must be of adequate size and no other equipment should be connected to the same line. The adjacent table lists the recommended wire size for each model based on a 100' run and lowest operating voltage. Consult factory for longer runs. The motors supplied are multiple voltage motors. A label on the pressure switch cover indicates the voltage the motor is pre-wired for. If the supply voltage, on site, is different from the voltage indicated on this label, change the internal motor voltage connections to match the supply voltage. To change internal voltage connections, remove the cover plate located on the rear or side of the motor and reconnect the wire leads as shown on the motor's wiring diagram.

On all three phase compressors an arrow on the motor indicates the required direction of rotation of the compressor. If the compressor rotates in the opposite direction, reverse the rotation of the motor. Interchanging any two incoming supply wires reverses rotation of three phase motors.

Minimum Recommended Wire Size				
Model #	1 Phase	3 Phase		
OL(T)12516**	12	N/A		
OL(T)25033**	12	N/A		
OL(T)36550**	12	12		
OL(T)43075**	10	12		
OL(T)615100**	6	12		
OL(T)915150**	6	12		
OL(T)1225200**	10	10		
OL(T)32016**-LP	12	N/A		
OL(T)55033**-LP	12	N/A		
OL(T)86050**-LP	12	12		
OL(T)99075**-LP	10	12		





- Single-phase motors include internal thermal overload protection, which has an automatic reset device.
- Disconnect electrical power before servicing to disable reset devices. Thermal protection can automatically start the motor when the protector resets.

On single phase models, the motor is pre-wired to the pressure switch provided, which controls starting (cut in pressure) and stopping (cut out pressure) of the motor. The pressure switch is factory set. Standard models switch is set at 27 to 30 psig cut in and 40 to 44 psig cut out. Low pressure models ("-LP") switch is set at 13 psig cut in and 18 psig cut out. Consult General Air Products before adjusting the pressure switch.


On three-phase compressors, the motor is not pre-wired to the pressure switch. Refer to the three phase wiring instruction drawing for recommended wiring. A motor starter is required, for all three phase models, to protect the motor from overload conditions to meet NEC, NFPA70, Article 430. A motor starter is recommended, for all single phase models. Consult the National Electric Code and local codes for motor starter requirements. Refer to the proper wiring instruction drawing for recommended wiring to a starter.




- Do not run two phases of a three phase supply through the pressure switch. Serious damage can result. Warranty is voided if connected this way.

Section 7 - Wiring

Convert Pressure Switch from 115V to 230V

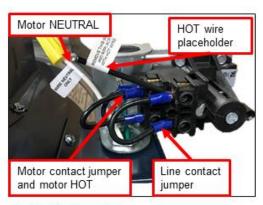


1. Identification of wires.

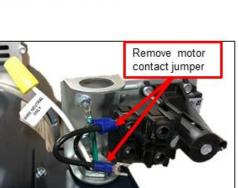


3. Remove motor contact jumper, leaving motor HOT in terminal. Retighten motor HOT wire in terminal.




5. Crimp a spade connector onto NEUTRAL wire

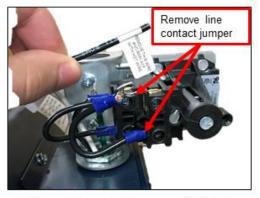

2. Remove line contact jumper and HOT wire placeholder.

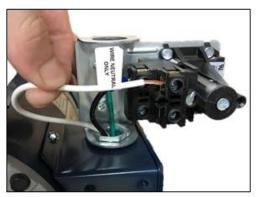

Remove yellow wire nut from motor NEUTRAL.

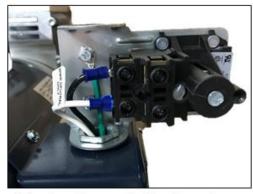


Insert spade connector into other motor terminal. Use wiring diagram on side of motor to wire it for 230V.

7. Wire supply line 1 and line 2 to line contacts of pressure switch.

Section 7 - Wiring

7.2 Oilless Air Compressor Single & 3 Phase Wiring Drawing

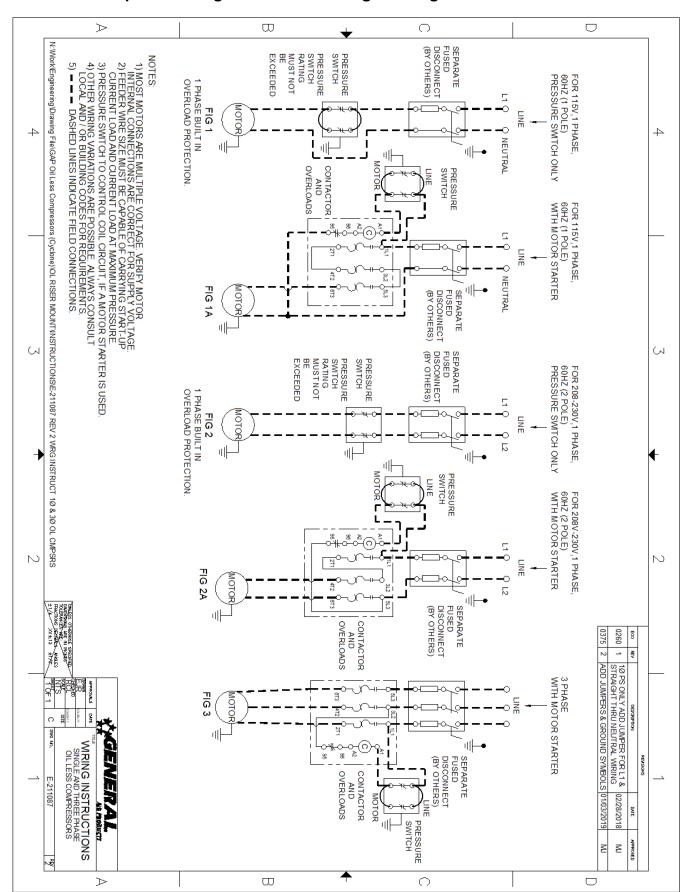

Section 8 - Maintenance Instructions



- Disconnect, tag, and lock out power source then release all pressure from the system before attempting to install, service, relocate, or perform any service.

The following instructions are based on normal operation. If the compressor is in an excessively dusty area, increase frequency of maintenance checks.

Weekly:

- Drain condensate from receiver and traps
- Check for unusual noise or vibration
- Clean air filters (only with non-petroleum based products)
- Clean all external parts of the compressor and motor

Monthly:

- Manually test safety relief valve
- Inspect air system for leaks
- Tighten fitting, nuts, and screws as required

Quarterly:

Change filters

Warranty can be voided if modifications or adjustments are made without consultation and approval from factory personnel.

If there are any questions regarding installation, operation, or maintenance of this compressor, please call 800-345-8207

Section 9 - Troubleshooting Guide

Symptom	Possible Cause(s)	Corrective Action
Motor hums and runs slowly or not at all.	Low or no voltage Shorted or open motor winding Defective check valve Defective pressure switch - contacts will not close	 Check voltage during start. Voltage must be within +/- 10% of nominal voltage to start motor. Increase wire size if necessary, to lower voltage drop. Replace compressor Replace check valve Repair or replace pressure switch
+/- 10% of nominal voltage 1. Insufficient voltage to motor Reset mechanism cuts out or fuses blow repeatedly 1. Insufficient voltage to motor 2. Pressure switch set too high 3. Wrong fuse size 4. Piping too restrictive +/- 10% of nominal voltage wire size if necessary, to log 2. Consult factory, adjust of 3. Be sure fuses, heaters approperly rated or set		4. Add receiver vessel or increase pipe volume after compressor
Unit short cycles repeatedly	Piping too restrictive Air leaks	Add receiver vessel or increase pipe volume after compressor Repair leaks
Compressor overheating	Dirty intake filter Wrong motor rotation Air flow to fan blocked	Clean intake filter Correct rotation Clean air flow to fan or relocate unit
Excessive noise in operation	1. Damaged bearings 2. Worn piston cup 3. Broken valves 4. Loose fan 5. Damaged fan guard	Contact General Air Products for technical support by calling 1-800-345-8207
System pressure builds slowly	Compressor sized incorrectly Leaks or restrictions in piping Dirty intake filter	Check system size and compressor sizing Correct leaks and remove restrictions Clean intake filter



Section 10 - Warranty Policy

GENERAL PROVISIONS & LIMITATIONS

General Air Products, Inc. (the "Company") warrants to each original purchaser ("Purchaser") of its new products from the Company or its Authorized Distributor that such products are, at the time of delivery to the Purchaser, made with good materials and workman- ship. No warranty is made with respect to:

- Any product, which has been repaired or altered in such a way, in the Companies judgment, as to affect the product adversely.
- Any product, which has, in the Companies judgment been subjected to negligence, accident, improper storage, improper installation or application.
- Any product, which has not been operated or maintained in accordance with the recommendations of the Company.
- Components or accessories manufactured, warranted and serviced by others.
- 5. Any reconditioned or prior owned product.

Claims for items described in 4. above should be submitted directly to the manufacturer.

WARRANTY PERIOD

The Company's obligation under this Warranty is limited to repair or, at its option, replacing during normal business hours at the designated facility of the Company, any part that in its judgment proved not to be as warranted within the applicable Warranty Period as follows.

COMPONENTS

All non-consumable components are warranted for 12 months from the date of purchase. Consumables are not covered under warranty. The unit must have been installed by either a factory authorized distributor or agent in accordance with the factory recommendations taking into account all other local site conditions not originally noted to the factory. The unit must be operated and maintained in accordance with the Factory recommendations and original design conditions. Failure to provide such proof of the above may void warranty.

LABOR TRANSPORTATION & INSPECTION

The Company will repair or replace any product or part thereof which in the Companies judgment is proved to be not as warranted. Labor costs are not covered under warranty.

All costs of transportation of product, labor or parts claimed not to be as warranted and, of repaired or replaced parts to or from factory shall be borne by purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by the Company, transportation prepaid by Purchaser, to establish a claim under this warranty.

Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period of the product upon which installed to the same extent as if such parts were original components.

DISCLAIMER

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY.

THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO THE PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED.

No statement, representation, agreement, or understanding, oral or written, made by any agent, distributor, representative or employee of the Company which is not contained in this Warranty will be binding upon the company unless made in writing and executed by an officer of the Company.

This warranty shall not be effective as to any claim which is not presented within 30 days after the date upon which the product is claimed not to have been as warranted. Any action for breach of this warranty must be commenced within one year after the date upon which the cause of action occurred.

Any adjustment made pursuant to this warranty shall not be construed as an admission by the Company that any product was not as warranted.

PROMPT DISPOSITION & RETURNS POLICY

The Company will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective within the warranty period. Before returning any product, write or call the distributor, agent or authorized company from which the product was purchased, describing defect and giving date and number of original invoice, as well as proof of Factory supplied consumables and proof of scheduled maintenance. No products will be accepted for return without the Company issuing a "Returned Goods Authorization" (RGA) to the Purchaser and unless accompanied by a properly authorized RGA request form initiated by the Purchaser. Return freight must be prepaid and each returned product must have the RGA number clearly marked on the product. Title and risk of loss pass to buyer upon delivery to the common carrier.

PRODUCT SUITABILITY

Many States, Localities and Countries have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While General Air Products, Inc. attempts to assure that its products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used? Before purchase and use of a product, please review the product application, and national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

REV: 4/22/11

General Air Products, Inc.

118 Summit Drive Exton, PA 19341 P: 610-524-8950 F: 610-524-8965

PREACTION-PAC™

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025


SECTION 4

United Fire Systems UFS-710

NAMD-1
Instruction Sheet

Pressure Maintenance Device for Fire Sprinkler Systems
Model NAMD-1



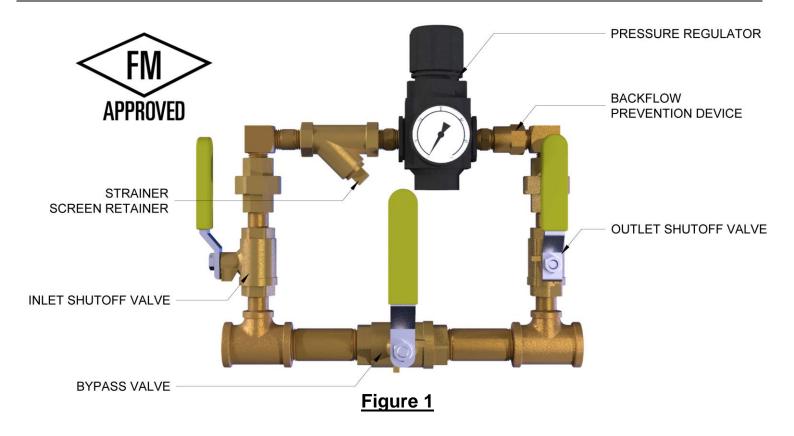

DESCRIPTION

The UNITED Fire Systems Model NAMD-1 is an FM Approved device for controlling the nitrogen and / or air pressure in preaction and dry-pipe fire sprinkler piping. The device is equipped with a high-precision pressure regulator capable of providing accurate regulation over a wide range of inlet pressures and gas flows. This is especially important for sprinkler corrosion inhibiting systems supplying nitrogen to the sprinkler system, since most nitrogen systems provide less gas flow that a conventional air compressor.

SPECIFICATIONS

0. = 0 0	
Model No.:	NAMD-1
Material (other than regulator):	Brass
Material (regulator body):	Zinc
Inlet:	1/2" NPT Female
Outlet:	1/2" NPT Female
Inlet Pressure Range:	0-175 PSIG (0-1200 kPa gauge)
Outlet Pressure Range:	15-60 PSIG (100-410 kPa gauge)
Maximum Pressure:	175 PSIG (1200 kPa)
Temperature Range:	-30°F to +150°F (-34°C to +65°C)
Dimensions (approx.):	9.75" L x 8.25" H (248 mm x 210 mm)
Weight (approx.):	7 lbs. (3.2 kg)

UNITED Fire Systems

Division of United Fire Protection Corporation 1 MARK ROAD KENILWORTH, NJ 07033 USA

PHONE: 908-688-0300 FAX: 908-688-0218

unitedfiresystems.com

This document is provided for informational purposes only. UNITED Fire Systems assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as intended. The information in this document is believed to be correct at the time of publication. UNITED Fire Systems reserves the right to add to, delete, or revise any information in this document without notice.

Pressure Maintenance Device for Fire Sprinkler Systems Model NAMD-1



1. INSTALLATION INSTRUCTIONS – READ AND UNDERSTAND BEFORE INSTALLATION



DO NOT disassemble the Model NAMD-1 device!

- 1.1. Install the **Model NAMD-1** device in the nitrogen / air pressure supply line to the sprinkler valve trim.
- 1.2. UNITED Fire Systems highly recommends installing one (1) Model NAMD-1 device for each sprinkler valve.
- 1.3. The device may be installed in any orientation.
- 1.4. Install the device as close as possible to the sprinkler valve receiving the pressure.
- 1.5. Locate the device in as a convenient place as possible, where the ball valves may be easily operated and the pressure gauge observed.
- 1.6. If the rigidity of the inlet and outlet piping is sufficient, no additional bracketing should be necessary. Otherwise, use standard split ring hangers and hardware to attach the device to the wall or other solid mounting location.



IMPORTANT

The Model NAMD-1 device is designed to operate in one direction only. Refer to Figure 1 to positively identify the INLET and **OUTLET** ports of the device.

- 1.7. Attach the piping from the pressure source to the **INLET** of the device. Piping shall be 1/2" nominal pipe size minimum. Use Teflon tape on the male pipe threads of the pipe only. DO NOT permit pipe thread sealant to enter the device.
- 1.8. Attach the piping from the **OUTLET** of the device to the proper connection point on the sprinkler valve trim. Piping shall be 1/2" nominal pipe size minimum. Use Teflon tape on the male threads of the pipe only. DO NOT permit pipe thread sealant to enter the device.
- 1.9. Proceed to the **COMMISSIONING** instructions below.

2. COMMISSIONING

- 2.1. Ensure all three (3) ball valves on the Model NAMD-1 device are CLOSED.
- 2.2. Determine proper supervisory pressure for the sprinkler valve which the device is connected to.
- 2.3. Pull pressure regulator adjustment knob UP.
- 2.4. Turn pressure regulator adjustment knob COUNTERCLOCKWISE to remove all force from the regulating spring.
- 2.5. Apply nitrogen pressure from sprinkler corrosion inhibiting system to the device inlet.
- 2.6. Leak check the piping from the pressure source to the Model NAMD-1 device. Piping should be as leak-free as possible. Correct all leaks before proceeding.
- 2.7. Gradually open inlet shutoff valve. Pressure gauge on the device pressure regulator should indicate pressure.



When adjusting pressure regulator, always approach the desired adjustment from a LOWER to a HIGHER pressure.

- A. If pressure adjustment (as indicated on device pressure gauge) is LOW, turn pressure regulator adjustment knob CLOCKWISE to increase pressure to desired setting.
- B. If pressure adjustment (as indicated on the device pressure gauge) is HIGH, turn pressure regulator adjustment knob COUNTERCLOCKWISE to reduce pressure 3-5 PSIG below desired setting, then turn knob CLOCKWISE to increase pressure to desired setting.

UNITED Fire Systems

Division of United Fire Protection Corporation 1 MARK ROAD KENILWORTH, NJ 07033 USA

PHONE: 908-688-0300 FAX: 908-688-0218

unitedfiresystems.com

This document is provided for informational purposes only. UNITED Fire Systems assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as intended. The information in this document is believed to be correct at the time of publication. UNITED Fire Systems reserves the right to add to, delete, or revise any information in this document without notice.

Pressure Maintenance Device for Fire Sprinkler Systems Model NAMD-1



2. COMMISSIONING (continued)

- 2.8. Turn pressure regulator adjustment knob clockwise until pressure gauge indicates 2-3 PSIG above the desired supervisory pressure determined in step 2.2.
- 2.9. Gradually open outlet shutoff valve. Nitrogen pressure will reach the sprinkler valve trim.
- 2.10. Leak check the piping from the **Model NAMD-1** device to the sprinkler valve trim. Piping should be as leak-free as possible. Correct all leaks before proceeding.
- 2.11 Check that pressure gauge continues to indicate 2-3 PSIG above supervisory pressure. Adjust if necessary.
- 2.12. Push pressure regulator adjustment knob DOWN.

3. OPERATION

Table 1 – Valve Positions					
MODE	INLET Shutoff Valve	OUTLET Shutoff Valve	BYPASS Valve		
No Gas Supply To Sprinkler Valve Closed Closed Closed					
Initial-Fill With Air	Closed	Closed	OPEN		
Supply System With Nitrogen	OPEN	OPEN	Closed		
DO NOT Operate	OPEN	OPEN	OPEN		

4. INSPECTION AND MAINTENANCE

4.1 Monthly

- 4.1.1 Inspect the **Model NAMD-1** device valve position. Use Table 1 to verify that valve position is in accordance with desired MODE.
- 4.1.2 Inspect the pressure gauge. Verify that indicated pressure is 2-3 PSI above the desired supervisory pressure of the connected sprinkler valve. Refer to **2. COMMISSIONING** if regulator adjustment is required.
- 4.2 Annual At least annually, inspect and clean the device strainer screen.



Ensure that **Model NAMD-1** device is completely depressurized before inspecting and cleaning the strainer screen. Failure to do so can result in death or serious personal injury!



When ball valves have been CLOSED, the nitrogen / air supply is not available to pressurize the sprinkler system piping. Take required precautions to prevent inadvertent sprinkler valve operation. Notify applicable personnel of possible "low air" signals.

UNITED Fire Systems

Division of United Fire Protection Corporation 1 MARK ROAD KENILWORTH, NJ 07033 USA

PHONE: 908-688-0300 FAX: 908-688-0218

unitedfiresystems.com

This document is provided for informational purposes only. UNITED Fire Systems assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as intended. The information in this document is believed to be correct at the time of publication. UNITED Fire Systems reserves the right to add to, delete, or revise any information in this document without notice.

Pressure Maintenance Device for Fire Sprinkler Systems
Model NAMD-1



4. INSPECTION AND MAINTENANCE (Continued)

- 4.2 Annual (Continued)
 - 4.2.1 Ensure there is no pressure present in the **Model NAMD-1** device.
 - 4.2.2 Hold device so that torque applied to strainer screen retainer does not move the device.
 - 4.2.3 Refer to Figure 1. Apply suitable wrench to HEX on strainer screen retainer. Do NOT remove square plug.
 - 4.2.4 Remove strainer screen retainer. Retain for replacement.
 - 4.2.5 Examine rubber seal on strainer screen retainer. If damaged during removal, leakage may occur.
 - 4.2.6 Remove strainer. Empty any loose material, and then flush with clean water. If necessary, use a wire brush to remove trapped particles. Dry strainer screen thoroughly before replacement.
 - 4.2.7 If strainer screen is damaged, replace with new strainer screen UFS P/N 30-500003-401.
 - 4.2.8 Insert strainer screen.
 - 4.2.9 Replace strainer screen retainer, tightening wrench-tight.
 - 4.2.10 See 2. COMMISSIONING to return Model NAMD-1 device to service.
 - 4.2.11 Leak check the strainer screen retainer / strainer body connection. Correct leak if necessary.

Division of United Fire Protection Corporation 1 MARK ROAD KENILWORTH, NJ 07033 USA

PHONE: 908-688-0300 FAX: 908-688-0218

unitedfiresystems.com

This document is provided for informational purposes only. UNITED Fire Systems assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as intended. The information in this document is believed to be correct at the time of publication. UNITED Fire Systems reserves the right to add to, delete, or revise any information in this document without notice.

PREACTION-PAC™

with POTTER 4410G3 RELEASING CONTROL PANEL INSTALLATION, OPERATION, AND MAINTENANCE MANUAL P/N 10-500001-00G VERSION 1.00 – JUNE 2025

SECTION 5

Potter Manual 5403751

PFC-4410G3 Control Panel Installation, Operation, and Instruction Manual

PFC-4410G3 Conventional Releasing Panel

Installation, Operations & Programming Manual





Potter Electric Signal Company, LLC

St. Louis, MO

Customer Service: (866) 240-1870 • Technical Support: (866) 956-1211 • Fax: (314) 595-6999

www.pottersignal.com



WARRANTY INFORMATION

The essential purpose of any sale or contract for sale of any of the products listed in the POTTER catalog or price list is the furnishing of that product. It is expressly understood that in furnishing said product, POTTER does not agree to insure the Purchaser against any losses the Purchaser may incur, even if resulting from the malfunction of said product.

POTTER warrants that the equipment herein shall conform to said descriptions as to all affirmation of fact and shall be free from defects of manufacture, labeling and packaging for a period of one (1) or five (5) year(s), depending on the product, from the invoice date to the original purchaser, provided that representative samples are returned to POTTER for inspection. The product warranty period is stated on the exterior of the product package. Upon a determination by POTTER that a product is not as warranted, POTTER shall, at its exclusive option, replace or repair said defective product or parts thereof at its own expense except that Purchaser shall pay all shipping, insurance and similar charges incurred in connection with the replacement of the defective product or parts thereof. This Warranty is void in the case of abuse, misuse, abnormal usage, faulty installation or repair by unauthorized persons, or if for any other reason POTTER determines that said product is not operating properly as a result of causes other than defective manufacture, labeling or packaging.

The Aforesaid Warranty Is Expressly Made In Lieu Of Any Other Warranties, Expressed Or Implied, It Being Understood That All Such Other Warranties, Expressed Or Implied, Including The Warranties Of Merchantability And Fitness For Particular Purpose Are Hereby Expressly Excluded. In No Event Shall Potter Be Liable To Purchaser For Any Direct, Collateral, Incidental Or Consequential Damages In Connection With Purchaser's Use Of Any Of The Products Listed Herein, Or For Any Other Cause Whatsoever Relating To The Said Products. Neither Potter Nor Its Representatives Shall Be Liable To The Purchaser Or Anyone Else For Any Liability, Claim, Loss, Damage Or Expense Of Any Kind, Or Direct Collateral, Incidental Or Consequential Damages Relative To Or Arising From Or Caused Directly Or Indirectly By Said Products Or The Use Thereof Or Any Deficiency, Defect Or Inadequacy Of The Said Products. It Is Expressly Agreed That Purchaser's Exclusive Remedy For Any Cause Of Action Relating To The Purchase And/or Use Of Any Of The Products Listed Herein From Potter Shall Be For Damages, And Potter's Liability For Any And All Losses Or Damages Resulting From Any Cause Whatsoever, Including Negligence, Or Other Fault, Shall In No Event Exceed The Purchase Price Of The Product In Respect To Which The Claim Is Made, Or At The Election Of Potter, The Restoration Or Replacement Or Repair Of Such Product.

Potter Electric Signal Company, LLC 13723 Riverport Drive, St. Louis, MO 63043 • 314-595-6900 • 800-325-3936

Table of Contents

Section 1: Introduction	
How to Use this Manual	1-4
Common Terminology	1-4
Section 2: Before You Start Installation	2-5
System Specifications	2-5
Environmental Specifications	
Model / Available Cabinet Colors	2-5
System Configurations / Appliances	2-5
Electrical Specifications	
System Size Specifications	2-6
Main Board Wiring Specifications	2-6
Circuit Separation	2-6
Wiring Types	2-6
Cabinet Dimensions	2-8
Cabinet Mounting Instructions	2-9
Cabinet Wiring Connections	2-10
Wiring Connection Terminal Points	2-11
Battery Circuit Calculations	
Battery Connections	2-13
Section 3: Installation	
Initiating Device Circuit Installation	3-14
Output Circuits Installation	3-15
Output Wiring Characteristics	
Output Maximum Wiring Impedance Formula	
Output Wiring Configuration	
Auxiliary Power	
Relay Output Wiring	3-16
Relay Characteristics	
Class A Expander Installation (CA-4064)	3-17
CA-4064 Class A Expander	
PFC-4410G3 Cabinet	3-17
PFC-4410G3 Main PCA	3-19
CA-4064 Class A Expander	3-19
Configuration Characteristics	3-20
Maximum Wire Resistance Formula	
Addressing P-Link Modules	3-22
P-Link Addresses	
Module Installation	3-23
Initiating Device Circuit Module - IDC-6	3-23
IDC-6 Mounting Location	
IDC-6 Mounting Location	
PFC-4410G3 Cabinet	
Setting Address	
IDC-6 Wiring Configuration	
Remote Annunciators Installation	
Dip Switch	3-27

PFC-4410G3 • 5403751 • REV E • 07/24

P-Link Connections	3-27
LED Annunciator Installation (LED-4410G3)	3-28
Relay Board Installation (RLY-5)	
Section 4: Operation	
Control Panel Basic Operation	
Section 5: Programming	
Section 6: Programming Options	
Section 7: Communication Options	7-101
Section 8: Appendices	A-102
Appendix A: System Maintenance and Testing	
Appendix B: Compatibility Table	B-103
Appendix C: Compatible Conventional Smoke Detectors & Bases Table	
Appendix D: Installation Notes	
Appendix E: Operating Instructions for PFC-4410G3 Releasing Panel	E-108

Section 1: Introduction

Safety Guidelines



This manual contains safety information that is important to know and understand. This information is provided for the safety of installers, operators, and users of the Potter releasing panel as well as equipment. To help recognize this information, observe the following symbols.

ADANGER

Danger indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

AWARNING

Warning indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

A CAUTION

Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury

NOTICE

Notice indicates important information, that if not followed may cause damage to equipment or property.

A WARNING

The detection and suppression system employing this release panel must be designed by people trained and competent in the design and layout of fire alarm and/or suppression systems for special hazard locations. The system shall be designed and installed in accordance with all local and national codes and ordinances as well as the approval of the Authority Having Jurisdiction. Only trained, qualified and competent individuals should install, program and/or service the PFC-4410G3. Competent people would be aware of these warnings, limitations, and requirements.

An unqualified person is someone who has not received the specific training to perform the tasks set in this manual, is unable to recognize that a hazard exists and how to avoid that hazard, or who has not shown the demonstrated ability needed to install this device. An employee qualified to perform a specific task may be unqualified to perform other tasks. The characteristics of being qualified and unqualified are task-dependent.

NOTICE

The default programming does not allow the abort circuit to abort the release or stop the pre-discharge timer activated by zones programmed as MANUAL RELEASE. This can be changed in the programming to allow MANUAL RELEASE zones to be aborted.

A WARNING

High voltage electrocution hazard. Do not handle live AC wiring or work on the device while AC power is active.

This manual is designed to help with the specification, installation, and programming of the PFC-4410G3 Release Panel. It is imperative that this manual be completely read and understood before the installation or programming of the panel. Save this manual for future reference.

Zones programmed as MANUAL RELEASE will override any cross zoning features. If it is desired to not have a manual station override the cross zoning, program the zone as DETECTION and map accordingly. That detection zone shall have a maximum 30 second pre-discharge time delay

Per ULC requirements; if this equipment is running on battery power only, it will shut off and cease to operate when the battery voltage reaches approximately 19-20 volts.

A CAUTION

Locate the panel and all system components in the following nominal environment:

- * Temperature 32-120°F, Humidity 93% non-condensing.
- * Verify that the wire sizes are adequate for all initiating, notification, and release circuits.
- * Make certain the panel is properly grounded.
- * Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible make all cable entries from the sides, bottom, or rear of the cabinet. Verify that they will not interfere with the batteries or other components.
- * The panel and system must be tested and maintained in accordance with all local and national codes and ordinances.

NOTICE

Operating Instructions Form

Fill in the name, address and telephone number of the servicing agency on the instruction sheet provided and frame and place adjacent to control panel at eye level.

The following documentation shall be delivered to the owner or their representative upon final acceptance of the system:

- An owners manual and installation instructions covering all system equipment.
- Wiring diagrams
- A detailed description of the programming and operating sequence of the system Cadence and Temporal Patterns
- Programmable to activate on a Supervisory condition

A WARNING

Fire Alarm System Limitations

Smoke detectors may not detect smoke when the smoke does not reach the detector. Such as smoke within walls, on the other side of walls, on other floors, behind closed doors, explosions, etc. Smoke detectors will not operate if they are not properly connected to the fire/release panel. The detectors and bases must be UL listed as being compatible with the panel. The detectors have a visible flashing light that indicates power is supplied to the detectors.

Notification appliances may not alert people if the people are not able to hear or see the appliances such as if they are in separate areas of the building or room.

A fire alarm/release panel will not operate without electrical power. The panel must have sufficient backup battery capability to power the panel for a specified amount of time in the event of an AC power failure. The batteries and release panel shall be tested and maintained in accordance with the testing and maintenance requirements of NFPA 72.

In order for emergency forces, (Fire departments, etc.), to respond to events associated with this panel, the panel must transmit trouble, supervisory, and alarm signals to a monitoring facility either directly or through a main building fire panel.

A problem in an audible or visual device may not be apparent when the panel is in a normal condition.

F.C.C.

This device has been verified to comply with FCC part 15, Class A. Operation is subject to the following conditions:

- 1. This device may not cause radio interference
- 2. This device must accept any interference received including any that may cause undesired operation

CAN ICES-001 (A) / NMB-001 (A)

Design Guidelines

People trained in the design of special hazard systems shall determine the selection and placement of the initiating devices and notification appliances connected to the PFC-4410G3. This responsible party shall also be familiar with the premises being protected.

The equipment shall be installed in accordance with the manufacturers instructions, the applicable version of NFPA 72 and all local codes and ordinances. For systems employing cross zoning of two smoke detectors for the activation of the release circuit, this can include but is not limited to the installation of photoelectric and ionization types of detectors on separate zones. One of each type of detector on separate zones shall be installed in the coverage area selected for a single detector (not to exceed 0.7 times the linear spacing). The detectors would be installed in close proximity to each other.

The responsible party shall also determine the theory of operation regarding the programming sequence.

General Description

The Model PFC-4410G3 is a listed and approved, microprocessor based fire control/releasing panel. It is primarily designed for use as a releasing panel for pre-action and deluge, water based extinguishing systems or for agent extinguishing systems. The PFC-4410G3 may also be used as a stand alone fire control panel. This unit shall be installed in accordance with NFPA-12, NFPA-12A, NFPA-13, NFPA-16, NFPA-16, NFPA-17A, NFPA-72, NFPA-750, NFPA-2001, NFPA 2010 and Canadian Electrical Code Part 1 C22.1, ULC-S524.

The PFC-4410G3 complies with UL Standard 864, ULC S527, FM, CSFM, FDNY, and is RoHS Compliant.

System Features

The PFC-4410G3 has seven (7) conventional programmable initiating zones and is expandable to thirty-one (31) using four (4) IDC-6 cards, each providing six (6) additional programmable input circuits.

- 3.0 Amp (24VDC) power supply
- Four (4) output circuits rated at 3.0A maximum each, 3 Amps total
 - Power Limited
 - Built in Sync
 - Cadence and Temporal Patterns
 - Programmable to activate on a Supervisory or Trouble condition
- Two (2) auxiliary 24VDC Special Application output, rated 19.7-27.2 volts 1A each Power limited, current limited, non-supervised. One programmable, (Resettable for 4-wire smoke detectors), one continuous

NOTE: Continuous AUX output also serves as P-Link power.

- Support for all major synchronization patterns.
 - Gentex®
 - AMSECO®
 - Wheelock®
 - System Sensor®
- Built in standard program templates in panel memory plus custom programing available
- Releasing Zones can be set up for either normal or cross zoning operation
- Auto Silence and Silence Inhibit.
- Built-in Ethernet port for programming and non-listed communication.
- Built-in Email support to communicate system status and event information.
- Customizable Reminder Emails.
- P-Link RS-485 bus supports system accessories.
- 4,000 event non-volatile history buffer
- 99 Software Zones
- 4 X 20 character LCD display
- Four (4) Form C System Relays (Alarm, Supervisory, Trouble, Waterflow/Releasing) rated 3A at 30 VDC resistive
- Dead-front Cabinet Design

P-Link Accessories

- IDC-6 Up to four (4) per system that provides six (6) additional conventional Class B inputs or three (3) Class A inputs.
- CA-4064 Class A converter module Limit of one (1) per system allows for Class A wiring of the P-Link communication bus and the four (4) built-in Output circuits.
- RA-4410G3 Remote Annunciator Up to 31 per system
- LED-4410G3 Annunciator module Up to 10 total per system. Each allows for up to 16 zones alarm, supervisory and trouble conditions to display, and five (5) non-programmable system LEDs that display system's overall condition.
- RLY-5 Relay Board module Up to 31 total per system provides five (5) programmable Form-C relay outputs.
- PSN-1000 Power Supply Expander The panel can be programmed to support up to one (1) PSN-1000 Power Expanders (installed in a single zone).

Optional Accessories

- CA2Z Converts Zone 5-6 from Class B initiating device circuits to two Class A circuits. Not to be used for 4-wire smoke detectors unless approved by local AHJ.
- RCDS-PM1 Provides physical means of disconnecting 1 release circuit in compliance with NFPA 72
- RCDS-PM2 Provides physical means of disconnecting 2 release circuits in compliance with NFPA 72
- ARM-1 Activated by 24VDC Indicating and/or Releasing, polarity reversing circuits. The module provides a non-supervised DPDT Relay that can be used for fan shutdown, door release, elevator recall, etc.
- eMatch Protection Assembly 3005020

How to Use this Manual

Refer to this manual before contacting Technical Support. The information in this manual is the key to a successful installation and will assist you in understanding proper wire routing, system requirements, and other guidelines specific to the PFC-4410G3 system.

Common Terminology

The following table provides you with a list of terms and definitions used with the PFC-4410G3 system:

Table 1: Terminology			
Term Definition			
PFC-4410G3 Cabinet	Enclosure		
EOLR	EOLR End of Line Resistor Assembly		
EOLD End of Line Diode Assembly			
Remote Annunciator LCD type Remote Annunciator			
Output Output, Notification Appliance Circuit, Releasing Circuit			
P-Link Proprietary RS-485 communication bus			
PFC-4410G3 PCB	-4410G3 PCB Board Assembly for complete unit		
RCDS-PM Release Circuit Disconnect Switch, Panel Mount			

Section 2: Before You Start Installation

This section addresses information that will help you in completing a successful installation, such as the PFC-4410G3 cabinet layout, specifications, and environmental considerations.

System Specifications

Cabinet Description

- Eighteen (18) gauge sheet steel with hinged, lockable, removable door and removable full dead-front that can be hung off the bottom of the cabinet when servicing
- Enclosure dimensions 18-1/2" x 14-1/4" x 4-3/4"

Visual Indicators

- 4 x 20 alphanumeric character display showing applicable condition, status, and circuit for all alarm, supervisory, and trouble conditions
- 37 LED indicators (Red, Green, Amber)

LCD Description

- Alarm, Supervisory and Trouble conditions display applicable condition, status and circuit for each correlating condition
- Provides menu driven programming information

Environmental Specifications

- Mount indoors only.
- Temperature 32° to 120°F, humidity 93% non-condensing.
- Verify panel is properly grounded.
- Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make
 all cable entries from the sides, bottom, or rear of the cabinet. Verify that they will not interfere with the batteries or other
 components.
- The panel and system must be tested and maintained in accordance with all local and national codes and ordinances.
- Panel shall be installed so the display is easily readable and the door shall have adequate clearance to access the controls.

Model / Available Cabinet Colors

• 3006735 – RED PFC-4410G3 Conventional Releasing Panel

System Configurations / Appliances

Table 2: System Configurations / Appliances					
Model	Description	Local	Remote Station	Central Station	Releasing Service
PFC-4410G3	Main Board/Panel Assembly	Y	Y	Y	Y
CA-4064	Class A Expander	O	0	О	О
RA-4410G3	Remote annunciator.	0	О	О	О
PSN-1000	Intelligent Power Supply Expander	О	0	0	О
CA2Z	Class A Expander	О	0	0	0
IDC-6	Initiating Device Circuit	О	0	0	0
LED-4410G3	LED Annunciator	О	0	0	0
RLY-5	Relay Expander	О	Y	Y	О
3005013	End of line resistor assembly	Y	Y	Y	Y
3005012	End of line resister and diode	N	N	N	Y
EOLP-D	End of Line Plate f/Diode Assy	О	0	О	О
EOLP-R	End of Line Plate f/Resistor	О	0	О	0

Y = Yes, required for applicable section

N = No, not required for applicable section

O = Optional, may or may not be used, has no affect on the applicable section.

Electrical Specifications

Please refer to the table below for electrical specifications:

Table 3: System Panel Electrical Specifications				
Panel	# Outputs	Rating per Output	Class	
PFC-4410G3	4 Outputs	3.0 Amps	Inputs – Class A* or B Outputs – Class A* or B P-Link – Class A* or B All are Low Voltage and Power Limited	

^{*}With optional equipment

System Size Specifications

Please refer to the table below for system size specifications:

Table 4: System Size Specifications		
Accessories/Subassemblies	Maximum System Size	
PFC-4410G3	 Seven (7) input circuits on the main board Four (4) output circuits on the main board* One (1) auxiliary power output* One (1) P-Link connection* One (1) P-Comm (ethernet) 	
*Note: The Outputs, P-Link and AUX Out combined are <u>not</u> to exceed 3.0A. The P-Link 24VDC and AUX Out each		
are not to exceed 1.0A.		

Main Board Wiring Specifications

There are several wiring requirements to consider <u>before</u> connecting circuits to the main board: (1) the circuit separation, and (2) wiring types. All wiring should be sized and installed to comply with NFPA 70, NFPA 72, and local codes and ordinances.

Circuit Separation

Proper separation between the different types of circuits must be maintained between Power Limited, Non-Power Limited, and High Voltage wiring to reduce electrical interferences, transient voltage or voltage ratings.

- Separations between the different wiring types <u>must</u> be maintained by at least ¼ inch and the wire insulation <u>must</u> be for the higher voltage.
- The control panel cabinet has sufficient knockouts located around the periphery allowing the installer to maintain separation between power limited and non-power limited connections.
- Refer to table 5 for wiring types and Figure 1 wire routing diagram


Wiring Types

Wiring specifications must be followed to prevent damage or other consequences.

Refer to table below for a breakout of the different wiring requirements shown by circuit type:

Table 5: Main Board Circuit Wiring Types			
	Wiring Type		
Type of Circuit	Voltage	Power	
AC Connection	High Voltage	Non-Power Limited	
Battery Connection	Low Voltage	Non-Power Limited	
Input Circuits	Low Voltage	Power Limited	
Notification Appliance Circuits (Output)	Low Voltage	Power Limited	
P-Link/Connection	Low Voltage	Power Limited	
AUX Power	Low Voltage	Power Limited	


Figure 1. PFC-4410G3 Wire Routing

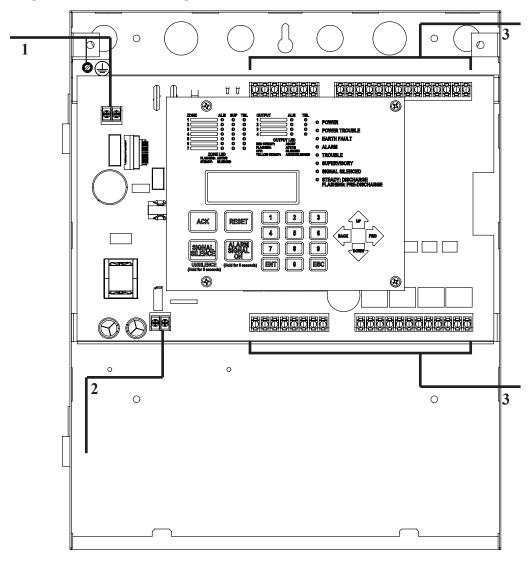


- 1. AC Power Leads
- 2. Battery Leads
- 3. Route all wiring away from AC power wiring and from non-power limited wiring such as battery leads. Use cable clamps if necessary (not included).

Cabinet Dimensions

Figure 2. PFC-4410G3 Cabinet Dimensions

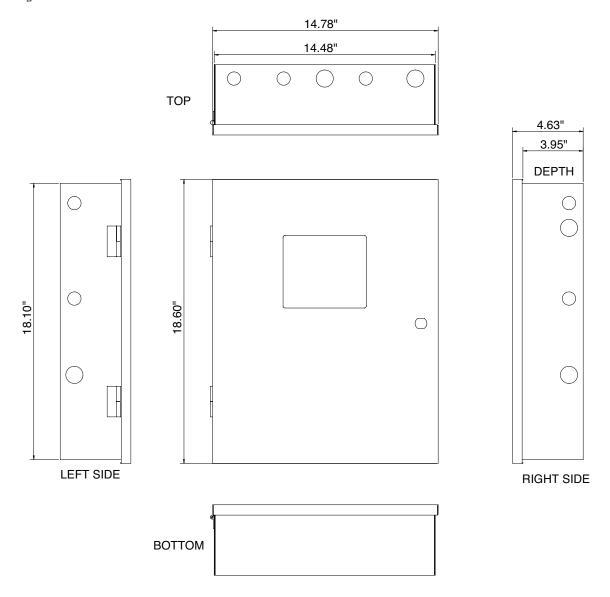

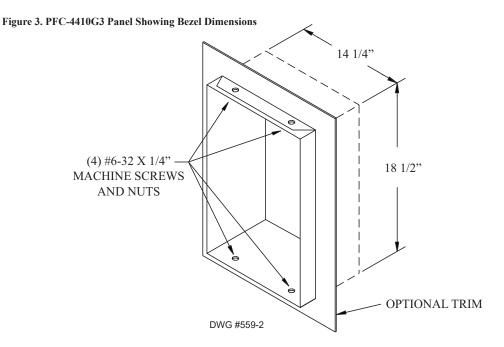


Cabinet Mounting Instructions

To mount the cabinet:

- 1. The unit should be mounted in a convenient location, approximately 5 feet from the floor where it will be accessible for testing and servicing.
- 2. The main circuit board module should be removed before attempting to mount the cabinet. Remove deadfront. Disconnect the AC power from TB1. To remove the module, remove the four corner screws and two bottom center screws (see 12 on Fig. 4) holding the main PCA assembly to the cabinet. Remove the module and set aside (refer to appendix D)
- 3. The PFC unit may be surface mounted or semi-flush mounted using the optional trim bezel (*refer to Fig.3*). For semi-flush installations mount the housing so that the front edge protrudes 1" from the finished wall surface. After all conduits and wiring are in place and the wall surface is completely finished, slide the trim bezel in place and fasten with 4 #6-32 x 1/4" machine screws and nuts.
- 4. Install all required conduits, external wiring and points and make all connections that are external to the panel. Replace the module. With the AC power still turned off at the circuit breaker panel, connect the AC line and neutral to terminal block TB1. Connect ground wire to the green ground screw on bracket. See all indicated locations on Fig. 4 PFC-4410G3 Cabinet Wiring on page 2-10.
- Connect all the other wiring to the terminals as shown in the connection drawings. Turn the AC power on and connect the standby batteries with the cable provided, polarity must be observed.
- 6. Replace dead front panel and secure with mounting screws.
- 7. Verify the operation of the complete system as outlined in the test procedure section.

Cabinet Wiring Connections

Figure 4. PFC-4410G3 Cabinet Wiring --

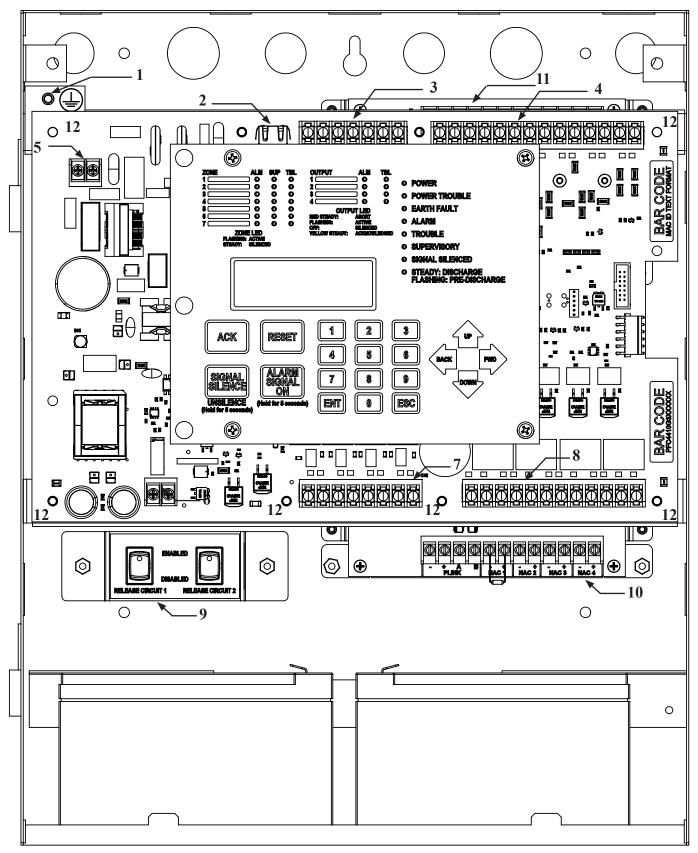

Wiring Connection Terminal Points

1 - Earth Ground 7 - NAC output circuits, power limited **Mounting Hardware**

9 - RCDS-PM (optional)

2 - Ethernet Connection 8 - Relay Contacts to power limited 12- PFC-4410G3 PCB Mounting Screws

3 - P-Link, AUX power, power limited circuit, 30 VDC @ 1A max

limited 10 - CA-4064 Zone Expander (Optional)

5 - AC Supply 120-240 VAC 50/60 Hz 11 - IDC-6 Initiating Device Circuit

6 - Battery Connection Expander (Optional)

Battery Circuit Calculations

4 - Initiating Device Circuits, power

Before selecting the battery, it is important to determine the minimum size batteries for standby and alarm times desired for each application. If the wrong batteries are installed in a specific application or incorrect current draw used, the proper standby and minimum alarm time will not be present.

The battery circuit is rated for 8 to 55 AH batteries and shall be sized to operate the panel for at least 24 hours in standby and 5 minutes in alarm per NFPA 72, (30 minutes in alarm for ULC). The cabinet will house up to two (2) 12 AH batteries. Larger batteries can be installed in SSU-00500 Battery Cabinet (1000015). Please use the battery calculation worksheet to calculate the battery size and current draw required for each application. The worksheet includes a 20% efficiency factor as required by NFPA 72.

Battery Calculation Worksheet

Main board (PFC-4410G3) 1 RA-4410G3 CA2Z for Zones 5 & 6 CA-4064 Class A Expander	100 20 5 15	100	215 30	215
CA2Z for Zones 5 & 6	5		30	
CA-4064 Class A Expander	15		20	
*			60	
PSN-1000 Power Expander	15		15	
LED-4410G3 P-Link Current LED-Current (if applicable, see Note 5) RLY-5	31 15 25		35 210 35	
Relay-Current (if applicable, see Note 5)	10		135	
IDC-6	20		20	
AUX				
P-Link				
Output 1				
Output 2				
Output 3				
Output 4				
	Total (ma)		Total (ma)	
	Convert to Amps	x 0.001	Convert to Amps	x 0.001
(*Refer to maximum allowable standby of the control	x	Total A: 60 minutes per hour Alarm time (minutes) Example: UL 5 minute alarm: enter 12 FM 10 minute alarm: enter 6 ULC 30 minute alarm: enter 2	÷	
To	otal Standby AH		Total Alarm AH	
	<u> </u>		+Total Standby AH	
			Total AH	. 0.00
			Efficiency Factor Required AH	÷ 0.80

*Maximum Allowable Standby Current

	24-Hour Standby Time					
	UL ULC					
8AH	0.16A	0.10A				
12AH	0.29A	0.23A				
18AH	0.49A	0.43A				
33AH	0.99A	0.93A				
55AH	1.72A	1.67A				


Important Notes:

- FACP enclosure can house up to two (2) 12 AH batteries. Larger batteries require accessory cabinet enclosure. Part number 1000015/SSU00500
- NFPA 72 requires 24 hours of standby power followed by 5 minutes of alarm activation (30 minutes of alarm activation for ULC). FM and others may require 90 or more hours of standby.
- 3) Door holder circuits configured to disconnect upon AC loss need not be included in the battery standby calculation since they will not draw power during that time. Door holders will contribute to standby current draw when AC is present.
- 4) Total current must not exceed power supply rating (3A on PFC-4410G3).
- Attached P-Link and AUX OUT devices must be accounted for in the battery calculation for the supplying source.
- Mark the purchase date on the batteries. Test batteries at least semi annually in accordance to the test methods in NFPA 72 or battery manufacturers instructions. Replace batteries if they fail the test or within 4 years of purchase date.

Main Supply Circuit

The AC terminals are located in the upper left hand portion of the main board. The main board supervises the main AC power and provides indication that the AC power is absent. The terminals are rated at 120/240 VAC 50/60 Hz and are labeled "AC POWER" on the board.

Figure 5. PFC-4410G3 AC Terminals

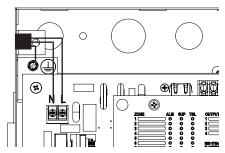

The earth ground connection is marked as " and is separate from the two terminals for Line (L) and Neutral (N) connections.

The AC input power rating is: Maximum of 3.0A at the nominal 120/240V VAC rating.


Battery Connections

The battery charging circuit is located on the main panel in the lower left portion of the board. The battery charging current is 1.0 amp typical; the charging voltage is approximately 27.3 VDC and is supervised.

Note: The battery should be clearly labeled as "Sealed Lead Acid Battery" or equivalent UL listed or UL Recognized.

Connect the battery wire leads to the terminal connections, as shown, observing proper polarity

Figure 6. PFC-4410G3 Battery Connections

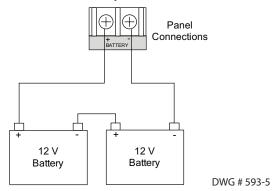

Section 3: Installation

This section covers how to install Input Circuits (IDCs), Notification Appliance Circuits (Outputs) and P-Link modules. Wiring requirements and configuration examples are included throughout this section. Please read this section carefully before installing detectors and accessories to insure proper installation.

Initiating Device Circuit Installation


The panel is equipped with seven (7) programmable contact inputs or Initiating Device Circuits (IDC). They are power-limited and supervised. All inputs are suitable to monitor 2-wire smoke detectors. Smoke detectors shall be installed in compliance with NFPA 72. Inputs can also be used for automatic, manual, waterflow or supervisory service.

Input Wiring Specification

- Maximum short circuit current = 47 mA
- Maximum wiring resistance = 100 Ohms except Linear heat detection cable, 700 ohms per zone
- Maximum wiring capacitance = 30 uF
- Maximum wire length in feet = 10,000 feet
- Normal standby current = 2.5 mA
- Normal standby voltage = 15-29V

IDC Wiring Configuration

Figure 7. IDC Class B Wiring Example

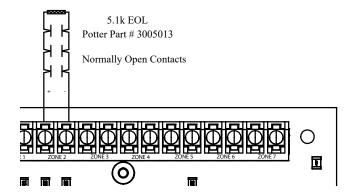

Notes:

- 1. The Potter part number for the listed end of line assembly is #3005013 EOL Resistor Assembly.
- 2. The panel has ground fault detection on the input circuits. The impedance to ground for ground fault detection is 0 ohms.
- 3. The end of line resistor is a 5.1K ohm resistor.

Output Circuits Installation

There are four (4) Output circuits provided on the PFC-4410G3, each rated 3.0 amps continuous at 24VDC. The Output circuits may be configured for Class A or Class B. Class A wiring requires a Class A expansion board (CA-4064). Outputs may be programmed to provide steady (constant) voltage, a cadence pattern, releasing service or synchronized strobes. Full synchronization is maintained system-wide. The Outputs may be programmed as silenceable or non-silenceable.

An Output can be programmed for continuous power while the panel is not in an Alarm condition, such as required for energizing a Door Holder. The Output is considered a special application type, with a maximum output current of 3A.

Output Wiring Characteristics

- Output is supervised and regulated.
- Circuit is power limited.
- Maximum Output current is 3.0 Amps

Note: Type of Output is selectable, and may be configured for strobe synchronization with Gentex®, AMSECO®, Wheelock®, or System Sensor®. Refer to the listing of compatible devices located in the "Output Compatibility Document", Potter #5403592, for this information.


Output Maximum Wiring Impedance Formula

The maximum impedance is a *function* of the *load* placed on the circuit. To calculate the maximum line current impedance, use the following formula:

(Alarm Current of Notification Appliance) x (Wire Resistance) < 3.0 Volts

Output Wiring Configuration

Figure 8. Output Class B Wiring Example

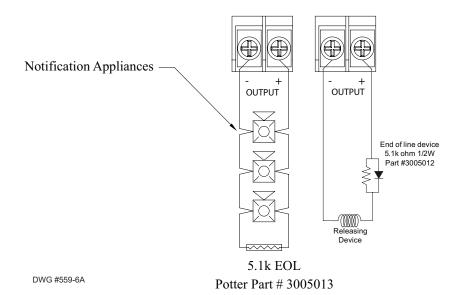


Notes:

- 1. The Potter part number for the listed end of line assembly is #3005013 EOL Resistor Assembly.

 Note: When a NAC is used as a releasing circuit, a Potter End of Line Diode (EOLD) assembly must be installed. The EOLD is Potter part number 3005012 and must be installed in accordance with the installation manual
- The panel has ground fault detection on the Output circuits. The impedance to ground for ground fault detection is 0 ohms.

Figure 9. Class A Output Wiring Example (Requires the CA-4064 Expansion Board)

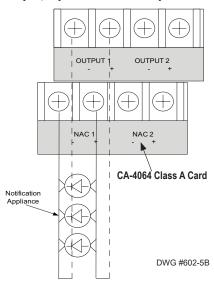


Auxiliary Power

The Auxiliary Power is a Class B 24 VDC special application output rated at a maximum of 1.0 Amp. The auxiliary power may be programmed as continuous or resettable 24VDC power.

Aux Power Characteristics

- The impedance to ground for ground fault detection is 0 ohms.
- Supervised and power-limited.
- Circuit is provided with battery back-up.
- 19.7-27.2 V
- Resettable for 4-wire smoke detectors

Figure 10. Auxiliary Connections Example

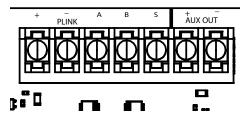


Relay Output Wiring

The panel has four (4) form C system relays: alarm, trouble, supervisory and waterflow. The trouble relay is a fail safe relay that changes position anytime a trouble condition occurs.

Relay Characteristics

- Relays have a contact rating of 3.0 A at 30 VDC Resistive.
- All wiring between relays and the remote device shall be limited to same room installation.

Figure 11. Relay Output Wiring

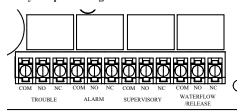

Class A Expander Installation (CA-4064)

Class A wiring configurations require the use of the CA-4064 expander board. Once the card is installed, the CA-4064 provides the return terminals for Outputs and P-Link devices. Refer to the figures below for examples of installing and wiring a Class A expander card.

Figure 12. Example of a Class A Expander Cards Shown Installed

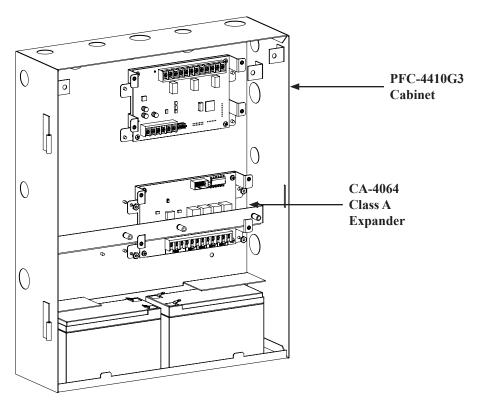


Figure 13. Example of Installing and Wiring a Class A Expander Card

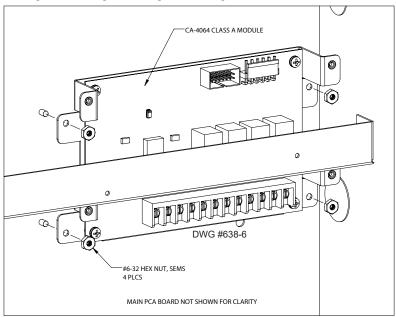


Figure 14. Installed Class A Card

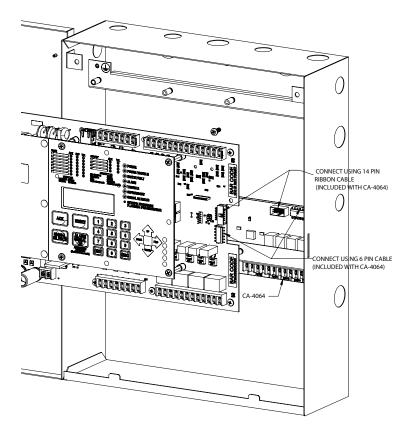


Figure 15. Example of CA-4064 Module Installed Behind Main PCA


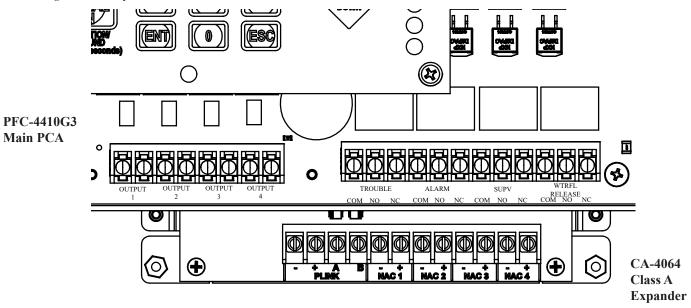


Figure 16. Example of Output Wiring for CA-4064 and Class A P-Link Wiring

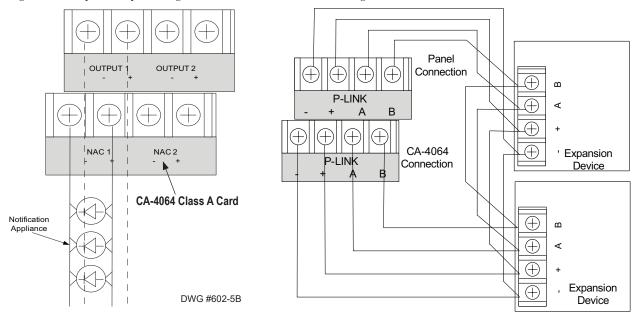

Installation Notes:

- 1. One (1) CA-4064 Class A expander may be installed per panel.
- 2. The CA-4064 provides the terminals for Outputs and P-Link.

P-Link Modules

P-Links modules such as the IDC-6, remote annunciators, and relay expansion boards (RLY-5) are connected to the main control panel utilizing the four-wire P-Link bus for power and communication. This panel supports a maximum of thirty-one (31) P-Link modules, which can be connected using a Class B or Class A wiring (examples are provided throughout this topic).

Note: P-Link Class A wiring requires the installation of a Class A Expander board (CA-4064). Instructions on installing the CA-4064 are included in this section.

Configuration Characteristics

- P-Link maximum current is 1A.
- P-Link voltage rating is 16VDC 27.2VDC Continuous
- P-Link circuit is supervised and power-limited.
- The maximum wire length is 6,500 feet.

Maximum Wire Resistance Formula


The maximum resistance is based on the *load* placed on the circuit. To calculate the maximum wire resistance, use the following formula:

(Total P-Link Devive Current) x (Wire Resistance) < 3 Volts

The worst case P-Link current draw cannot exceed the 1 amp. P-Link wiring gauges and lengths are calculated using the worst-case current draw values from the table below. The worst case current draw numbers are used only for wiring calculations, refer to the battery calculation worksheet for normal standby and alarm currents.


Table 6: P-Link Accessories Worst Case Current Draw (mA)						
P-Link Accessory	Worst Case Current Draw (mA)					
PSN-1000	15					
LED-4410G3	25					
RLY-5	35					
RA-4410G3	31					
IDC-6	20					

Figure 17. P-Link Device Class B, Wiring Example

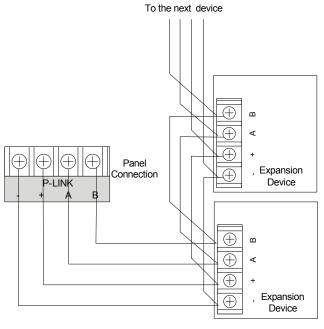

DWG #602-11A

Figure 18. P-Link Device Class A Wiring Example (Requires CA-4064)

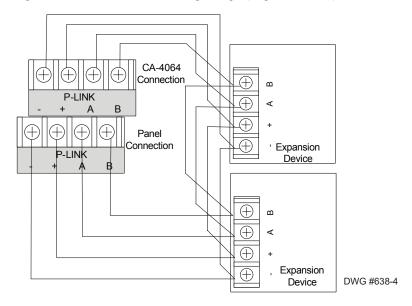

Addressing P-Link Modules

P-Link modules' addresses are set by changing the dip switches located on each device.

P-Link Addresses

Every P-Link device has a five position dip switch which is used to program the device address ranging from one (1) to thirty-one (31). Use the table below to reference Dip Switch Settings:

		Dip Switch Settings							
Address	SW-1	SW-2	SW-3	SW-4	SW-5				
1	On	Off	Off	Off	Off				
2	Off	On	Off	Off	Off				
3	On	On	Off	Off	Off				
4	Off	Off	On	Off	Off				
5	On	Off	On	Off	Off				
6	Off	On	On	Off	Off				
7	On	On	On	Off	Off				
8	Off	Off	Off	On	Off				
9	On	Off	Off	On	Off				
10	Off	On	Off	On	Off				
11	On	On	Off	On	Off				
12	Off	Off	On	On	Off				
13	On	Off	On	On	Off				
14	Off	On	On	On	Off				
15	On	On	On	On	Off				
16	Off	Off	Off	Off	On				

	Dip Switch Settings							
Address	SW-1	SW-2	SW-3	SW-4	SW-5			
17	On	Off	Off	Off	On			
18	Off	On	Off	Off	On			
19	On	On	Off	Off	On			
20	Off	Off	On	Off	On			
21	On	Off	On	Off	On			
22	Off	On	On	Off	On			
23	On	On	On	Off	On			
24	Off	Off	Off	On	On			
25	On	Off	Off	On	On			
26	Off	On	Off	On	On			
27	On	On	Off	On	On			
28	Off	Off	On	On	On			
29	On	Off	On	On	On			
30	Off	On	On	On	On			
31	On	On	On	On	On			

Note: When assigning dip switch addresses, each device must have a unique number within each device type group. For example, a group of LCD annunciators may be assigned 1-10, and PSN-1000 power expansion boards may also be assigned 1-10.


Module Installation

Initiating Device Circuit Module - IDC-6

The panel supports up to four (4) IDC-6 modules. The IDC-6 is controlled over the 4 wire P-Link connection. The IDC-6 mounts in the panel cabinet (up to two (2)) as shown below. It also can be mounted in the AE-2, AE-8 or AE-14 accessory cabinets..

Note: When using an accessory cabinet, the cabinet MUST be mounted within 20 feet of the panel or power supply


Figure 19. IDC-6 Module locations

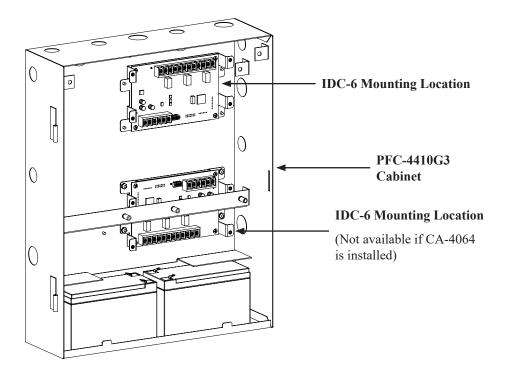

Setting Address

The IDC-6's address is set by **dip switch S1** (as shown below). The address must be set in the range of one to thirty-one (1–31) to be recognized by the panel. (Refer to the "P-Link Addresses" table shown earlier in this section for DIP switch programming.)

Figure 20. IDC-6 Dip Switch locations

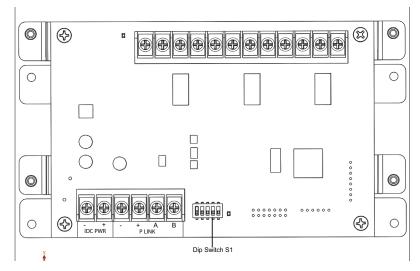


Input Wiring Specification

- Maximum short circuit current = 47mA
- Maximum wiring resistance = 100 Ohms
- Maximum wiring capacitance = 1 mF
- Maximum wire length in feet = 10,000 feet
- Normal standby current = 2.5 mA
- IDC operating voltage range = 15VDC 28VDC

IDC-6 Wiring Configuration

The IDC-6's may be configured and installed as Class B or Class A. Please refer to the following examples:


Figure 21. Example of IDC-6 Class A Wiring

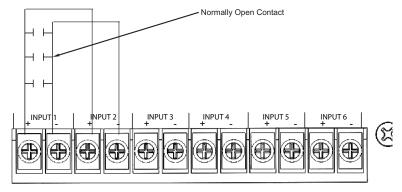

Input Circuit Class A Notes:

- 1. Maximum wiring resistance must not exceed 100 ohms.
- 2. The input has ground fault detection with 0 ohm impedance to ground.

Figure 22. Example of IDC-6 Class B Wiring

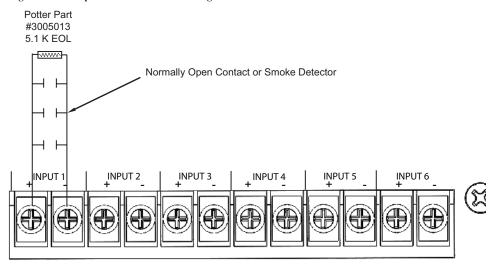

Input Circuit Class B Notes:

- 1. Maximum wiring resistance must not exceed 100 ohms.
- 2. The input has ground fault detection with 0 ohm impedance to ground.
- 3. The Potter part number for the listed end of line assembly is #3005013 EOL Resistor Asssembly.

IDC PWR can be provided by any listed source

Figure 23. Class B P-Link and IDC Power Wiring


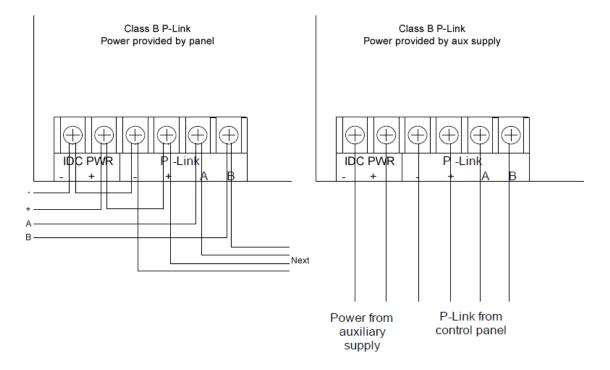


Figure 24. Class A P-Link and IDC Power Wiring

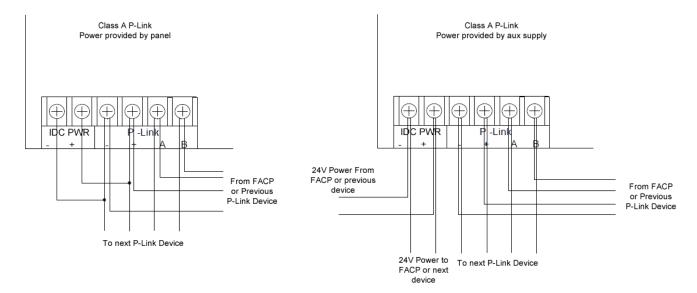


Remote Annunciators Installation

Up to 31 RA-4410G3 annunciators can be connected to the PFC-4410G3. The RA-4410G3 provides the same user interface including the same LED and LCD display and keypad as the main panel.

Setting Addresses

An annunciator's address is set by **dip switch S21**, which is located on the back of the annunciator. The address must be set in the range of one to thirty one (1–31) to be recognized by the panel. (*Refer to the "P-Link Addresses" table*)

Figure 25. Annunciator Back Panel View

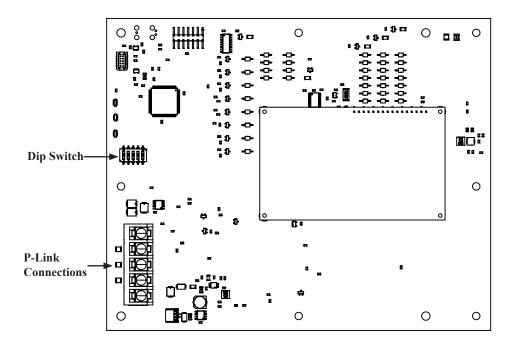

LED Annunciator Installation (LED-4410G3)

The panel supports up to ten (10) LED-4410G3 Annunciators. The LED-4410G3 displays alarm, supervisory, and trouble conditions for up to 16 zones per annunciator. They also provide *Local Silence and Lamp Test* functionality. Blank zone labels are provided for use with the LED annunciators to label each zone name or identifier. The labels may be printed or written on the supplied card-stock, and then inserted into the back of the front panel as shown in the right-most figure below.

Labels are inserted here Figure 26. LED-4410G3 Module Showing Front Panel & Board as needed ALARM ALARM SYSTEM SUPERVISORY TROUBLE SUPERVISORY TROUBLE o Power O EARTH Zone labels will display here o Silenced 000 O ALARM 000 Ф TROUBLE 000 000 LOCAL SILENCE **0** 0 Ф Ф DWG # FIG 2 DWG #608-5

The LED-4410G3 is controlled over the 4-wire P-Link connection. The higher current required for the LED outputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any 24VDC source, and is fully supervised.

Example:
Powered by
control panel

Example:
Powered by
aux supply

Example:
Powered by
aux supply

P-Link from
control panel

Power from
auxiliary
supply

P-Link from
control panel


DWG #608-6

Figure 27. Examples of Wiring LED-4410G3 Module to Control Panel or Auxiliary Power Supply

Setting Addresses

The LED-4410G3 address is set by **dip switch S1.** The address must be set in the range of one to thirty-one (1–31) to be recognized by the panel. (*Refer to the "P-Link Addresses" table*)


Figure 28. LED-4410G3 Panel Showing Dip Switch Location

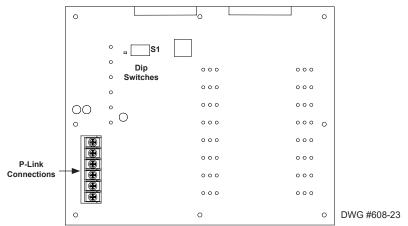

Relay Board Installation (RLY-5)


The panel supports up to thirty-one (31) RLY-5 (Relay Board) modules. Each RLY-5 provides 5 programmable output relays, which can be individually mapped to any zone. The RLY-5 is controlled over the 4-wire P-Link connection. The RLY-5 mounts in a mounting bracket as shown below, and then installed into the panel cabinet, or in either of the AE-2, AE-8 or AE-14 accessory cabinets.

Figure 29. RLY-5 Board Showing Mounting Bracket

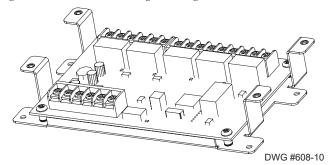

The RLY-5 higher current required for the relay outputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any listed 24VDC source, and is fully supervised.


Figure 30. RLY-5 Wiring to Control Panel /Auxiliary Power Supply Examples & RLY-5 Showing Normally Open/Normally Closed Contacts

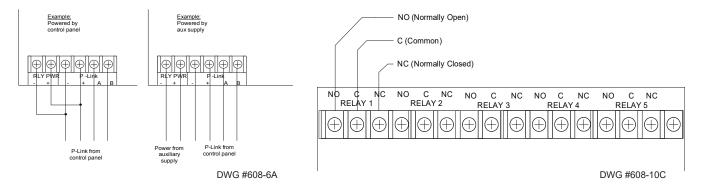

Setting Addresses

The RLY-5's address is set by **dip switch S1**. The address must be set in the range of one to thirty-one (1–31) to be recognized by the panel. (*Refer to the "P-Link Addresses" table*)

Figure 31. Relay Board Panel View Showing Dip Switch Location

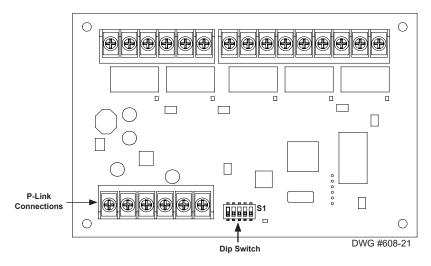


Section 4: Operation

This section provides an overview of the control panel's basic operations, which includes the status LEDs, function pushbuttons, and a Control Panel Menu Tree quick reference sheet.

Control Panel Basic Operation

The control panel is comprised of a four (4) line x 20-character LCD display panel, arrow keys, push button function keys, status LEDS, and the numeric keypad. A description of each component is included in this section; please refer to the figure shown below.

Figure 32. PFC-4410G3 Control Panel Display

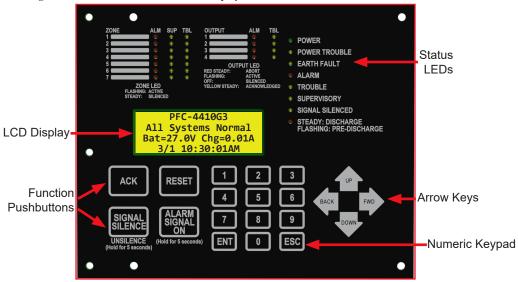

Note: Authorized system operators must use a key to open the outer door of the cabinet.

LCD Display

The LCD panel displays the standard *Start-up menu* as shown below. The LCD displays up to eighty (80) characters of information, providing important feedback to system users, *i.e.*, *system messages*, *status information*, *trouble conditions*, *or input changes*. The LCD also provides access to the Main Menu for daily system operations and specific programming functions.

Figure 33. LCD Start-Up Screen



Note: You may customize the Start-up screen to display a specific job site name or other relevant descriptive text.

• LCD brightness adjustment: Press ZERO and FWD ARROW will increase LCD brightness after reaching full brightness LCD will go to its lowest setting and continue increasing.

Menu Navigation Keys

The **arrow keys** allow you to scroll or move through the control panel menus. The **Ent** and **Esc** keys may also be used to navigate through menus; they are located on the numeric keypad. The table shown below provides a summary of the navigation keys.

	Table 7: Menu Navigation Keys						
Push button	Description						
UP	Moves/scrolls up or down through menus and events						
FWD	Scrolls to the left or right to display details, if any, of current menu item. Note: When the LCD panel displays a LEFT and/or RIGHT arrow, this indicates more information may be viewed.						
ENT	Displays the Main Menu or selects the current menu option. Note: The blinking "→" indicates the current menu option.						
ESC	Returns to previous menu or backs up to previous screen.						

Numeric Keypad

The numeric keypad allows you to enter user codes when required to access restricted functions. Alternatively, the numbers may be used to quickly select menu options vs. using the arrow and Ent keys to select a function.

Figure 34. Control Panel Numeric Keypad



Function Pushbuttons

The four (4) function push buttons are used when system alarm / trouble conditions occur. Refer to the table below for a brief summary of the pushbuttons:

	Table 8: Control Panel Pushbuttons						
Pushbutton	Description						
ACK	Press to <i>acknowledge</i> the currently displayed condition. The panel buzzer will automatically silence after all trouble and supervisory events have been acknowledged						
SIGNAL SILENCE	Press to <i>silence</i> all outputs programmed as <i>silenceable</i> and buzzer. Press and hold for 5 seconds to Unsilence outputs.						
RESET	Press to reset panel to normal condition.						
ALARM SIGNAL ON	Press and hold for 5 seconds to activate alarm signal output circuits Note: Alarm signal activation does not activate outputs classified as second alarms.						

Status LEDs

The control panel's LEDs communicate system conditions by illuminating and/or flashing the applicable **green**, **red** or **amber** indicators. These are described in the table below.

Figure 35. Control Panel System Status LEDs

- POWER
- POWER TROUBLE
- EARTH FAULT
- ALARM
- TROUBLE
- SUPERVISORY
- SIGNAL SILENCED
- STEADY: DISCHARGE FLASHING: PRE-DISCHARGE

	Table 9: System Status LEDs						
LED Type	LED Color/Action	Description					
POWER ON	Steady Green	AC Power is Present Note: If AC power is absent for more than 5 seconds, LED will extinguish.					
POWER TROUBLE	Flashing Amber	Flashes to indicate loss of or low AC power or battery trouble					
EARTH FAULT	Flashing Amber	A ground fault is present.					
ALARM	Flashing Red	An alarm device is active.					
ALARM	Steady Red	All alarm conditions have been silenced					
TROUBLE	Flashing Amber	A fault condition is present					
TROUBLE	Steady Amber	All fault conditions have been acknowledged					
SUPERVISORY	Flashing Amber	A Supervisory condition is present					
SUPERVISORY	Steady Amber	All supervisory conditions have been acknowledged					
SIGNAL SILENCED	Flashing Amber	An activated Output has been silenced					
DISCHARGE	Steady Red	Release output has been activated					
PREDISCHARGE	Flashing Red	Predischarge timer is counting down to discharge/release					

Figure 36. Control Panel Zone / Output Status LED

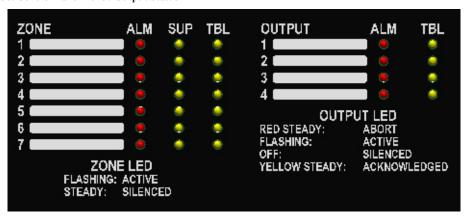


	Table 10: System Status LEDs							
LED Type	LED Color/Action	Description						
TBL	Flashing Amber	Fault condition present						
TBL	Steady Amber	Fault condition acknowledged						
SUP	Flashing Amber	Supervisory condition present						
SUP	Steady Amber	Supervisory condition acknowledged						
Zone ALM	Flashing Red	Alarm zone active						
Zone ALM	Steady Red	Alarm zone silenced						
Output ALM	Flashing Red	Output active						
Output ALM	Steady Red	Output aborted *Available in Agent Release Mode only						

Section 5: Programming

PFC-4410G3 Standard Program Information

The PFC-4410G3 has 28 standard program templates which are detailed on the following pages. Selecting one of these programs will automatically program every function of the panel except custom zone and banner messages.

NOTE:

The release soak time defaults to continuous for all programs.

In the Agent suppression programs, the predischarge timer for detectors defaults to 60 seconds. The predischarge timer for manual stations defaults to 30 seconds. The abort mode defaults to UL.

Default programming allows the activation of a zone programmed as, Manual Release, to override any cross zoning and abort to activate the release output it is mapped to. Abort override can be changed in the panel programming by allowing manual release zones to be aborted.

Default programming does not allow zones programmed as Manual Release to be aborted. This can be changed in the panel programming.

PFC-4410G3 Standard Program Information

Press ENT to enter program mode.

Scroll down to see the various menu options. A blinking arrow — indicates the current option.

Users can also simply enter the option number. See the Menu Tree for a complete list and location of options Follow the on-screen instructions

NOTE: Some options have YES/NO selections. Use the up/down arrows to change selection.

To enter one of the standard programs:

- 1. Press ENT
- 2. Enter 6 or scroll down to PROGRAMMING, indicated by a flashing → and press ENT.
- 3. Enter the password. Factory default password is, 1111.
- 4. Press 1 OR ENT to select PRORGAM NUMBER.
- 5. Enter the desired program number
- 6. Press ENT
- 7. Press 1 to accept the new program
- 8. Press ENT to accept the change and update the panel

All zones and outputs are now programmed and all mapping of zones to correlating outputs is complete.

For abort functionality (available in Agent Release Mode only), pre-discharge or soak timers are required, repeat steps 1-3. Then select the desired option and follow the on-screen instructions.

Modifications to standard programs can only be accomplished using the Potter programming tool.

The following is an explanation of how the various programs operate and information about the types of devices that are to be connected to the input (Initiating) zones and output (NAC) circuits.

If none of the standard programs are acceptable for the operation required, selecting program 0 allows the user to create a custom program. Standard programs can also me modified to create custom programs. Simply select the standard program that is closest to the operation needed. Then selecting program 0 allows the user to make changes to the previously selected program as necessary.

If zone characteristics need to be modified, including latching, output paterns, manual/auto silence behiavior. Repeat steps 1-6 above and select program 0. After the panel restarts to edit zone characteristics repeat steps 1-3 and select 6 ZONES.

The water based extinguishing programs are numbered 1-15 and 30-34. The agent extinguishing programs are numbered 20-24.

To enable Class A on zones 3 or 4:

- 1. Install IDC-6 with address 16 as described on pg. 3-23
- 2. Press ENT
- 3. Enter 8 or scroll down to PANEL SETUP, indicated by a flashing → and press ENT
- 4. Enter the password. Factory default is 1111.
- 5. Enter 2 or scroll down to LEARN MENU, indicated by a flashing \rightarrow and press ENT
- 6. Press 1 OR ENT to select LEARN ALL

The panel will search for connected devices


7. Press 1 or ENT to select P-LINK FOUND to review devices

Addr 16 (IDC-6)

- 8. Press ESC to exit learn all menu
- 9. Press 1 to Accept the new devices
- 10. Press ENT to accept the change and update the panel
- 11. Press ENT
- 12. Enter 8 or scroll down to PANEL SETUP, indicated by a flashing → and press ENT
- 13. Enter the password. Factory default is 1111.
- 14. Enter 7 or scroll down to IDC6 F/CA ZONE 3, indicated by a flashing → and press ENT
- 15. Press any key to accept
- 16. Press ESC to exit PANEL SETUP menu
- 17. Press 1 to Accept
- 18. Press ENT to accept the change and update the panel


Repeat steps 11 – 18 using 8 or scroll down to IDC6 F/CA ZONE 4 to enable class A for zone 4. Zone 3 class A wiring to INPUT 3 / INPUT 4 on IDC-6 address 16 as shown on page 3-24. Zone 4 class A wiring to INPUT 5 / INPUT 6 on IDC-6 address 16. When using standard program templets IDC-6 address 16 INPUTS 1 and INPUT 2 are unused.

Menu Tree

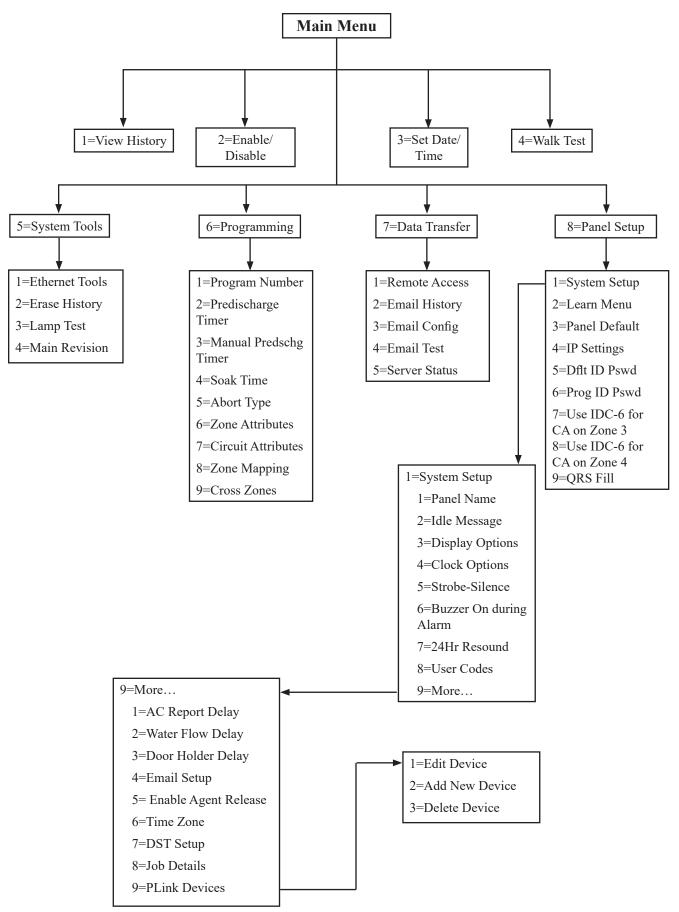

OBSERVE POLARITY

Wiring Diagram Program #1 Single Hazard, 3 Alarm Zones with 1 Waterflow Zone and 2 Supervisory Zones

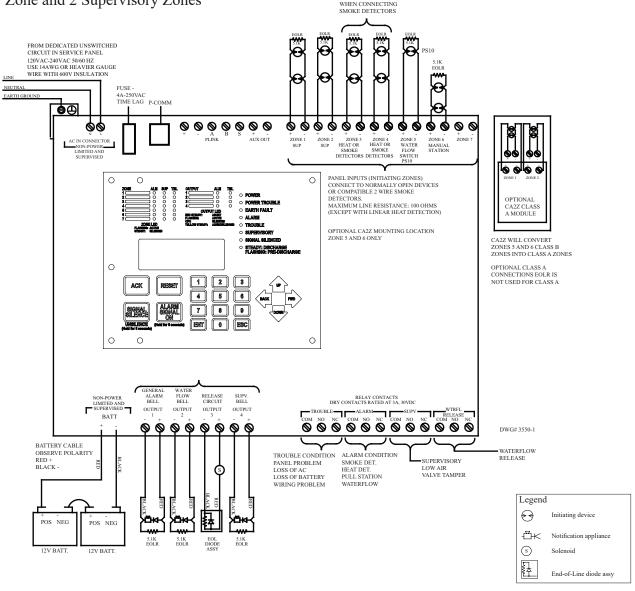

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33 VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information.

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

See Battery Calculation Worksheet for battery information.

Program #1 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 1 to change to program 1. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Non-Interlock or Single Interlock	PROGRAM #1								
Single Hazard, 3 Alarm			CONVE	NTIONAL II	NPUT ZONES				
Zones with 1 Waterflow Zone and 2 Supervisory Zones	#1	#1 #2 #3 #4 #5 #6 #7							
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Waterflow	Manual Release	Unused		
#1 ALARM INDICATING			X	X		X			
#2 ALARM INDICATING					X				
#3 RELEASE		X X X							
#4 SUPERVISORY	X	X							

Description: Single hazard - 3 zone

Inputs: 2 detection zones, 1 waterflow zone, 1 manual release zone, 2 supervisory zones
Outputs: 1 general alarm bell, 1 waterflow bell, 1 solenoid release circuit, 1 supervisory bell

Operation: Activation of either detection zone or the manual release zone will operate the release circuit and general alarm output.


Activation of the waterflow zone will operate the waterflow bell output. Activation of the supervisory zone will operate the supervisory bell output.

When either zone 3, 4, or 6 is in alarm - output #1 (general alarm) and output #3 (solenoid release) will operate.

When zone 5 is in alarm - output #2 will operate (waterflow bell).

When the supervisory zone is activated - output #4 will operate (supervisory bell).

Wiring Diagram Program #2 Single Hazard, 2 Alarm Zones (Cross-Zoned), 1 Manual Station Zone, 1 Waterflow Zone, and 2 Supervisory Zones

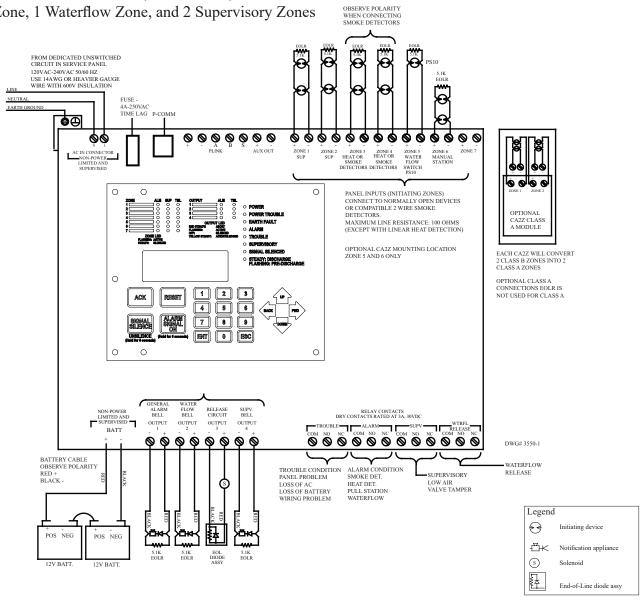

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

See Battery Calculation Worksheet for battery information.

Program #2 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 2 to change to program 2. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2 Alarm		PROGRAM #2						
Zones (Cross-Zoned), 1 Manual Station Zone, 1		Conventional Input Zones						Software Zone
Waterflow Zone and 2 Supervisory Zones	#1							#8
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Waterflow	Manual Release	Unused	Release Zone Type
#1 ALARM INDICATING			X	X		X		X
#2 ALARM INDICATING					X			
#3 RELEASE			XX	XX		X		XX*
#4 SUPERVISORY	X	X						

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single hazard, cross zone with manual station override.

Inputs: 2 detection zones (cross zoned), 1 waterflow zone, 1 manual release zone, 2 supervisory zones

Outputs: 1 general alarm bell, 1 waterflow bell, 1 solenoid release circuit, 1 supervisory bell

Operation: Activation of both detection zones at the same time, or activation of the manual release zone will operate the release

output and the general alarm output.

Activation of one detection zone will operate the general alarm output. Activation of the waterflow zone will operate the waterflow bell output. Activation of the supervisory zone will operate the supervisory bell output.

When zone 3, 4 or 6 is in alarm - output #1 will operate (general alarm bell).

When zone 5 is in alarm - output #2 will operate (waterflow bell).


When both zones 3 and 4 are in alarm at the same time - output #3 will operate (solenoid release).

When zone 6 is in alarm - outputs #3 (solenoid release) and #1 (general alarm) will operate.

OBSERVE POLARITY

Wiring Diagram Program #3

Dual Hazard, Combined Release - 2 Alarm Zones, 1 Manual Station Zone, 1 Waterflow Zone, and 2 Supervisory Zones

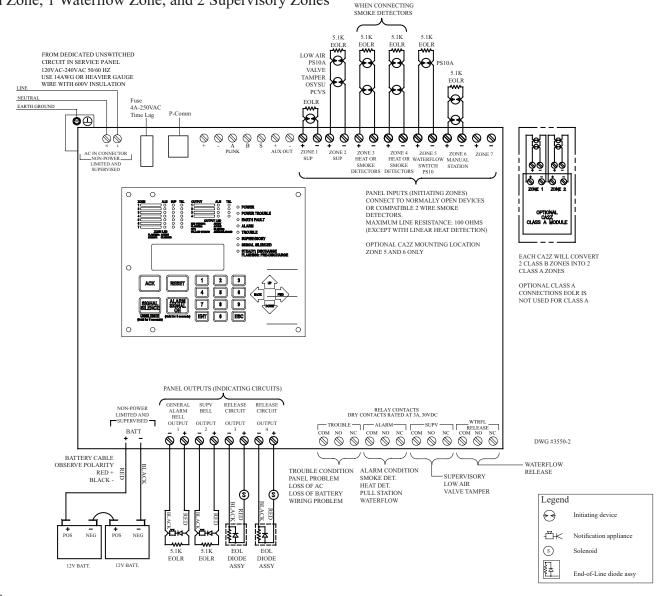

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

See Battery Calculation Worksheet for battery information.

Program #3 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 3 to change to program 3. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Dual Hazard, Combined	PROGRAM #3								
Release - 2 Alarm Zones	CONVENTIONAL INPUT ZONES								
with 1 Manual Release Station, 1 Waterflow Zone and 2 Supervisory Zones	#1	#2	#3	#4	#5	#6	#7		
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Waterflow	Manual Release	Unused		
#1 ALARM INDICATING			X	X	X	X			
#2 SUPERVISORY	X	X							
#3 RELEASE			X	X		X			
#4 RELEASE		_	X	X		X			

Description: Dual hazard, combined release.

Inputs: 2 detection zones, 1 waterflow zone, 1 manual release zone, 2 supervisory zones

Outputs: 1 general alarm bell, 1 supervisory bell, 2 solenoid release circuits

Operation: Activation of either detection zone or the manual release zone will activate both solenoid release outputs and the

general alarm bell.

Activation of the waterflow zone will operate the general alarm bell.

Activation of the supervisory zone will operate the supervisory bell output.


When either zone 3, 4 or 6 is in alarm - outputs #1 (general alarm), #3 and #4 (solenoid release) will operate.

When zone 5 is in alarm - output #1 (general alarm) will operate.

When zones 1 or 2 are activated - output #2 (supervisory bell) will operate.

Wiring Diagram Program #4

Dual Hazard, Split-Release - 2 Alarm Zones, 1 Waterflow Zone, and 3 Supervisory Zones

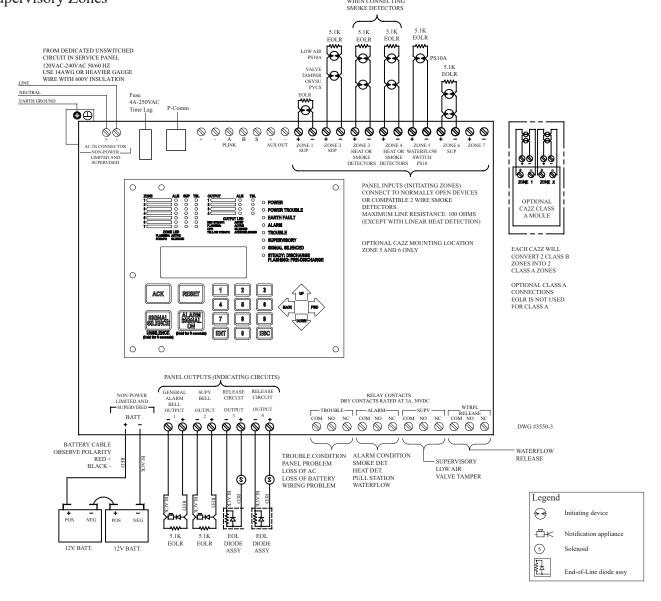

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

See Battery Calculation Worksheet for battery information.

Program #4 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 4 to change to program 4. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Dual Hazard, Split-		PROGRAM #4								
Release -2 Alarm Zones,		CONVENTIONAL INPUT ZONES								
1 Waterflow Zone and 3 Supervisory Zones	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Supervisory	pervisory Supervisory Detection Detection Waterflow Supervisory Unused								
#1 ALARM INDICATING			X	X	X					
#2 SUPERVISORY	X	X				X				
#3 RELEASE			X							
#4 RELEASE				X						

Description: Dual hazard, split release.

Inputs: 2 detection zones, 1 waterflow zone, 3 supervisory zones

Outputs: 1 general alarm bell, 1 supervisory bell, 2 solenoid release circuits

Operation: Activation of detection zone #3 will operate solenoid release circuit #1 (output #3) and the general alarm bell.

Activation of detection zone #4 will operate solenoid release circuit #2 (output #4) and the general alarm bell.

Activation of zone #5 (Waterflow) will operate output #1 (General Alarm). Activation of either supervisory zone will operate the supervisory bell.


When zone 3 is in alarm - output #1 (general alarm) and output #3 (solenoid release #1) will operate.

When zone 4 is in alarm - output #1 (general alarm) and output #4 (solenoid release #2) will operate.

When zones 1, 2, or 6 are activated - output #2 (supervisory bell) will operate.

OBSERVE POLARITY

Wiring Diagram Program #5 Single Hazard with Trouble Bell - 2 Alarm Zones, 1 Manual Station Zone, 1 Waterflow Zone, and 2 Supervisory Zones

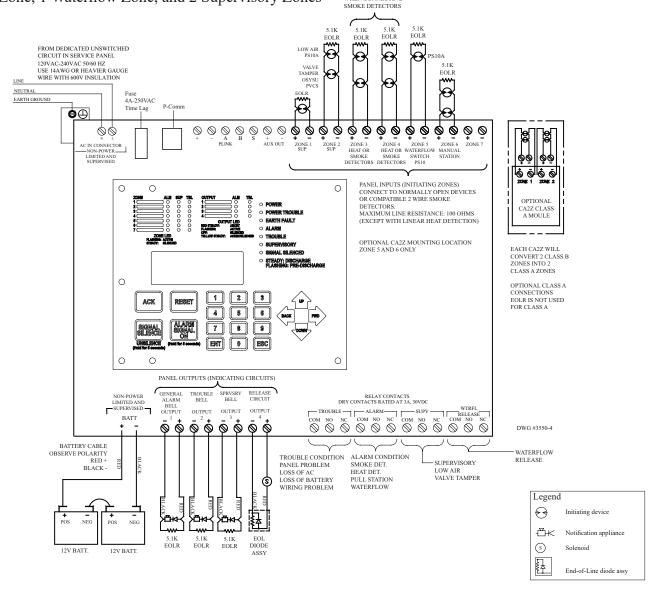

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #5 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 5 to change to program 5. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard with				PROGRA	M #5					
Trouble Bell - 2 Alarm			Conventi	onal Input Zo	nes			Software		
Zones (Cross-Zoned), 1		Continuent input Zonto								
Manual Station Zone, 1 Waterflow Zone and 2	#1	#1 #2 #3 #4 #5 #6 #7								
Supervisory Zones										
OUTPUTS	Supervisory	Supervisory Supervisory Detection Detection Waterflow Manual Unused								
						Release		Туре		
#1 ALARM INDICATING			X	X	X	X				
#2 TROUBLE										
#3 SUPERVISORY	X	X X								
#4 RELEASE			X	X		X				

^{*} Trouble Output need a Software Trouble Zone Type in order to work properly.

Description: Single hazard, 3 zone with trouble bell.

Inputs: 2 detection zones, 1 waterflow zone, 1 manual release zone, 2 supervisory zones
Outputs: 1 general alarm bell, 1 trouble bell, 1 supervisory bell, 1 solenoid release circuit

Operation: Activation of either detection zone or the manual release zone will operate the solenoid release circuit and the

general alarm bell.

Activation of the waterflow zone will operate the general alarm bell. Activation of the supervisory zone will operate the supervisory bell.

A trouble condition (low battery, wire problem, etc.) will operate the trouble bell.


When either zone 3, 4 or 6 is in alarm - outputs #1 (general alarm) and #4 (solenoid release) will operate.

When zone 5 is in alarm - output #1 (general alarm) will operate.

When the supervisory zone is activated - output #3 (supervisory bell) will operate.

When the panel is in a trouble condition - output #2 (trouble bell) will operate.

Wiring Diagram Program #6 Single Hazard, 2 Alarm Zones with 1 Waterflow and 3 Supervisory Zones

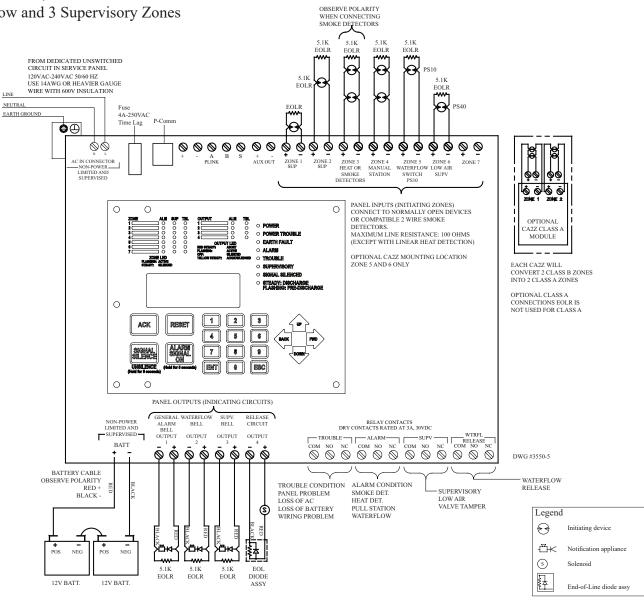

NOTES:

- 1. Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #6 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 6 to change to program 6. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2 Alarm	PROGRAM #6										
Zones with 1 Waterflow		CONVENTIONAL INPUT ZONES									
Zone and 3 Supervisory Zones	#1										
OUTPUTS	Supervisory	Supervisory	Detection	Manual Release	Waterflow	Low Air Supervisory	Unused				
#1 ALARM INDICATING			X	X							
#2 ALARM INDICATING					X						
#3 SUPERVISORY	X	X				X					
#4 RELEASE			X	X							

Description: Single hazard, 2 zones and 2 supervisory zones.

Inputs: 1 detection zone, 1 manual release zone, 1 waterflow zone, 1 low air zone, 2 supervisory zones

Outputs: 1 general alarm bell, 1 waterflow bell, 1 supervisory bell, 1 solenoid release circuit

Operation: Activation of either the detection zone or the manual release zone will operate the solenoid release circuit and the

general alarm bell.

Activation of the waterflow zone will operate the waterflow bell.

Activation of either the low air zone or the supervisory zone will operate the supervisory bell.


When either zone 3 or 4 is in alarm - output #1 (general alarm) and output #4 (solenoid release) will operate.

When zone 5 is in alarm - output #2 (waterflow bell) will operate.

When either zone 1, 2, or 6 is activated - output #3 (supervisory bell) will operate.

OBSERVE POLARITY

Wiring Diagram Program #7 Single Hazard Cross-Zoned, 2 Alarm Zones, 1 Waterflow Zone and 3 Supervisory Zones

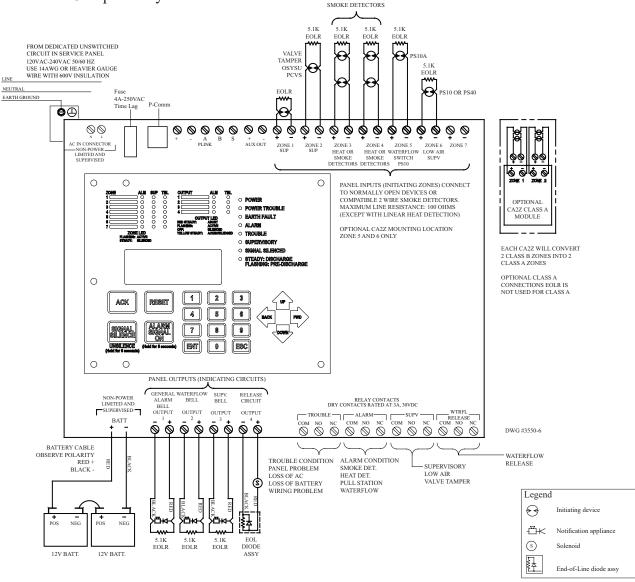

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #7 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 7 to change to program 7. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard Cross-				PROGR	RAM #7	,				
Zoned, 2 Alarm Zones, 1 Waterflow Zone and 3		CONVENTIONAL INPUT ZONES								
Supervisory Zones	#1									
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Waterflow	Low Air Supervisory	Unused	Release Zone Type		
#1 ALARM INDICATING			X	X				X		
#2 ALARM INDICATING					X					
#3 SUPERVISORY	X X X									
#4 RELEASE			XX	XX				XX*		

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single hazard, 2 zones and cross zoned with 2 supervisory zones.

Inputs: 2 detection zones (cross zoned), 1 waterflow zone, 1 low air zone, 2 supervisory zones

Outputs: 1 general alarm bell, 1 waterflow bell, 1 supervisory bell, 1 solenoid release circuit

Operation: Activation of both detection zones at the same time will operate the solenoid release circuit and the general alarm bell.

Activation of either detection zone will operate the general alarm bell.

Activation of the waterflow zone will operate the waterflow bell.

Activation of either the low air zone or the supervisory zone will operate the supervisory bell.


When either zone 3 or 4 is in alarm - output #1 (general alarm) will operate.

When zones 3 and 4 are in alarm at the same time - output #4 (solenoid release) and output #1 (general alarm) will operate.

When zone 5 is in alarm - output #2 (waterflow bell) will operate.

When zone 1, 2, or 6 is activated - output #3 (supervisory bell) will operate.

Wiring Diagram Program #8
Single Hazard Two Detection Zones with 1
Waterflow Zone and 3 Supervisory Zones

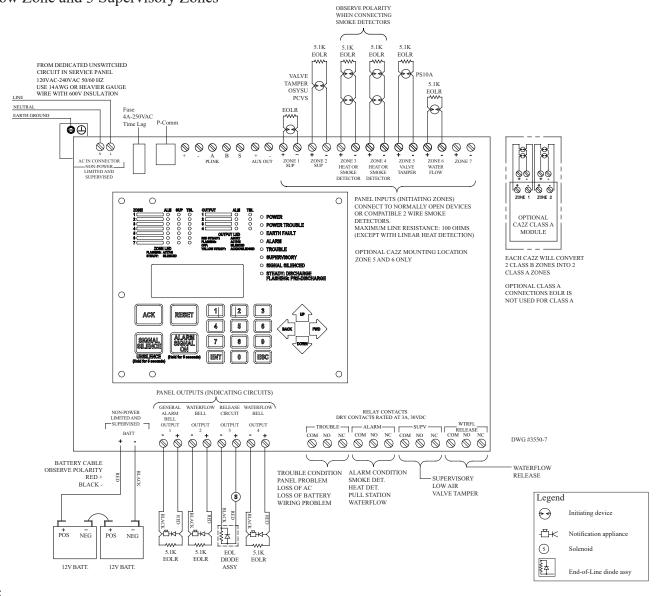

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #8 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 8 to change to program 8. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2 Alarm		PROGRAM #8								
Zones with 1 Waterflow		CONVENTIONAL INPUT ZONES								
Zone and 3 Supervisory Zones	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Supervisory	Low Air Supervisory	Detection	Detection	Value Tamper	Waterflow	Unused			
#1 ALARM INDICATING			X	X		X				
#2 ALARM INDICATING						X				
#3 RELEASE			X	X						
#4 ALARM INDICATING						X				

Description: Single hazard, dual zone.

Inputs: 1 supervisory zone, 1 low air supervisory zone, 2 detection zones, 1 tamper switch zone, 1 waterflow zone

Outputs: 1 general alarm output, 2 waterflow outputs, 1 solenoid release circuit


Operation: Activation of either detection zone will operate the general alarm bell and the solenoid release circuit.

Activation of the waterflow zone will operate the general alarm bell and both of the waterflow bell outputs.

When zone 3 or 4 is in alarm - output #1 (general alarm) and output #3 (solenoid release) will operate.

When either zone 1, 2, or 5 is activated - the panel will be in a supervisory condition, no outputs will be activated. When zone 6 is in alarm - output #1 (general alarm) and outputs #2 and #4 (both waterflow bells) will operate.

Wiring Diagram Program #9 Single Hazard Cross-Zoned, 1 Detection Zone with Low Air Alarm Zone, 1 Waterflow, 1 Low Air Supervisory, and 2 Supervisory Zones

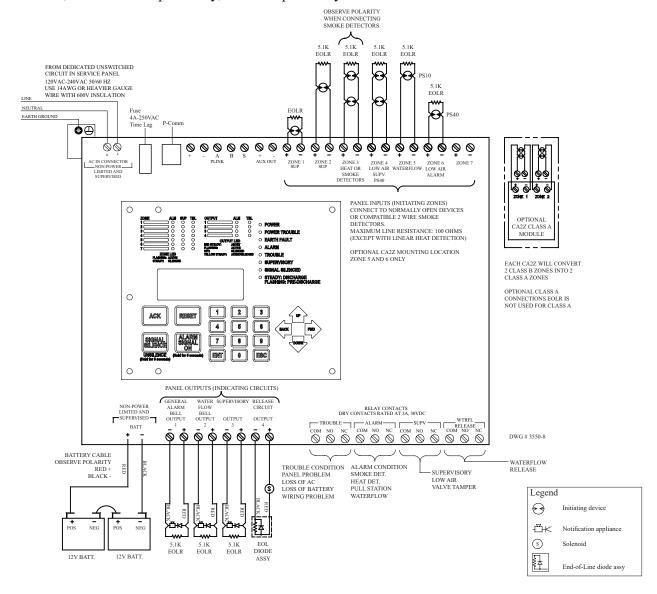

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #9 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 9 to change to program 9. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard Cross-				PROGRA	M #9					
Zoned, 1 Detection Zone with Low Air Alarm Zone,		CONVENTIONAL INPUT ZONES								
1 Waterflow, 1 Low Air Supervisory and 2 Supervisory Zones	#1	#1 #2 #3 #4 #5 #6 #7								
OUTPUTS	Supervisory	Supervisory Supervisory Detection Low Air Supervisory Housed Supervisory Alarm								
#1 ALARM INDICATING			X					X		
#2 ALARM INDICATING		X								
#3 SUPERVISORY	X	X X X X								
#4 RELEASE			XX			XX		XX*		

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single Hazard, detection and low air alarm zones cross-zoned**.

Inputs: 2 supervisory zones, 1 detection zone, 1 low air supervisory zone, 1 waterflow zone, 1 low air alarm zone.

Outputs: 1 general alarm, 1 supervisory, 1 waterflow, 1 solenoid release circuit

Operation: Activation of the detection zone and the low air alarm zone at the same time will operate the solenoid

release circuit and the general alarm bell.

Activation of the detection zone only will operate the general alarm output

Activation of the low air supervisory zone will operate the supervisory bell output.

Activation of the waterflow zone will operate the waterflow bell output

Activation of the low air alarm zone will operate the supervisory bell output. It will not operate the alarm relay

When zone 3 is in alarm, output 1 will operate

When zone 4 is activated, output 3 will operate

When zone 5 is in alarm, output 2 will operate


When zone 6 is activated, output 3 will operate. This will create a supervisory condition not an alarm condition.

The alarm relay will not operate, the supervisory relay will.

When both zones 3 & 6 are activated at the same time, the solenoid release circuit will operate.

^{**}Cross Zoning acceptable for NFPA 13, 15, and 16 type extinguishing systems.

Wiring Diagram Program #10
Single Hazard Cross-Zoned, 2 Detection Zones with 1 Low Air Alarm Zone 1

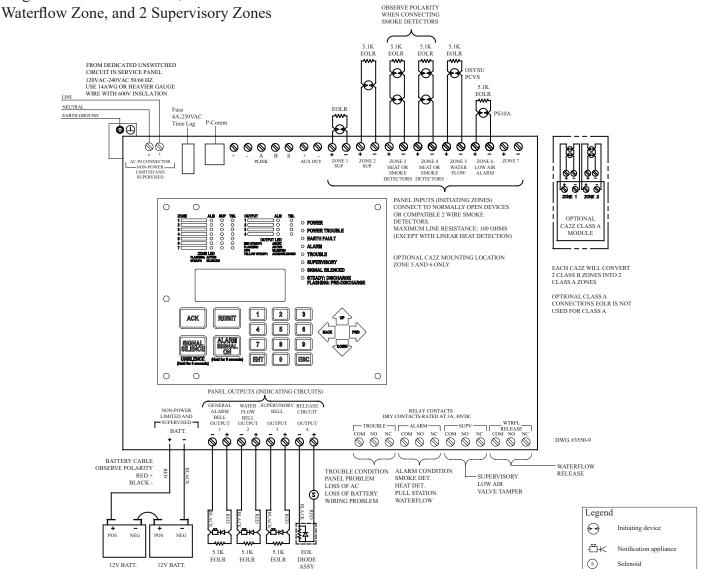

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information.

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

End-of-Line diode assy

See Appendix C for smoke detector compatibility data.

Program #10 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 10 to change to program 10. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard Cross-				PROGRAM	#10				
Zoned, 2 Detection Zone with 1 Low Air Alarm		CONVENTIONAL INPUT ZONES							
Zone, 1 Waterflow Zone and 2 Supervisory Zones	#1	#2	#3	#4	#5	#6	#7	#8	
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Waterflow	Low Air Alarm	Unused	Release Zone Type	
#1 ALARM INDICATING			X	X				X	
#2 ALARM INDICATING					X				
#3 SUPERVISORY	X	X X X							
#4 RELEASE			XX	XX		XX		XX*	

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single Hazard, 2 detection and low air alarm zones cross-zoned**.

Inputs: 2 supervisory zones, 2 detection zone, 1 waterflow zone, 1 low air alarm zone.

Outputs: 1 general alarm, 1 supervisory, 1 waterflow, 1 solenoid release circuit

Operation: Activation of both detection zones and the low air alarm zone at the same time will operate the solenoid release

circuit and the general alarm bell.

Activation of either detection zone only will operate the general alarm output

Activation of the waterflow zone will operate the waterflow bell output

Activation of the low air alarm zone will operate the supervisory bell output. It will not operate the alarm relay

When either zone 3 or 4 is in alarm, output 1 will operate

When zone 5 is in alarm, output 2 will operate

When zone 6 is activated, output 3 will operate. This will create a supervisory condition not an alarm condition.

The alarm relay will not operate, the supervisory relay will.

When zones 3, 4 & 6 are activated at the same time, the solenoid release circuit will operate.


^{**}Cross Zoning acceptable for NFPA 13, 15, and 16 type extinguishing systems.

Wiring Diagram Program #11

Single Hazard Cross-Zoned, 1 Detection Zone with Low Air Alarm Zone 1

Waterflow, 1 Manual Release and 2 Supervisory Zones

Westernoonsecting

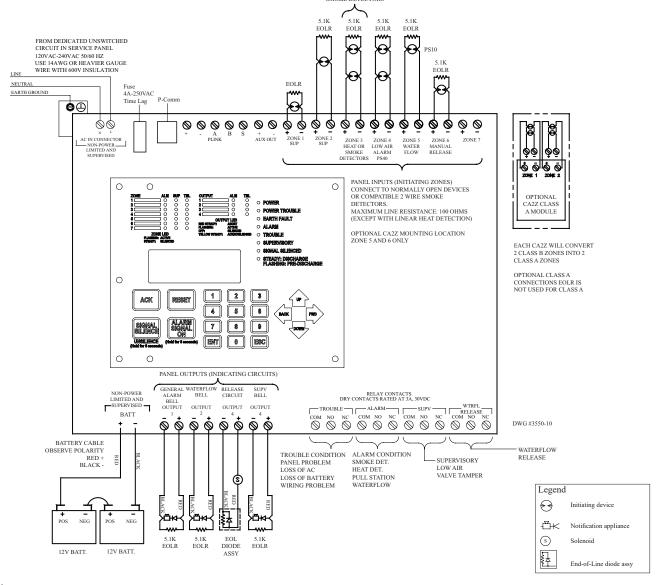

NOTES:

- 1. Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #11 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 11 to change to program 11. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard Crossed-				PROGRAN	Л #11					
Zoned with 1 Low Air Alarm Zone, 1		CONVENTIONAL INPUT ZONES								
Manual Release and 2 Supervisory Zones	#1									
OUTPUTS	Supervisory	Supervisory	Detection	Low Air Alarm	Waterflow	Manual Release	Unused	Release Zone Type		
#1 ALARM INDICATING			X			X		X		
#2 ALARM INDICATING					X					
#3 RELEASE		XX XX X								
#4 SUPERVISORY	X	X		X						

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single Hazard, detection and low air alarm zones cross-zoned**. Also 1 waterflow and 1 manual release

zone. Manual release overrides cross zoning.

Inputs: 2 supervisory zones, 1 detection zone, 1 low air alarm zone, 1 waterflow zone, 1 manual release zone.

Outputs: 1 general alarm, 1 supervisory, 1 waterflow, 1 solenoid release circuit

Operation: Activation of the detection zone and the low air alarm zone at the same time will operate the solenoid release

circuit and the general alarm bell.

Activation of the waterflow zone will operate the waterflow bell output

Activation of the low air alarm zone will operate the supervisory bell output. It will not operate the alarm relay.

When zone 3 is in alarm, output 1 will operate

When zone 4 is activated, output 4 will operate. This will create a supervisory condition not an alarm condition. The alarm relay will not operate, the supervisory relay will.

When zone 5 is in alarm, output 2 will operate


When zone 6 is in alarm, outputs 1 & 3 will operate

When both zones 3 & 4 are activated at the same time, the solenoid release circuit, output 3, will operate.

^{**}Cross Zoning acceptable for NFPA 13, 15, and 16 type extinguishing systems.

OBSERVE POLARITY WHEN CONNECTING

Wiring Diagram Program #12 Single Hazard, 2 Detection Zones, 3 Supervisory Zones 1 Waterflow Zone

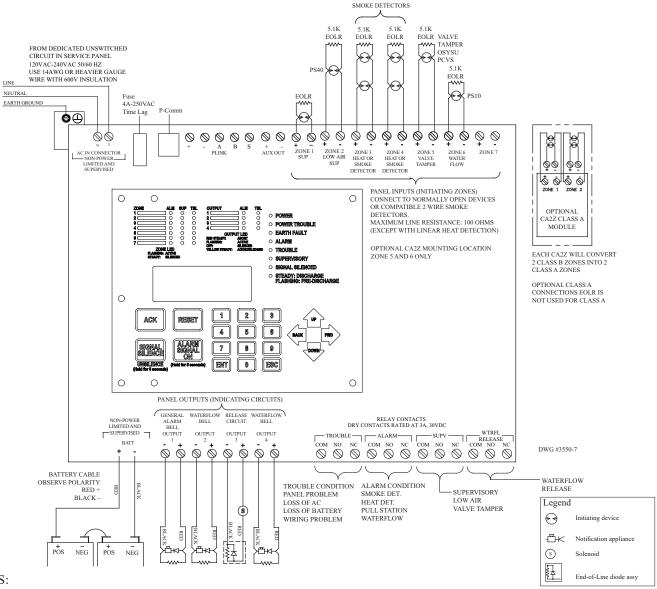

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #12 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 12 to change to program 12. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2 Detection		PROGRAM #12								
Zones, 3 Supervisory		CONVENTIONAL INPUT ZONES								
Zones and 1 Waterflow Zone	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Supervisory	Low Air Supervisory	Detection	Detection	Value Tamper	Waterflow	Unused			
#1 ALARM INDICATING			X	X		X				
#2 ALARM INDICATING						X				
#3 RELEASE			X	X						
#4 ALARM INDICATING						X				

Description: Single Hazard, 2 detection zones, 1 waterflow, and 3 supervisory zones.

Inputs: 1 supervisory zone, 1 low air supervisory zone, 2 detection zone, 1 waterflow zone, 1 tamper switch zone.

Outputs: 2 general alarm, 1 waterflow, 1 solenoid release circuit

Operation: Activation of either detection zone will operate the release and the general alarm bell outputs.

Activation of the waterflow zone will operate the waterflow and both general alarm bell outputs. Activation of

either the tamper or supervisory zones will operate the supervisory relay only.


When either zone 3 or 4 is in alarm, outputs 1 & 3 will operate

When zone 5 or the supervisory zone is activated, only the supervisory relay operates

When zone 6 is in alarm, outputs 1, 2 & 4 will operate

Wiring Diagram Program #13

Single Hazard Cross-Zoned, 1 Detection Zone with Low Air Alarm Zone, 3

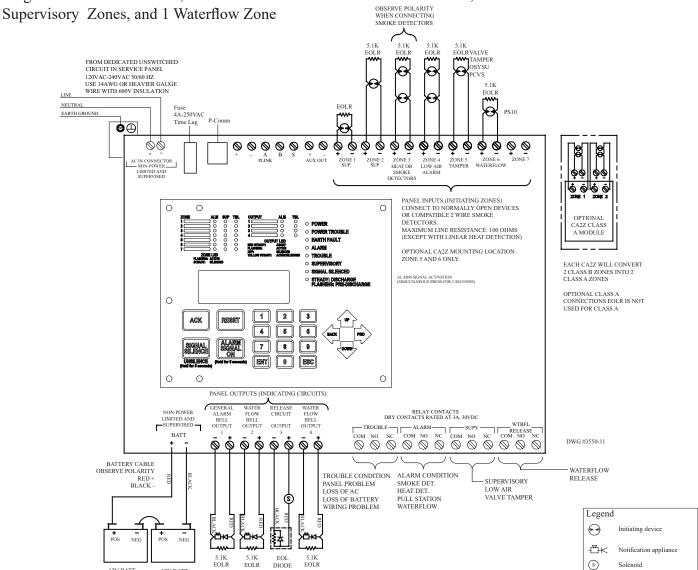

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid 2. on release circuit

12V BATT

EOLR

EOLR

- 3. Install EOLR (provided) on all unused circuits.
- Polarity is shown on indicating circuits in an activated 4 (off-normal) condition.
- Polarity reverses when output is activated.

12V BATT.

- Maximum current per output is 3 Amp. Maximum voltage
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

Solenoid

End-of-Line diode assy

See Appendix C for smoke detector compatibility data.

Program #13 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 13 to change to program 13. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard Cross-				PROGRAM	Л #13					
Zoned, 1 Detection Zone with Low Air Alarm		CONVENTIONAL INPUT ZONES								
Zone, 3 Supervisory Zones and 1 Waterflow Zone	#1	#2	#3	#4	#5	#6	#7	#8		
OUTPUTS	Supervisory	Supervisory	Detection	Low Air Alarm	Valve Tamper	Waterflow	Unused	Release Zone Type		
#1 ALARM INDICATING			X			X		X		
#2 ALARM INDICATING						X				
#3 RELEASE			XX	XX				XX*		
#4 ALARM INDICATING						X				

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single Hazard, detection and low air alarm zones cross-zoned**. Also 1 waterflow, 1 tamper and 1 supervisory

zone

Inputs: 2 supervisory zones, 1 detection zone, 1 low air alarm zone, 1 tamper switch zone, 1 waterflow zone,

Outputs: 1 general alarm, 2 waterflow, 1 solenoid release circuit

Operation: Activation of the detection zone and the low air alarm zone at the same time will operate the solenoid release

circuit and the general alarm bell.

Activation of the waterflow zone will operate both waterflow bell outputs

Activation of the low air alarm zone will not operate the alarm relay, only the supervisory relay.

When zone 3 is in alarm, output 1 will operate

When zone 4 is activated, it will create a supervisory condition not an alarm condition. The alarm relay will not operate, the supervisory relay will.

When zone 5 is activated, only the supervisory relay will operate.

When zone 6 is in alarm, outputs 1, 2 & 4 will operate.


When both zones 3 & 4 are activated at the same time, the solenoid release circuit, output 3, will operate.


^{**}Cross Zoning acceptable for NFPA 13, 15, and 16 type extinguishing systems.

QRS-ALARM ZONE

Wiring Diagram Program #14

4 Alarm Zones and 4 Release Circuits mapped 1 to 1.

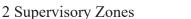

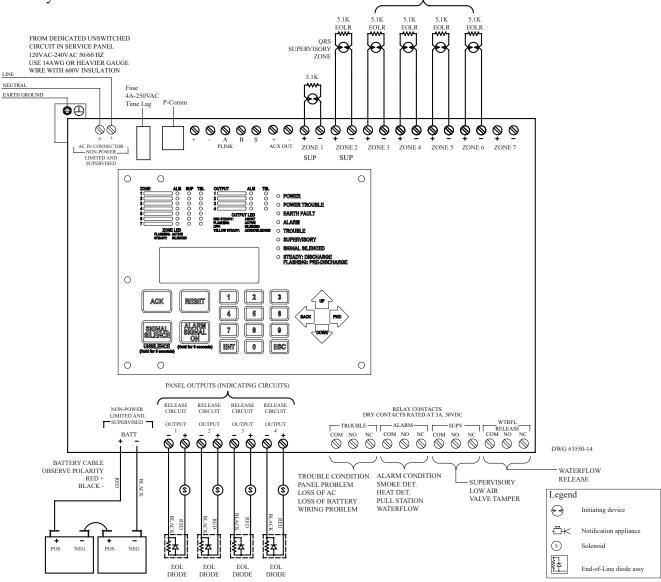

NOTES:

- 1. Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #14 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 14 to change to program 14. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

4 Alarm Zone and 4		PROGRAM #14									
Release Circuits mapped 1		CONVENTIONAL INPUT ZONES									
to 1, 2 Supervisory Zones	#1	#2	#3	#4	#5	#6	#7				
OUTPUTS	Supervisory	Supervisory	Detection	Detection	Detection	Detection	Unused				
#1 RELEASE			X								
#2 RELEASE				X							
#3 RELEASE					X						
#4 RELEASE						X					

Description: QRS System 4 Manual Station zones and 4 Release Outputs mapped 1 to 1

Inputs: 4 Manual Station zones, 2 Supervisory zones

Outputs: 4 release circuits

Operation: Activation of detection zone 3 will activate release output #1

Activation of detection zone 4 will activate release output #2 Activation of detection zone 5 will activate release output #3 Activation of detection zone 6 will activate release output #4

NOTE: TO CHARGE SYSTEM

After initially setting the PFC-4410G3 to program 14 and the panel resets

- 1. Press ENT to enter PROGRAM mode
- 2. Press 8 or scroll down to #8 Panel Setup and press ENT (The selection is indicated by a flashing arrow next to the number)
- 3. Enter the password (Factory is 1111)
- 4. Press 9 or scroll down to #9 QRS Fill and press ENT (The selection is indicated by a flashing arrow next to the number) NOTE: The display will read: When Fill Completed Press ESC 2X to Exit and the remaining time till timeout
- 5. Charge the system to normal operating pressure.
- 6. Press ESC twice to exit QRS Fill


NOTE: Wait 60 seconds after the system reaches normal operating pressure before testing the QRS

A CAUTION

When in QRS Fill, the panel is inoperative. None of the outputs or inputs will operate. No QRS will operate. The sprinkler system will operate as a regular dry pipe system.

Wiring Diagram Program #15

Dual Hazard, 1 Detection Zone and 1 Low Air Alarm Zone Cross-Zoned to 1 Release Circuit, 1 Other Detection and 1 other Low Air Alarm Zone Cross-Zoned to a Separate Release Circuit, and Supervisory Zones.

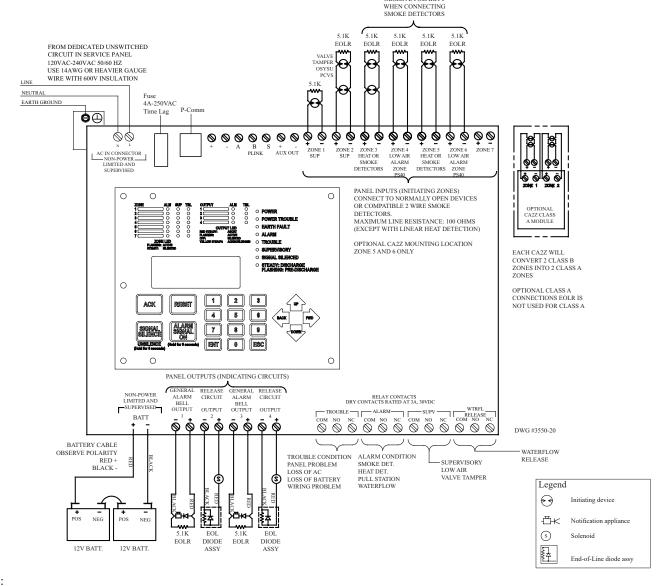

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #15 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 15 to change to program 15. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Dual Hazard, 1 Detection				PROG	RAM #15					
Zone and 1 Low Air Alarm Zone Cross-Zoned to 1		CONVENTIONAL INPUT ZONES							SOFTWARE ZONES	
Release Circuit, 1 other Detection and 1 other Low Air Alarm Zone Cross- Zoned to a Separate Release Circuit and Supervisory Zone.	#1	#2	#3	#4	#5	#6	#7	#8	#9	
OUTPUTS	Supervisory	Supervisory	Detection	Low	Detection	Low	Unused	Release	Release	
Octions	Supervisory	Supervisory	Detection	Air Alarm	Detection	Air Alarm	Onused	Zone Type	Zone Type	
#1 ALARM INDICATING			X	X				X		
#2 RELEASE			XX	XX				XX*		
#3 ALARM INDICATING					X	X			X	
#4 RELEASE					XX	XX			XX*	

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Dual Hazard, 2 detection zones cross-zoned** to 1 release circuit and 2 other detection zones cross zoned to

another release circuit

Inputs: 2 supervisory zones, 4 detection zones Outputs: 2 general alarm, 2 release circuit

Operation: Activation of either detection zones 3 and 4 will activate the alarm output #1

Activation of both detection circuits 3 and 4 at the same time will release circuit output #2 as well as activate

the alarm output #1

Activation of either detection zones 5 or 6 will activate the alarm output #3

Activation of both detection circuits 5 and 6 at the same time will release circuit output #4 as well as activate

the alarm output #3

When either zone 3 or 4 is in alarm, output 1 will operate

When both zones 3 and 4 are in alarm at the same time, output #2 will operate


When either zone 5 or 6 is in alarm, output 3 will operate

When both zones 5 and 6 are in alarm at the same time, output #4 will operate

^{**}Cross Zoning acceptable for NFPA 13, 15, and 16 type extinguishing systems.

Wiring Diagram Program #16

Failsafe Single Hazard, -2 Alarm Zones, 1 Waterflow Zone, 2 Supervisory Zones with Manual Release

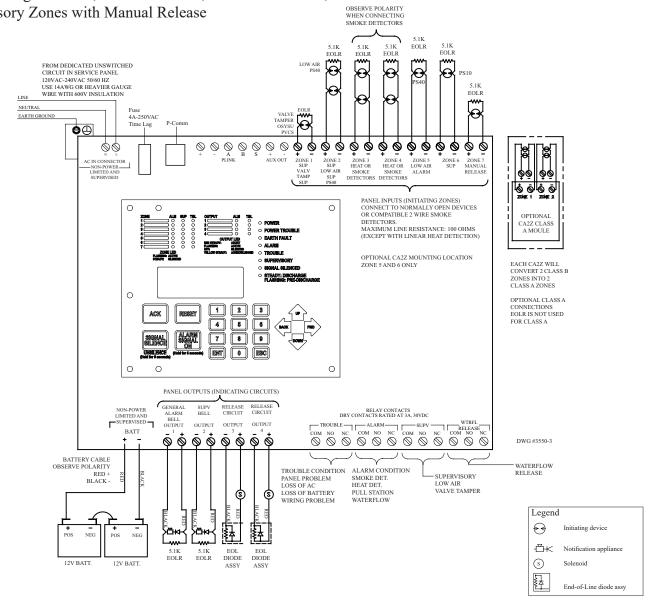

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #16 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 16 to change to program 16. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Failsafe Single Zoned	PROGRAM #16									
activation with Normally Open and Normally	CONVENTIONAL INPUT ZONES									
Closed Solenoid	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Valve Tamper Supervisory	Low Air Supervisory	Conventional Detection	Conventional Detection	Low Air Alarm	Waterflow	Manual Release			
#1 GENERAL ALARM			X	X		X	X			
#2 SUPERVSIORY BELL	X	X			X					
#3 RELEASE SOLENOID			X	X			X			
#4 N/O SOLENOID					X					

Description: Failsafe Single Zoned activation with Normally Open and Normally Closed Solenoid

Inputs: 2 Supervisory zones, 2 conventional detection zones, 1 Low Air Alarm zone, 1 Waterflow zone, 1 Manual release

zone.

Outputs: 1 General alarm Indicating, 1 Supervisory Bell output, 1 Release Circuit Normally Closed when not Energized, 1

Release Circuit: Normally Open when Not Energized

Operation: Activation of Supervisory zones 1 or 2 will create a supervisory condition on the panel and activate output 2.

Activation of Conventional Detection zone 3 or 4 will activate General alarm output 1 and Release output 3.

Activation of Low Air Alarm zone 5, will create supervisory condition on the panel and activate output 2 and the

Normally Open solenoid output 4.

Activation of waterflow zone 6 will activate general alarm output 1.


Activation of Manual Release zone 7 will activate General alarm output 1 and Release output 3.

A trouble condition will prevent output 4 from operating.

Wiring Diagram Program #17

Failsafe Single Hazard Cross Zoned, -2 Alarm Zones, 1

Waterflow Zone, 2 supervisory Zones with Manual Release

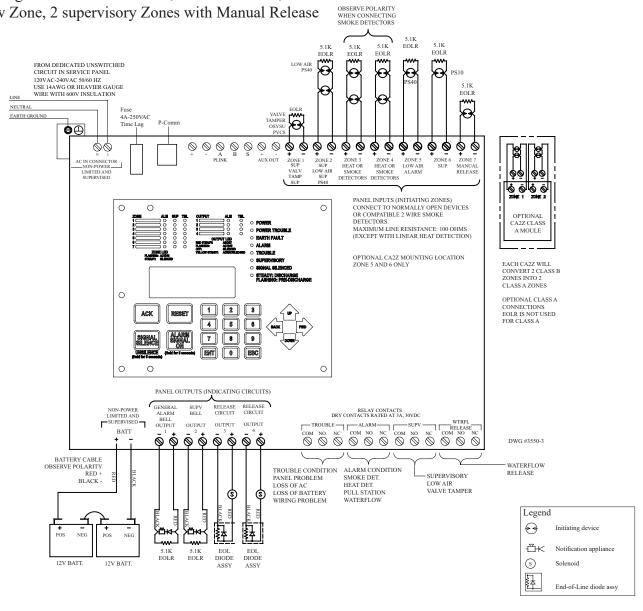

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- Polarity is shown on indicating circuits in an activated (off-normal) condition.
- Polarity reverses when output is activated. 5.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #17 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 17 to change to program 17. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Failsafe Cross		PROGRAM #17							
Zoned Activation With			SOFTWARE ZONES						
Normally Open and Normally Closed Solenoid	#1	#2	#3	#4	#5	#6	#7	#8	
OUTPUTS	VALVE TAMPER SUPERVISORY	LOW AIR SUPERVISORY	CONVENTIONAL DETECTION	CONVENTIONAL DETECTION	LOW AIR ALARM	WATER FLOW	MANUAL RELEASE	RELEASE ZONE TYPE	
#1 GENERAL ALARM			X	X		X	X	X	
#2 SUPERVISORY BELL	X	X			X				
#3 RELEASE SOLENOID			XX	XX	XX* Either zones 3 & 5 or 4 & 5		X	XX*	
#4 N/O SOLENOID					X				

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

Inputs: 2 Supervisory zones, 2 conventional detection zones, 1 Low Air Alarm zone, 1 Waterflow zone, 1 Manual release

zone

Outputs: 1 General alarm Indicating, 1 Supervisory Bell output, 1 Release Circuit Normally Closed when not Energized, 1

Release Circuit: Normally Open when Not Energized

Operation: Activation of Supervisory zones 1 or 2 will create a supervisory condition on the panel and activate Supervisory Bell

output 2.

Activation of Conventional Detection zone 3 or 4 will activate General alarm output 1

Activation of Conventional Detection zone 3 OR 4 AND activation of Low Air Alarm zone 5 will activate General

alarm output 1 and Release output 3.

Activation of Low Air Alarm zone 5, will create supervisory condition on the panel and activate Supervisory Bell

output 2 and the Normally Open solenoid output 4

Activation of Waterflow zone 6 will activate General alarm output 1

Activation of Manual Release zone 7 will activate General alarm output 1 and Release output 3.

NOTICE

The following programs are for agent or gas extinguishing systems. Selecting the Agent Releasing mode allows the use of a predischarge timer and an abort circuit. The timer defaults to 60 seconds for all alarm zones programmed as other than MANUAL RELEASE. The MANUAL RELEASE default timer is 30 seconds. The system offers the programmer the ability to change the default timers to shorter times.

Systems intended for the release of Halon 1301 as described in NFPA 12A, water mist systems as described in NFPA 750 clean agents as described in NFPA 2001, or fixed aerosol as described in NFPA 2010, or shall have provision for a pre-discharge notification circuit. If this signal is required to be separate and/or distinct from the evacuation signal, this can be accomplished by using the legacy method of using first and second alarms on separate zones. One shall be programmed as FIRST ALARM. It will provide a steady output upon activation of any initiating zone programmed as an alarm zone. This is the evacuation signal. If a temporal signal is required, the output pattern can be changed using the zone menu. The other notification circuit shall be programmed as SECOND ALARM. It will provide a steady output upon activation of a second initiating zone programmed as an alarm zone (cross zoned). This is when the pre-discharge timer would start and would be the predischarge signal. If a temporal signal is required, the output pattern can be changed using the zone menu (output pattern and pre release pattern need to be changed). If a separate signal for discharge were required, the second alarm pre discharge pattern can be changed in the zone menu. Zones programmed as MANUAL RELEASE will activate outputs programmed as SECOND ALARM, even if the MANUAL RELEASE zone is the first alarm zone activated. SECOND ALARM is intended to be used as a pre-discharge signal for cross zone applications.

The PFC-4410G3 allow for 3 patterns using 1 notification circuit. The evacuation signal pattern can be set in the zone menu for the detection zones mapped to the alarm indicating output. To set the pre discharge pattern and discharge pattern select the pattern in the zone menu for the software zone for the cross zoned output.

A CAUTION

The default programming does not allow the abort circuit to abort the release or stop the pre-discharge timer activated by zones programmed as MANUAL RELEASE. This can be changed in the programming to allow MANUAL RELEASE zones to be aborted.

NFPA 12 prohibits the use of abort circuits on suppression systems deploying carbon dioxide.


Systems designed and installed in accordance with NFPA 2001, NFPA-750, NFPA-2010, NFPA 12 A shall be provided with a mechanical manual release system.

This page intentionally left blank.

Wiring Diagram Program #20

Dual Hazard, 2 Detection Zones Cross-Zoned to 1 Release Circuit, 2

Other Detection Zones Cross-Zoned to A Separate Release Circuit, 1

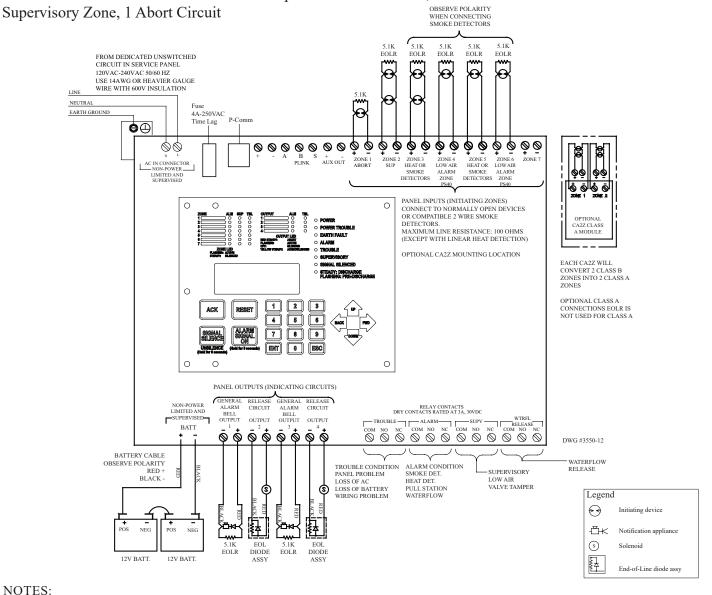

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- Install EOLR (provided) on all unused circuits. 3.
- Polarity is shown on indicating circuits in an activated (off-normal) condition.
- Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #20 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 20 to change to program 20. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Dual Hazard, 2 Detection	PROGRAM #20									
Zones Cross-Zoned to 1 Release Circuit, 2 Other	CONVENTIONAL INPUT ZONES								SOFTWARE ZONES	
Detection Zones Cross-	#1	#2	#3	#4	#5	#6	#7	#8	#9	
Zoned to a Separate Release										
Circuit, 1 Supervisory										
Circuit, 1 abort circuit										
OUTPUTS	Abort	Supervisory	Detection	Detection	Detection	Detection	Unused	Release	Release	
								Zone Type	Zone Type	
#1 ALARM INDICATING			Х	х				X		
#2 RELEASE			XX	xx				XX*		
#3 ALARM INDICATING					х	Х			X	
#4 RELEASE					XX	XX			XX*	

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Dual Hazard, 2 detection zones cross-zoned to 1 release circuit and 2 other detection zones cross zoned to

another release circuit

Inputs: 1 supervisory zone, 4 detection zones, 1 abort circuit

Outputs: 2 general alarm, 2 release circuit

Operation: Activation of either detection zones 3 or 4 will activate the alarm output #1

Activation of both detection circuits 3 and 4 at the same time will start the pre-discharge timer for release circuit

output #2 as well as activate the alarm output #1

Activation of either detection zones 5 or 6 will activate the alarm output #3

Activation of both detection circuits 5 and 6 at the same time will start the pre-discharge timer for release circuit

output #4 as well as activate the alarm output #3

When either zone 3 or 4 is in alarm, output 1 will operate

When both zones 3 and 4 are in alarm at the same time, the pre-discharge timer for output #2 will operate


When either zone 5 or 6 is in alarm, output 3 will operate

When both zones 5 and 6 are in alarm at the same time, the pre-discharge timer for output #4 will operate

Wiring Diagram Program #21

Dual Hazard, 2 Detection Zones Mapped to 1 Release Circuit and 2 Other Detection Zones Mapped to A Separate Circuit, 1 Abort

Circuit, and 1 Supervisory Circuit

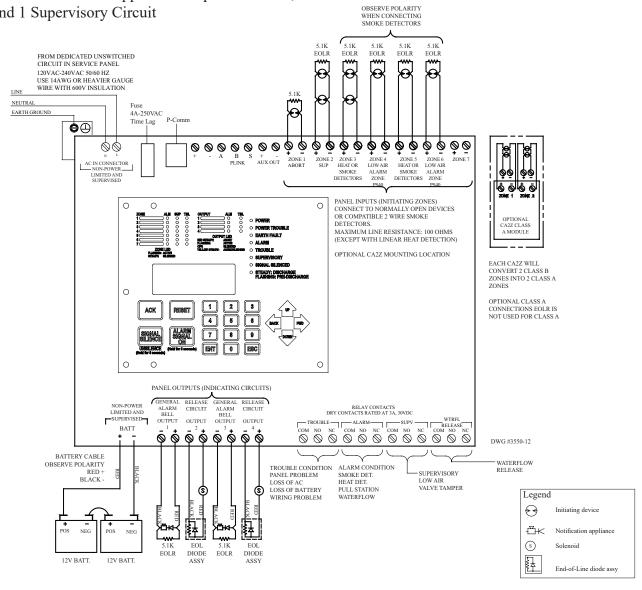

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- Install EOLR (provided) on all unused circuits. 3.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #21 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 21 to change to program 21. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Dual Hazard, 2 Detection	PROGRAM #21									
Zones Mapped to 1	CONVENTIONAL INPUT ZONES									
Release Circuit and 2 Other Detection Zones	#1	#2	#3	#4	#5	#6	#7			
Mapped to a Separate										
Release Circuit, 1										
Supervisory Circuit, 1										
Abort Circuit										
OUTPUTS	Abort	Supervisory	Detection	Detection	Detection	Detection	Unused			
#1 ALARM INDICATING			X	X						
#2 RELEASE			X	X						
#3 ALARM INDICATING					X	X				
#4 RELEASE					X	X				

Description: Dual Hazard, 2 detection zones mapped to 1 release circuit and 2 other detection zones mapped to another release

circuit

Inputs: 1 supervisory zone, 4 detection zones, 1 abort circuit

Outputs: 2 general alarm, 2 release circuit

Operation: Activation of either detection zone 3 or 4 will activate the alarm output #1 and start the pre-discharge timer for

the release circuit output #2

Activation of either detection zone 5 or 6 will activate the alarm output #3 and start the pre-discharge timer for


the release circuit output #2

When either zone 3 or 4 is in alarm, outputs 1 & 2 will operate When either zone 5 or 6 is in alarm, outputs 3 & 4 will operate

OBSERVE POLARITY

WHEN CONNECTING

Wiring Diagram Program #22 Single Hazard, 2 Detection Zones Cross-zoned to 1Release Circuit, 1 Manual Station and A Discharge Confirmation Zone

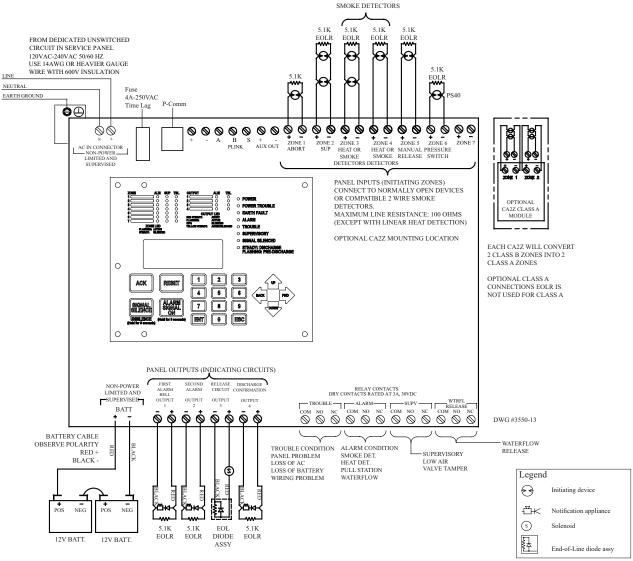

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #22 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 22 to change to program 22. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2 Detection	PROGRAM #22									
Zones Cross-Zoned to 1 Release Circuit, 1 Manual	CONVENTIONAL INPUT ZONES								Software Zones	
Station and a Discharge Confirmation Zone	#1	#2	#3	#4	#5	#6	#7	#8	#9	
OUTPUTS	Abort	Supervisory	Detection	Detection	Manual Release	Detection	Unused	Alarm	Release Zone Type	
#1 1st ALARM			X	х						
#2 2nd ALARM			XX	XX	X			XX*	X	
#3 RELEASE			XX	XX	X				XX*	
#4 ALARM INDICATING						х				

^{*} Release Outputs which are Cross-Zoned and 2nd alarm need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

XX = Cross-Zoned

Description: Single Hazard, 2 detection zones cross-zoned to 1 release circuit. A manual station zone and a discharge

confirmation zone. Also first and second alarm notification circuits.

Inputs: 1 supervisory zone, 3 detection zones, 1 manual station zone, 1 abort circuit

Outputs: 3 general alarm, 1 release circuit

Operation: Activation of either detection zones 3 or 4 will activate the alarm output #1

Activation of both detection circuits 3 and 4 at the same time will activate the alarm outputs #1, #2 and start the

pre-discharge timer for the release circuit output #3

Activation of the manual release zone #5 will activate the alarm output #2 and start the manual release pre-


discharge timer for release circuit output #3 Activation of zone 6 will operate output #4

When either zone 3 or 4 is in alarm, output 1 will operate

When both zones 3 and 4 are in alarm at the same time, outputs #1,2 will operate and the pre-discharge timer for output #3 will start

When zone 5 is in alarm, output 2 will operate and the manual release pre-discharge timer for output #3 will start When zone 6 is in alarm, output #4 will operate

Wiring Diagram Program #23 Single Hazard, 4 Detection Zones Mapped to 1 Release Circuit, 1 Supervisory Zone, 1 Abort Circuit

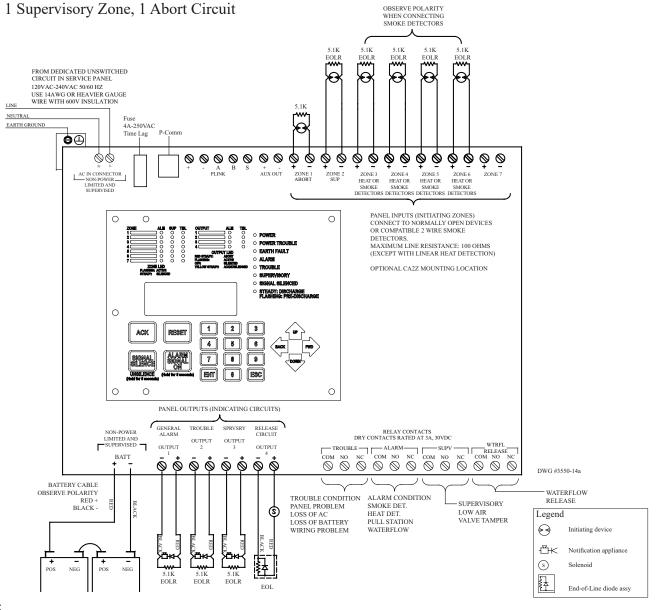

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- 6. Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All
 other outputs are Regulated 24 VDC, Rated 3 Amp each, 3
 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #23 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 23 to change to program 23. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 4	PROGRAM #23							
Dectection Zones Mapped to 1 Release Circuit 1	CONVENTIONAL INPUT ZONES							
Supervisory Circuit, 1 Abort Circuit	#1	#2	#3	#4	#5	#6	#7	
OUTPUTS	Abort	Supervisory	Detection	Detection	Detection	Detection	Unused	
#1 ALARM INDICATING			X	X	X	X		
#2 TROUBLE								
#3 SUPERVISORY		X						
#4 RELEASE			X	X	X	X		

Description: Single Hazard, 4 detection zones mapped to 1 release
Inputs: 1 supervisory zone, 4 detection zones, 1 abort circuit
Outputs: 1 general alarm, 1 trouble, 1 supervisory, 1 release circuit

Operation: Activation of any detection zone will activate the alarm output #1 and start the pre-discharge timer for the

release circuit output #4.

Activation of the supervisory zone will operate the supervisory bell.

A trouble condition (low battery, wire problem, etc.) will operate the trouble bell.


When either zone 3, 4, 5, or 6 is in alarm, outputs 1 & 4 will operate

When the zone 6 supervisory zone is activated - output #3 (supervisory bell) will operate.

When the panel is in a trouble condition - output #2 (trouble bell) will operate.

OBSERVE POLARITY WHEN CONNECTING

Wiring Diagram Program #24
Single Hazard, 2 Detection Zones 1 Manual Station Zone
and A Discharge Confirmation Zone

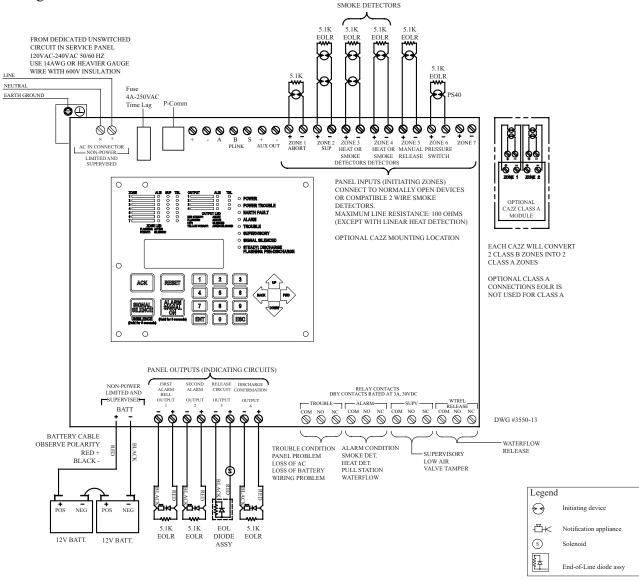

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #24 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 1 to change to program 1. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Hazard, 2			PR	OGRAM #24						
Dectection Zones, 1		CONVENTIONAL INPUT ZONES								
Manual Release Zone and A Discharge Confirmation Zone	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Abort	Supervisory	Detection	Detection	Manual Release	Low Air Supervisory	Unused			
#1 ALARM INDICATING			X	X						
#2 ALARM INDICATING					X					
#3 RELEASE			X	X	X					
#4 SUPERVISORY		X				X				

Description: Single Hazard, 2 detection zones, a manual station zone and a discharge confirmation zone. Inputs: 1 supervisory zone, 1 low air zone, 2 detection zones, 1 manual station zone, 1 abort circuit

Outputs: 2 general alarm, 1 release circuit, 1 supervisory

Operation: Activation of either detection zones 3 or 4 will activate the alarm output #1 and start the pre-discharge timer for

the release circuit output #3


Activation of the manual release zone #5 will activate the alarm output #2 and start the manual release pre-

discharge timer for release circuit output #3 Activation of zone 6 will operate output #4

When either zone 3 or 4 is in alarm, output 1 will operate and the pre-discharge timer for output #3 will start. When zone 5 is in alarm, output 2 will operate and the manual release pre-discharge timer for output #3 will start.

When zone 6 is activated, output #4 will operate

Wiring Diagram Program #30 Failsafe Single Hazard Cross Zoned, -2 Alarm Zones, 1 Waterflow Zone, 2 supervisory Zones with Manual Release

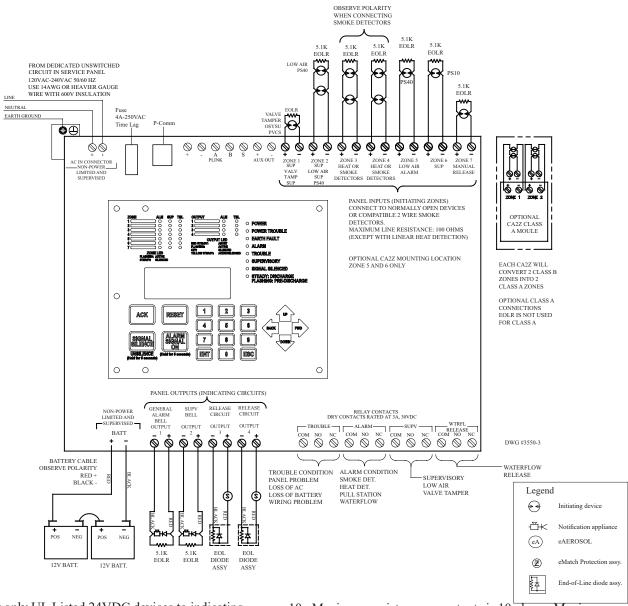

NOTES:

- Connect only UL Listed 24VDC devices to indicating
 aircrafts
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #30 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 30 to change to program 30. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Failsafe Cross				PROGRAM #3	30				
Zoned Activation With		CONVENTIONAL INPUT ZONES							
Normally Open and Normally Closed Solenoid	#1	#2	#3	#4	#5	#6	#7	#8	
OUTPUTS	VALVE TAMPER SUPERVISORY	LOW AIR SUPERVISORY	CONVENTIONAL DETECTION	CONVENTIONAL DETECTION	LOW AIR ALARM	WATER FLOW	MANUAL RELEASE	RELEASE ZONE TYPE	
#1 ALARM INDICATING (General Alarm)			X	X		X	X	X	
#2 RELEASE NORMALLY ENERGIZED (Failsafe Solenoid, Drops Out on Any System Trouble)			X	X			X		
#3 RELEASE			XX	XX	XX Either Zone 3 & 5 or 4 & 5		X	XX*	
#4 ALARM (waterflow alarm)						X			

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

SUP 1 defaults to abort XX = Cross-Zoned

Inputs 2 Supervisory zones, 2 conventional detection zones, 1 Low Air Alarm zone, 1 Waterflow zone, 1 Manual release

zone.

Outputs: 1 General alarm Indicating, 1 Failsafe Release Circuit: Normally Energized. de-energizes on any system

trouble, 1 Release Circuit: Normally Not Energized, 1 Waterflow alarm output.

Operation: Output 2 is constantly energized. Any trouble condition on the panel will de-energize output 2.

Activation of supervisory zone 1 or 2 or activation of Low Air Alarm zone 5, will only create supervisory

condition on the panel.

Activation of Conventional Detection zone #3 and/or zone 4 will activate General alarm output 1 and De-

energize output 2.

Activation of either Conventional Detection zone #3 OR zone 4, AND activation of Low Air Alarm zone 5, will


energize/activate release output #3.

Activation of Manual Release zone #7 will activate General alarm output 1, de-energize failsafe release output 2

and energize/activate release output #3.

Wiring Diagram Program #31

Failsafe Single Hazard, -2 Alarm Zones, 1 Waterflow Zone, 3 supervisory Zones with Manual Release

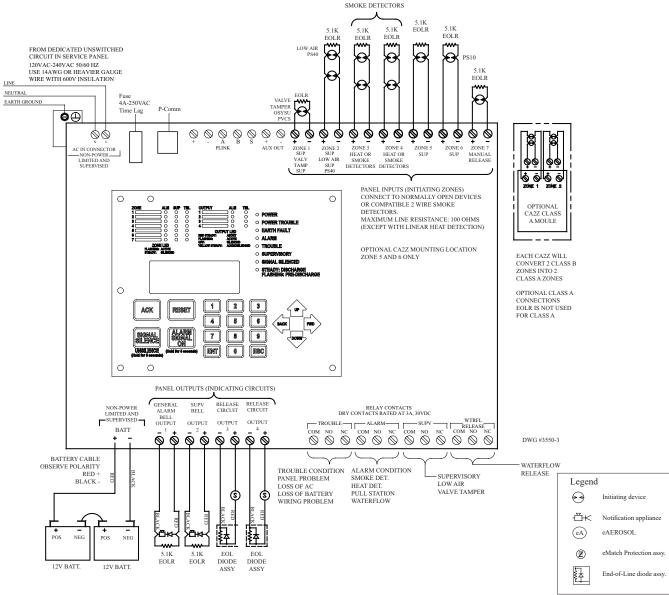

OBSERVE POLARITY

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #31 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 31 to change to program 31. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Failsafe Operation			PRO	OGRAM #31						
Single zone activation	CONVENTIONAL INPUT ZONES									
Two solenoids, one is Normally Energized	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	VALVE TAMPER SUPERVISORY	LOW AIR SUPERVISORY	CONVENTIONAL DETECTION	CONVENTIONAL DETECTION	SUPERVISORY	WATER LOW	MANUAL RELEASE			
#1 ALARM INDICATING (General Alarm)			X	X		X	X			
#2 RELEASE NORMALLY ENERGIZED (Failsafe Solenoid, Drops Out on Any System Trouble)			X	X			X			
#3 RELEASE (Solenoid)			X	X			X			
#4 ALARM (waterflow alarm)						X				

Inputs: 3 Supervisory zones, 2 conventional detection zones, 1 Waterflow zone, 1 Manual release zone

Outputs: 1 General alarm Indicating, 1 Release Circuit: Normally Energized. Failsafe, De-energizes on any system

trouble, 1 Release Circuit: Normally Not Energized, 1 Waterflow alarm output.

Operation: Output 2 is constantly energized. Any trouble condition on the panel will de-energize output 2. Activation of

Supervisory zone 1, zone 2 or Low Diaphragm water Pressure zone 5, will create a supervisory condition on the

panel.

Activation of Conventional Detection zone 3 or zone 4, or Manual Release zone 7 will activate General alarm

output 1, De-energize output 2 and energize/activate release output 3.

Activation of Waterflow zone 6 will activate General alarm output 1 and Waterflow alarm output 4.

Activation of Manual Release zone #7 will activate General alarm output 1, de-energize failsafe release output 2


and energize/activate release output #3.

OBSERVE POLARITY WHEN CONNECTING SMOKE DETECTORS

Wiring Diagram Program #32

Double Interlock with Redundant Solenoids Crossed Zone - 3 Supervisory zones, 2

Detection zones, 1 Waterflow zone, 1 Manual Release zone

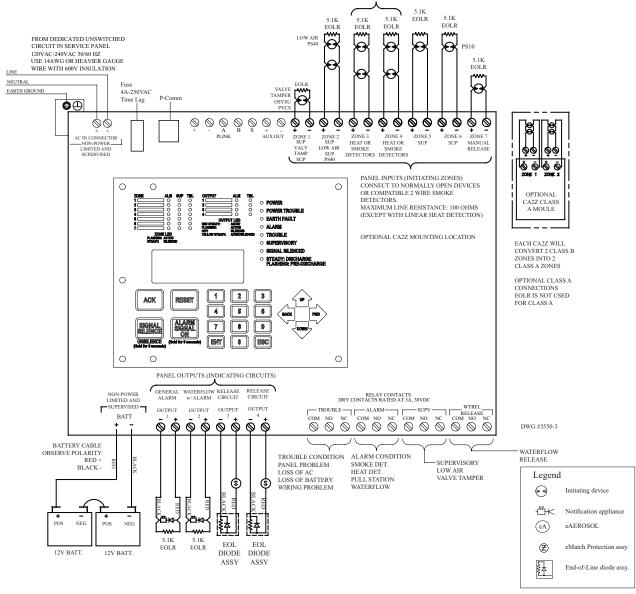

NOTES:

- Connect only UL Listed 24VDC devices to indicating
 aircrafts
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #32 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 32 to change to program 32. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Double Interlock with				PRO	OGRAM #32				
Redundant Solenoids Cross Zoned Activation		CONVENTIONAL INPUT ZONES							
Zoned Activation	#1	#2	#3	#4	#5	#6	#7	#8	#9
OUTPUTS	Low Air Supervisory	Valve Tamper	Conventional Detection	Conventional Detection	Low Air Alarm	Waterflow	Manual Release	Release Zone Type	Release Zone Type
#1 GENERAL ALARM			X	X		X	X	X	X
#2 WATERFLOW ALARM						X			
#3 RELEASE SOLENOID			XX	XX	XX Either Zones 3 &5 or 4&5		X	XX*	XX*
#4 RELEASE SOLENOID			XX	XX	XX Either Zones 3 &5 or 4&5		X	XX*	XX*

^{*} Release Outputs which are Cross-Zoned need a Software Zone in order to work properly. The Software Zone Number will be displayed upon a release.

SUP 1 defaults to abort

XX = Cross-Zoned

Inputs: 3 Supervisory zones, 2 Detection zones, 1 Waterflow zone, 1 Manual Release zone

Outputs: 1 General Alarm, 1 Waterflow, 2 Release Solenoids

Operation: Activation of any supervisory zone or Low Air Alarm zone will create a supervisory condition on the panel, no

outputs will activate

Activation of Conventional Detection zone 3 and/or 4 will activate General Alarm output 1

Activation of either Conventional Detection zone 3 OR 4 AND Low Air Alarm zone 5 will activate General

Alarm output 1 and Release Solenoid outputs 3 and 4.


Activation of Waterflow zone 6 will activate General alarm output 1 and Waterflow output 2.

Activation of Manual Release zone #7 will activate General Alarm output 1 and Release Solenoid outputs 3 and

4.

Wiring Diagram Program #33

Redundant Solenoids Single Interlock with Single Zone Activation

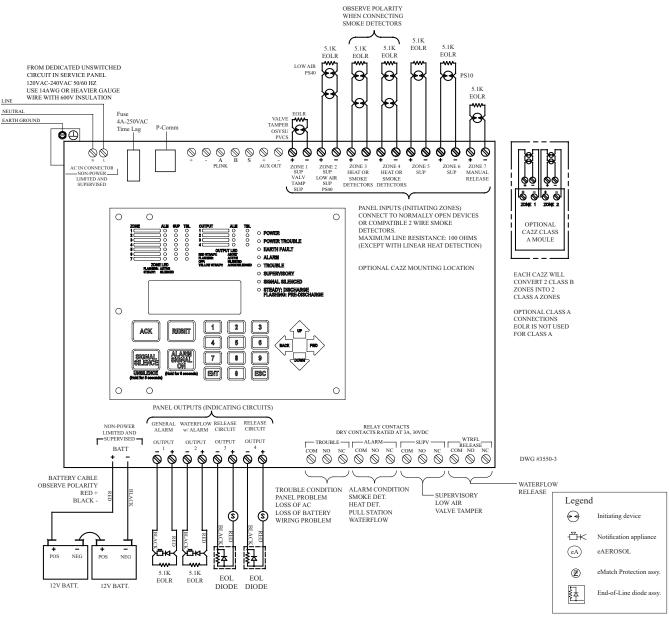

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #33 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 33 to change to program 33. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Redundant Solenoids		PROGRAM #33									
Single Interlock with Single		ZONES									
Zone Activation	#1	#2	#3	#4	#5	#6	#7				
OUTPUTS	Low Air Supervisory	Valve Tamper	Conventional Detection	Conventional Detection	Low Air Alarm	Waterflow	Manual Release				
#1 GENERAL ALARM			X	X		X	X				
#2 WATERFLOW ALARM						X					
#3 RELEASE SOLENOID			X	X			X				
#4 RELEASE SOLENOID			X	X			X				

Inputs: 3 Supervisory zones, 2 Detection zones, 1 Waterflow zone, 1 Manual Release zone

Outputs: 1 General Alarm, 1 Waterflow, 2 Release Solenoids

Operation: Activation of any supervisory zone or Low Air Alarm zone will create a supervisory condition on the panel, no


outputs will activate

Activation of Conventional Detection zone 3 and/or 4 and/or Manual Release zone 7 will activate General

Alarm output 1 and Release Solenoid outputs 3 and 4

Activation of Waterflow zone 6 will activate General alarm output 1 and Waterflow output 2

Wiring Diagram Program #34 Single Hazard Latching Solenoid with Remote reset

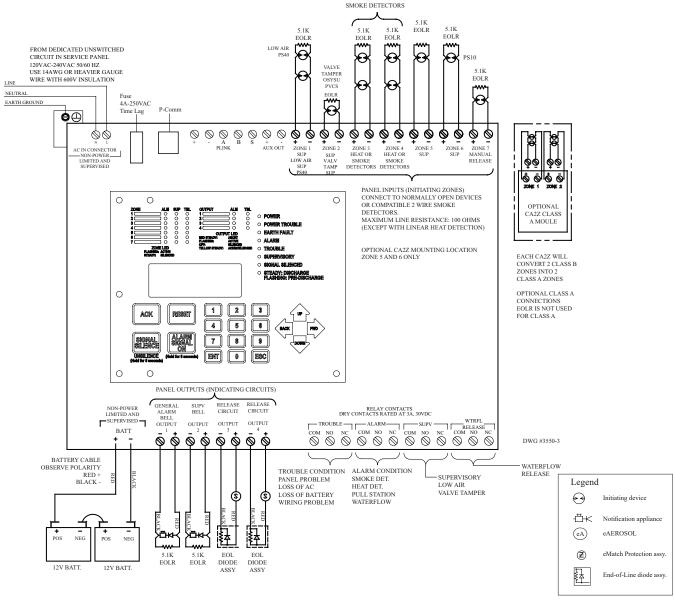

OBSERVE POLARITY

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits.
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #34 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 1 to change to program 1. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Single Zone Activation:			PF	ROGRAM #34						
Latching Solenoid Remote Solenoid Reset		ZONES								
Remote Solenoid Reset	#1	#2	#3	#4	#5	#6	#7			
OUTPUTS	Low Air	Valve	Conventional	Conventional	Valve Reset	Waterflow	Manual			
	Supervisory	Tamper	Detection	Detection	Supervisory		Release			
#1 GENERAL ALARM			X	X			X			
#2 RELEASE SOLENOID (2 second pulse)			X	X			X			
#3 SOLENOID RESET (2 second pulse)					X					
#4 WATERFLOW BELL						X				

Inputs: 2 Supervisory zones, 2 conventional detection zones, 1 Waterflow zone, 1 Manual release zone, 1 Valve Reset

zone

Outputs: 1 General alarm Indicating, 1 Release circuit, 1 Valve Reset circuit, 1 Waterflow Bell Operation: Activation of Supervisory zone 1 or 2 will create a supervisory condition on the panel

Activation of Conventional Detection zone 3 or 4 will activate General alarm output 1 and temporarily activate

release output 2 for two seconds

Activation of Valve Reset zone 5 will temporarily activate release output 3 to reset the solenoid on the preaction


valve and create a supervisory condition

Activation of Waterflow zone 6 will activate the waterflow bell output 4

Activation of Manual Release zone #7 will activate General alarm output 1 and temporarily energize release

output #2

Wiring Diagram Program #35 Single Hazard Latching Solenoid Cross Zoned with Remote reset

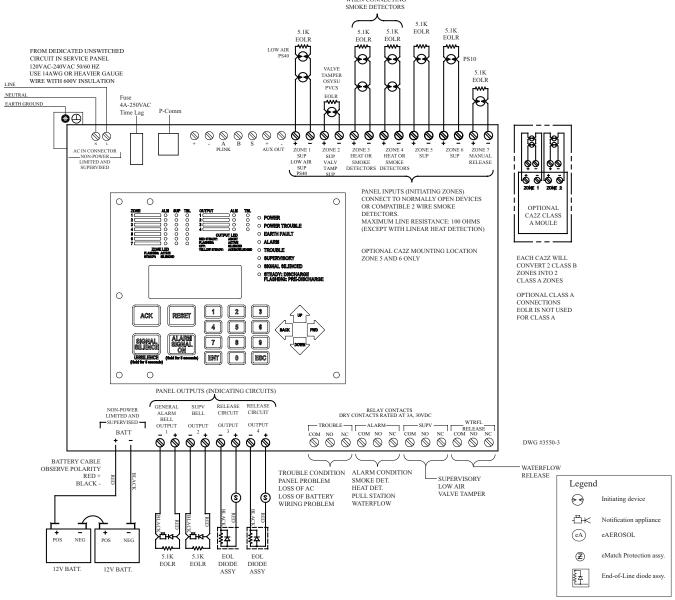

NOTES:

- Connect only UL Listed 24VDC devices to indicating circuits
- 2. Connect EOL Diode assembly IN SERIES with solenoid on release circuit
- 3. Install EOLR (provided) on all unused circuits.
- 4 Polarity is shown on indicating circuits in an activated (off-normal) condition.
- 5. Polarity reverses when output is activated.
- Maximum current per output is 3 Amp. Maximum voltage is 33VDC.
- 7. Outputs identified as Release are Special Application. All other outputs are Regulated 24 VDC, Rated 3 Amp each, 3 Amp total for all 4 circuits.
- 8. All initiating and NAC/Release circuits are supervised and power limited. See Main Board Wiring Specifications for wire routing instructions. All frequencies are continuous.
- 9. Refer to Appendix A for test and maintenance information

10. Maximum resistance on outputs is 10 ohms. Maximum resistance on outputs programmed as releasing, is 1 divided by current requirements of solenoid.

See Appendix C for smoke detector compatibility data.

Program #35 Mode

- 1. Apply power to panel.
- 2. Press ENT to enter PROGRAM mode
- 3. Press 6 or scroll down to #6 and press ENT, (The selection is indicated by a flashing arrow next to the number.
- 4. Enter the password. (Factory default is 1111)
- 5. Press 1 or press ENT. (1 should be the highlighted selection)
- 6. The display shows the current program number. Press 1 to change to program 1. Press ENT.
- 7. Press 1 to accept the change.
- 8. Press ENT to accept the change.

Latching Solenoid				PROGRAN	Л #35	PROGRAM #35					
Cross Zoned			CONVENTION	AL INPUT Z	ZONES			SOFTWARE ZONES			
	#1	#2	#3	#4	#5	#6	#7	#8			
OUTPUTS	VALVE TAMPER SUPERVISORY	LOW AIR SUPERVISORY	CONVENTIONAL DETECTION	LOW AIR ALARM	VALVE RESET SUPERVISORY	WATER FLOW	MANUAL RELEASE	RELEASE ZONE TYPE			
#1 GENERAL ALARM			X				X	X			
#2 RELEASE SOLENOID (2 second pulse)			XX	XX			X	XX*			
#3 SOLENOID RESET (2 second pulse)					X						
#4 WATERFLOW BELL						X					

^{*} Release Outputs which are Cross-Zoned need a Pseudo Zone in order to work properly. The Pseudo Zone Number will be displayed upon a release.

SUP 1 defaults to abort XX = Cross-Zoned

Inputs: 2 Supervisory zones, 1 conventional detection zone, 1 Low Air Alarm zone, 1 Waterflow zone, 1 Manual release

zone, 1 Valve reset zone

Outputs: 1 General alarm Indicating, 1 Release circuit, 1 Valve Reset circuit, 1 Waterflow Bell

Operation: Activation of Conventional Detection zone #3 and Low Air Alarm zone #4 at the same time or activation of


Manual Release zone #7 will activate and energize release output #2

Activation of Low Air Alarm zone 4 will create a supervisory condition on the panel

Activation of Valve Reset zone 5 will reset the solenoid on the preaction valve for two seconds

Activation of Waterflow zone 6 will activate the waterflow bell output 4

	CUSTOM PROGRAM										
			CONVE	NTIONAL ZO	NES						
	#1	#1 #2 #3 #4 #5 #6 #7									
OUTPUTS											
#1											
#2											
#3											
#4											

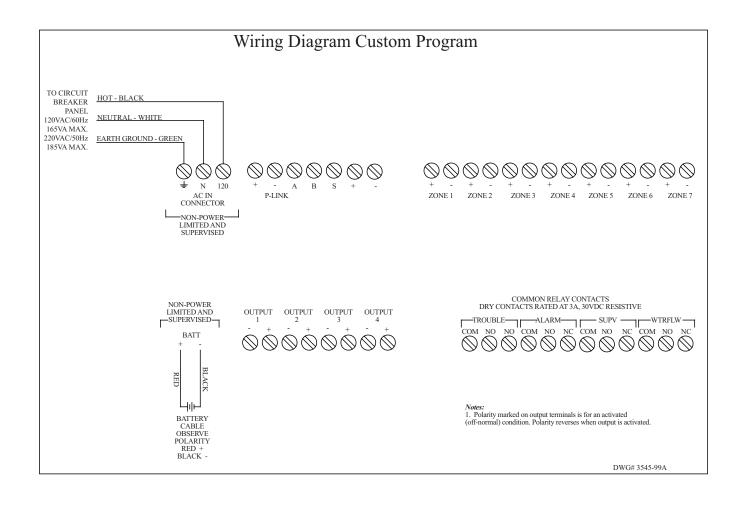

Section 6: Programming Options

The control panel can be configured using the on-board keypad or PC based programming tool. The panel stores the site specific configuration data in non-volatile memory.

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES

This product incorporates field-programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864 and ULC S527, certain programming features or options must be limited to specific values or not used at all as indicated below.

Topic	Feature or Option	Permitted in UL (Y/N)	Possible Settings	Setting(s) Permitted in UL864 / S527	Comment
Misc	Idle LCD Message	Y	Yes/No	All Settings Allowed	
Misc	Display Events	Y	Initial Event Newest Event	Initial Event	Auto display first event
Misc	Waterflow Delay	Y	0-255 Sec	0-90 sec	
Misc	AC Report Delay	Y	0 Minutes, 5-30 Hours	1-3 Hours	
Misc	Door Holder Low AC Dropout Delay	Y	No delay, 15 Sec, 1 minute, 5 minute	All Settings Allowed	
Misc	Strobes Active When Silenced	Y	Yes/No	All Settings Allowed	
Misc	Disable 24 hours PZT Resound	Y	Yes/No	No	
Misc	Display AM/PM	Y	Yes/No	All Settings Allowed	No = 24hour clock
Misc	Synchronize to Network Time	Y	Yes/No	All Settings Allowed	
Misc	SNTP Server	Y	North-America.Pool.NTP.org	All Settings Allowed	
Misc	Time Zone	Y	24 Time Zone Selections	All Settings Allowed	
Misc	DST Enabled	Y	Yes/No	All Settings Allowed	
Misc	DST Start	Y	Month/Day	All Settings Allowed	
Misc	DST End	Y	Month/Day	All Settings Allowed	
Zone	Zone Style	Y	Alarm Supervisory Waterflow Trouble Releasing Releasing Confirmation Unused System Alarm System Supervisory	All Settings Allowed	
Zone	Silenceable	Y	Yes/No	All Settings Allowed	
Zone	Silence Inhibit	Y	0-60 minutes	All Settings Allowed	
Zone	Auto Silence	Y	3-360 minutes	3-60 UL864 S527 (see comment)	Shall be set in accordance with section 3.2.4.6 of the National Building Code of Canada
Zone	Auto Unsilence	Y	0-60 minutes	All Settings Allowed	


Topic	Feature or Option	Permitted in UL (Y/N)	Possible Settings	Setting(s) Permitted in UL864 / S527	Comment
Zone	Restore Delay	Y	0-300 Sec	Full range allowed	Delay to reactivate devices that turn off on troubles or alarm on panel restoration to normal
Zone	Latching	Y	Yes/No	All Settings Allowed	
Zone	Output Pattern	Y	Constant ANSI Temp 3 March Code Double Time	All Settings Allowed	
IDC	Dry Contact Input Functions	Y	Unused Detection Waterflow Linear Heat Manual Release Smoke Detector Heat Detector Input Abort Low Air Alarm Supervisory Valve Tamper Low Air Supervisory High Air Supervisory Remote Reset Remote Silence Valve Reset Release Confirmation	All Settings Allowed Exception: Remote reset, remote silence and valve reset functions allowed when used with a keyed switch. Abort & Release Confirmation: Available in Agent Release Mode only. Abort on a water- based extinguishing system is not a UL Listed function.	Applies to built in IDCs and optional IDC-6
Outputs	Function	Y	General Purpose AMSECO Sync Gentex Sync System Sensor Sync Wheelock Sync Door Holder Output Door Holder Low AC Drop Release Supervisory Unused Alarm Indicating Trouble Normally Energized Release Pulse Reset Pulse First Alarm Second Alarm		Specifies use of Output circuit(s)
AUX PWR	Function	Y	Constant Output Resettable Output	All Settings Allowed	
E-Mail	Email Status Reports	N	Alarms Troubles Supervisory Test History & Status Reports		

Topic	Feature or Option	Permitted in UL (Y/N)	Possible Settings	Setting(s) Permitted in UL864 / S527	Comment	
			Mode 1- IRI: Abort must be activated before pre-discharge timer starts	Yes	Abort has no affect after second alarm is received by the panel. Requires cross zoning. Not repeatable. Does not abort manual release.	
			Mode 2-ULI: Stops Predischarge timer at 10 seconds while abort circuit is active.	Yes	If less than 10 seconds is remaining, the timer restores to 10 seconds. Deactivating Abort circuit starts timer at 10 seconds. Repeatable	
	Releasing Abort Type		Mode 3 - NYC One time operation that adds 90 seconds to time remaining on discharger when activated	No	Predischarge timer stops at time remaining plus 90 seconds while abort is active. This abort is not repeatable	
			Mode 4 -AHJ: Stops Predischarge timer at 30 seconds while abort circuit is active.	No	If less than 30 seconds is remaining, the timer restores to 30 seconds. Deactivating Abort circuit starts timer again. Repeatable.	
Releasing		Y	Mode - 5 PRA Post Release Abort. Used after the release circuit has activated.	No	De-energizes the release circuit, allowing the suppression agent to stop discharging without resetting the panel Abort circuit maybe on zone 2-7	
				Mode - 6 IRI & PRA Provides both the IRI abort mode and the PRA abort mode	No	Requires 2 abort inputs to operate. IRI abort shall be on Zone 1. PRA may be on Zone 2-7.
			Mode 7 - ULI & PRA Provides both the ULI abort mode and the PRA abort mode	No	Requires 2 abort inputs to operate. ULI abort shall be on Zone 1. PRA may be on Zone 2-7.	
			Mode 8 - NYC & PRA Provides both the NYC abort mode and the PRA abort mode	No	Requires 2 abort inputs to operate. NYC abort shall be on Zone 1. PRA may be on Zone 2-7.	
			Mode 9 - AHJ & PRA Provides both the AHJ abort mode and the PRA abort mode	No	Requires 2 abort inputs to operate. AHJ abort shall be on Zone 1. PRA may be on Zone 2-7.	
Releasing	Pre-Release timer	Y	0-60 Sec	Full range	Length of time of pre- release	

Topic	Feature or Option	Permitted in UL (Y/N)	Possible Settings	Setting(s) Permitted in UL864 / S527	Comment
Releasing	Pre-Release Timer - Manual Station	Y	0-30Seconds	Full Range	Length of time of pre- release
Releasing	Pre-Release Pattern	Y	Constant ANSI Temp 3 March Code Double Time	ANSI not allowed	NAC Output Pattern during pre-release
Releasing	Manual Release Abort Allowed	Y	Yes/No	All settings allowed	Specifies if manual Release can be aborted. Default is No
Releasing	Soak Timer	Y	0-30 Minutes (0.1 min increments) 0-300 Minutes (1 min increments)	All settings allowed	Length of Time the Release circuit is active post-release

Section 7: Communication Options

Connection Drawing for Central Station and Remote Station Operation of PFC-4410G3 to Listed Commercial Fire Off Premise Communicator

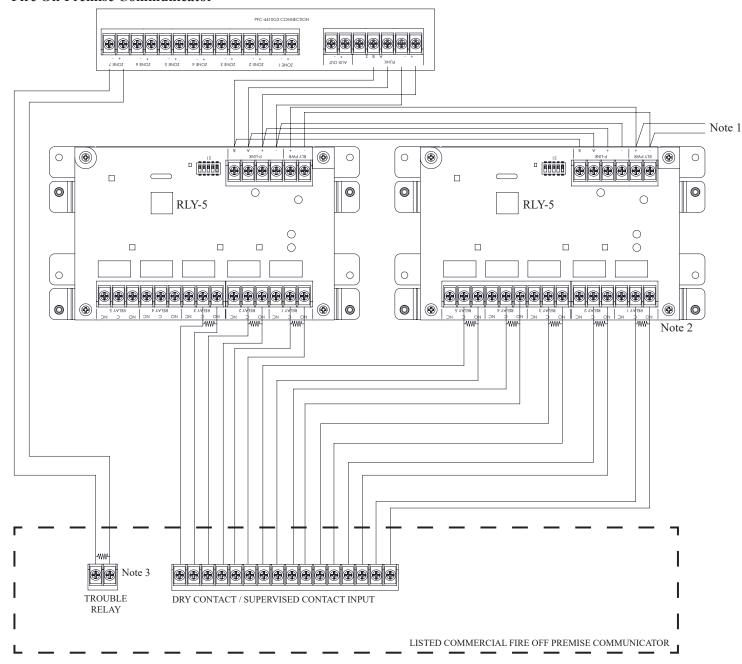

Note 1: Refer to Figure 30. for RLY-5 power wiring options

Note 2: EOLR as required by listed commercial fire off premise communicator

Note 3: Potter EOLR (3005013)

Installation Requirements

- Installation and programing of Listed commercial fire off premise communicator shall be in accordance with manufacturer documentation and applicable local codes and standards. Consult listed commercial fire off premise communicator documentation for communication pathways and transmitter/receiver compatibility
- Each RLY-5 relay shall be wired to a dry contact / supervised contact input of the listed commercial fire off premise communicator. Consult commercial fire off premise communicator installation documentation for wiring restrictions.
- Commercial fire off premise communicator shall have at least one trouble relay and shall be wired to a TROUBLE input on the PFC 4410G3. Relay may be programmed for primary power trouble transmission delay if required.
- · Commercial fire off premise communicator shall have an input for each alarm zone
- · Commercial fire off premise communicator shall have 2 additional inputs for trouble and supervisory
- Commercial fire off premise communicator shall have its own primary and secondary power sources or may be connected
 to PFC-4410G3's continuous Auxiliary Power if voltage and current ratings are compatible. Refer to Figure 10 for
 connections and voltage / current compatibility.

PFC-4410G3 Programing Requirements

- 1 relay shall be mapped to each alarm input zone.
- 1 relay shall be mapped to a trouble zone
- 1 relay shall be mapped to a SYS. Supervisory zone
- 1 Input shall be a TROUBLE type and shall be wired to commercial fire off premise communicator trouble contact

NOTICE

For US installations the commercial fire off premise communicator shall be Listed to 10th Edition UL864

For Canada installations the commercial fire off premise communicator shall be listed to CAN/ULC-S559

Section 8: Appendices

Appendix A: System Maintenance and Testing

A CAUTION

Testing the panel or associated devices may result in a discharge of the suppression system. All necessary precautions shall be taken to prevent an unwanted activation of the suppression system. Read, understand and follow all testing instructions as well as all cautions, warnings and notices associated with the suppression system and this panel before beginning any testing or servicing.

Acceptance Test

The control panel is required to be installed in accordance with local and state building codes and NFPA 72 (For Canada: ULC Standard CAN/ULC-S536). At the conclusion of each original installation or modification of this system, the control panel and related system is required to be inspected and tested in accordance with NFPA 72 (For Canada: ULC Standard CAN/ULC-S536) to verify compliance with the applicable standards.

Testing shall be conducted by personnel trained in the operation of this panel and the suppression system it is operating. Testing shall be conducted in in the presence of a representative of the Authority Having Jurisdiction (AHJ) and the building owners representative. Refer to NFPA 72 (National Fire Alarm Code), Inspection Testing and Maintenance chapter. For Canada refer to ULC Standard CAN/ULC-S536

Periodic Testing and Service

Periodic testing and maintenance of the control panel, all initiating points, all notification appliances and any other associated equipment is essential to ensure the system will operate as designed in emergency situations. Service and test the control panel according to the schedules and procedures outlined in the following documents:

- NFPA 72, Inspection, Testing and Maintenance chapter. (For Canada refer to ULC Standard CAN/ULC-S536)
- Service manuals and instructions for any and all peripheral points installed in the system. It is very important that any and all trouble conditions (or faults) be corrected immediately.

Operational Checks

During interim periods between formal testing and at regular intervals the control system should be subjected to the following operational performance checks. The Authority Having Jurisdiction (AHJ) should be consulted for requirements on frequency of system testing.

- Check that the green AC power LED is lit.
- Check that all amber LED's are off.
- Using the system menus, perform a Lamp Test function. Verify that all LED's operate.
- Before proceeding: (1) Disable the suppression system to prevent an unwanted discharge of the suppression system. (2) Notify the fire department and the central alarm receiving station if transmitting alarm status conditions; (3) Notify facility personnel of the test so that alarm-indicating points are disregarded during the test period; and (4) When necessary, bypass activation of alarm notification appliances and speakers (if installed) to prevent sounding of evacuation signals.
- Activate an input device (i.e., manual station, heat or smoke detector), and check that all notification appliances function.
- Notify Fire Department, central alarm receiving station and /or building personnel when finished with testing the system.
- The test of ground fault must be measured in below 10k ohms impedance.
- Make certain that the panel and all releasing devices are in a non-alarm/unactivated condition.
- Restore the suppression system back to service

Replacement and Testing Recommendations

The batteries are to be replaced at least once every four years or more frequently if specified by local AHJ and manufacturer recommendations. Batteries should be dated at the installation. Minimal replacement battery capacity displays on the control panel marking label. The batteries are required to be UL Recognized batteries with a date of manufacture permanently marked on the battery. The battery is to be tested at least annually and if the battery is showing signs of failure, it should be replaced. Immediately replace a damaged or leaking battery, and always replace batteries in pairs.

Proper Handling / First Aid Procedures

- In the event a battery leaks and contact is made with the Sulfuric Acid, immediately wash skin with water for at least 15 minutes. Water and household baking soda provides a good neutralizing solution for Sulfuric Acid.
- If Sulfuric Acid makes contact with eyes, flush with water for 15 minutes and seek immediate medical attention.
- Ensure proper handling of the battery to prevent short-circuits.
- Take care to avoid accidental shorting of the leads from uninsulated work surfaces, tools, jewelry and coins.
- If a battery is shorted, the battery and any connected equipment may be damaged. Additionally, a short may injure personnel.

Appendix B: Compatibility Table

This section provides a listing of all Output appliances, two-wire (2-wire) smoke detectors, and remote annunciator device compatibilities.

Table 11: Device Compatibilities				
Module/Device	Compatibilities			
Output Appliances	Refer to Potter document "5403592 Output Compatibility Document".			
Two-Wire (2-Wire) Smoke Detectors	Refer to Appendix C for a complete listing of 2-wire smoke detectors.			
P-Link	RA-4410G3 - LCD Remote Annunciator PSN-1000 – Intelligent Power Supply Expander LED-4410G3 Annunciator RLY-5 – Relay Board IDC-6 - Initiating Device Circuit Module			
Class A Expander	CA-4064 Class A Expander			
Releasing Device	Refer to Potter document 5403615 Releasing device capability			

Appendix C: Compatible Conventional Smoke Detectors & Bases Table Compatibility List ID A


Detector Model	Identifier	Base Model	Identifier
SYSTEM SENSOR (Brk) (Max. No		Dasc Model	Tuentinei
1400*	A	N/A	N/A
2400*	A	N/A	N/A
2400TH*	A	N/A	N/A
2W-B	A	N/A	N/A
C2W-BA (ULC Listed Only),	A	N/A	N/A
C2WT-BA (ULC Listed Only)	A	N/A	N/A
DETECTION SYSTEM (Max. No.			
DS250	A	MB2W/MB2WL	A
DS250TH	A	MB2W/MB2WL	A
ESL (Max. No. Of Detectors Per Zo			
611U	S10	601U	S00
611UD	S10	601U	S00
611UT	S10	601U	S00
612U	S10	601U	S00
612UD	S10	601U	S00
613U5	S10	601U	S00
611UD	S10	609U10	S00
612UD	S10	609U10	S00
425C	S10	N/A	N/A
425CT	S10	N/A	N/A
HOCHIKI (Max. No. Of Detectors	Per Zone Is 25)		_
SLR-24*	HD-3	HSC-221R	HB-71
		HSB-221	HB-54
		HSB-2211	HB-54
		NS6-221	
		NS4-221	
		NS6-220	HB-3
SLR-24H*	HD-3	HSC-221R	HB-71
	-	HSB-221	HB-54
		HSB-2211	HB-54
		NS6-221	
		NS4-221	
SIJ-24*	HD-3	HSC-221R	HB-71
		HSB-221	HB-54
		HSB-221N	HB-54
		NS6-221	
		NS4-221	
Detector Model	Identifier	Base Model	Identifier
HOCHIKI (Max. No. Of Detectors		1	
SOC-24V*	HD-3	HSB-221	HB-54
		NS6-221	HB-4
	•		

Detector Model	Identifier	Base Model	Identifier
		NS4-221	HB-4
		NS6-220	HB-3
SOC-24VN*	HD-3	HSB-221	HB-54
		NS6-221	HB-4
		NS4-221	HB-4
		NS6-22o	HB-3
SOE-24V	HD-3	NS4-100 and NS6-100	HB-55
30L-24 V	1110-3	NS4-220 and NS6-200	-
			HB-3
		NS4-221 and NS6-221	HB-4
		NS4-224 and NS6-224	HB-5
SOE-24H	HD-3	NS4-100 and NS6-100	HB-55
		NS4-220 and NS6-200	HB-3
		NS4-221 and NS6-221	HB-4
		NS4-224 and NS6-224	HB-5
FENWAL (Max. No. Of Det	tectors Per Zone Is 25)		
CPD-7051*	I51FE1	2-WIRE	FE51A
POTTER (Max. No. Of Det	ectors Per Zone Is 25)		•
PS-24*	HD-3 (HOCHIKI)	SB-46	HB-71(HOCHIKI)
			HB-54 (HOCHIKI)
		SB-93	HB-3 (HOCHIKI)
PS-24H	HD-3 (HOCHIKI)	SB-46	HB-71 (HOCHIKI)
			HB-54 (HOCHIKI)
IS-24*	HD-3 (HOCHIKI)	SB-46	HB-71 (HOCHIKI)
			HB-54 (HOCHIKI)
CPS-24	HD-3 (HOCHIKI)	SB-46	HB-4 (HOCHIKI)
		SB-93	HB-3 (HOCHIKI)
CPS-24N	HD-3 (HOCHIKI)	SB-46	HB-4 (HOCHIKI)
CDCD 24V	TID 3 (HOCHILL)	SB-93	HB-3 (HOCHIKI)
CPSD-24V	HD-3 (HOCHIKI)	SB-46 SB-93	HB-3 (HOCHIKI) HB-4 (HOCHIKI)
CPSHD-24H	HD-3 (HOCHIKI)	SB-46	HB-3 (HOCHIKI)
CI 5HD-24H	IID-3 (HOCHIKI)	SB-93	HB-4 (HOCHIKI)
PC-2P	PES	PC-6DB	PES PES
1021	122	PC-4DB	PES
PC-2H	PES	PC-6DB	PES
	1-2-	PC-4DB	PES
PC-2PH	PES	PC-6DB	PES
		PC-4DB	PES
PC-2PN	PES	PC-6DB	PES
		PC-4DB	PES
* UL and ULC Listed		ו ו ו ו ו ו	1

NOTE: If using a mix of System Sensor and other smoke detectors, a maximum of 20 detectors shall be permitted.

Appendix D: Installation Notes

Circuit board assembly is mounted in the cabinet using six (6) fasteners as shown in the illustration below.

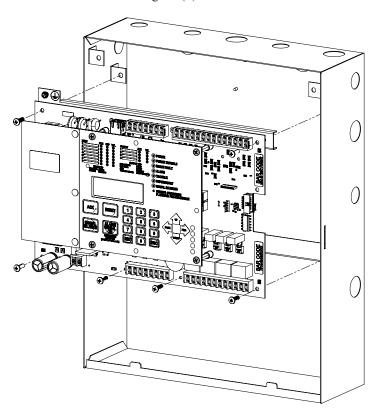



Operating Instructions for PFC-4410G3 Releasing Panel

Normal Standby User defined custom message, date and time and ALL SYSTEMS NORMAL displayed on LCD. Green power

LED on. All indicators other than power are off.

Alarm Condition Zone, or user specified description and "ALARM" is displayed with input type and input number on LCD. Red

ALARM LED flashes. Audible/Visual indicators on.

To Abort System (Only available on Agent Suppression Systems. See description of Abort at Abort station) If display reads "ALARM" or "Pre Release", immediately check the protected area. If no emergency condition is apparent, it is possible to stop the system (dependent on program type) by operating the abort switch. Pressing and holding the abort switch may prevent the pre-discharge timer from starting. This allows for a more thorough investigation of the area. Releasing the abort button will resume the countdown to discharge. If a zone programmed as MANUAL RELEASE has been activated, the abort may not be allowed to stop the system from activating.

To Silence Alarm Do not silence an alarm until it has been determined that an emergency condition does not exist. To silence, open

door and press SIGNAL SILENCE button.

To Reset Alarm After the condition that caused an alarm has been corrected, press the RESET button.

Do not press RESET until the alarm event has been fully investigated and an All-Clear signal has been

given by authorized personnel.

Trouble Condition Yellow System Trouble indicator flashes and buzzer is on. The display indicates the specific trouble condition

and circuit.

To Silence Trouble Open door, use up/down arrow keys to view and ACK button to acknowledge all trouble conditions. The panel will

not silence until all events have been acknowledged. For most trouble conditions the panel automatically restores to normal when the trouble condition has been corrected. Some trouble conditions require operation of the RESET button

for restoration.

Note: The problem must be corrected as soon as possible as this may make the system inoperative.

Contact your service organization if necessary.

Supervisory Condition The display will show the particular supervisory condition, "SUPERVISORY", "TAMPER", "LOW AIR",

"HIGH AIR", LOW AIR, and the circuit. The Amber supervisory LED flashes. The local buzzer will sound. Any

indicating appliance which has been described as "SUPERVISORY" will also sound.

To Silence Supervisory Open door, use up/down arrow keys to view and ACK button to acknowledge all supervisory conditions.

To Reset Supervisory After the supervisory condition has been restored, press the RESET button. This may vary depending on the

program used.

Alarm Signal Activation Press and hold ALARM SIGNAL ON for up to 5 seconds

Fuse Replacement Use only 4 Amp 250 VAC Time-Lag fuse. The fuse is for protection of the batteries and charging circuit.

Testing and Maintenance:

Test this system monthly or more frequently if required by the AHJ. Before testing notify the monitoring facility and/or building personnel if applicable. Take care not to activate the release circuit during testing. Test all initiating zones and notification circuits as described in the test procedure in the Potter PFC-4410G3 manual #5403751. Test in accordance with NFPA 72 Inspection, Testing and Maintenance chapter (For Canada: ULC Standard CAN/ULC-S536) and any local requirements. Test batteries in accordance with battery manufacturer instructions or with battery tester acceptable to the AHJ such as Stone Technologies model STC612A. Mark date of installation on batteries and replace every 4 years or sooner depending on test results or if panel indicates Low Battery. Contact the agency listed below for service.

For Service Call:		
Address:		
Telephone:		

Installer: Frame and place adjacent to control panel and at eye level.

A copy of the applicable Abort description on pg 6-99 of manual 5403571 should also be framed and hung at the panel and at every abort station.